

Pocket PC
TRITON

FCC RF Exposure Information

In August 1996 the Federal Communications Commission(FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of TRITON complies with the FCC guidelines and these international standards.

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage your TRITON, or result in violation of FCC regulations.

Do not use your TRITON with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

TRITON was tested for typical body-worn operations using the optional belt-clip / holster placed 1 inch(2.54cm) from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1 inch(2.54cm) must be maintained between the user's body and TRITON, including the antenna, whether extended or retracted. The use of third-party belt-clips / holsters with no metallic components that provide the minimum separation distance of 1 inch(2.54cm) can be used to satisfy FCC RF exposure requirements. The use of non-tested accessories or other body-worn operations may not comply with FCC RF exposure requirements and should be avoided. Contact your local dealer for optional accessory items.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Safety Information

Please read these simple guidelines before using your phone. Failure to comply with these guidelines may be dangerous or illegal.

Do not use a hand held phone whilst driving a vehicle; park the vehicle first.

Switch off your phone when in an aircraft. The use of cellular phones whilst airborne is illegal in some countries. It may disrupt the operation of the aircraft. Follow any regulations or rules regarding air travel.

Wireless phones can cause interference. Switch off your phone near medical equipment.

Do not use your mobile phone at a petrol station or near fuel, chemicals or in any area where blasting is in progress. Observe restrictions and follow all rules and regulations.

Use the phone only in a normal manner as instructed in this manual and do not handle the antenna unnecessarily.

Only qualified service personnel must install or repair equipment. Breaking the warranty seal and opening the casing of the phone will void your warranty.

Use only approved accessories and batteries. Do not connect to incompatible products.

Avoid any contact with water and any type of moisture.



Copyright



Cyberbank assumes no responsibility for any damage or loss resulting from the use of this manual. And also Cyberbank assumes no responsibility for any damage or loss caused by deletion of data as a result of malfunction, dead battery, or repairs. Be sure to make backup copies of all-important data on other media to protect against data loss.

The information contained in this document is provided “as is” and is subject to change without notice. Cyberbank makes no warranty of any kind with regard to this manual, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Cyberbank shall not be liable for any errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this manual or the examples herein.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, adapted, or translated to another language without the prior written consent of Cyberbank, except as allowed under the copyright laws.

The programs that control this product are copyrighted and all rights are reserved. Reproduction, adaptation, or translation of those programs without prior written permission of Cyberbank is also prohibited. Microsoft, ActiveSync, MSN, Outlook, Windows, Windows Media, Windows NT, and the Windows logo are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. Microsoft products are licensed to OEMs by Microsoft Licensing, Inc., a wholly owned subsidiary of Microsoft Corporation.

All other brand names and product names used in this document are trade names, service marks, trademarks, or registered trademarks of their respective owners.

CYBERBANK CORP.
3, 4, 5th Fl. Mirae Bldg., 545-7
Dogok-dong, Kangnam-gu, Seoul, Korea 135-857

Table of Contents

01 About Device

What's in the Box?	1-2
Hardware Features	1-3
Using the Stylus	1-7
Soft Reset & Hard Reset	1-8
Microsoft Pocket PC Software	1-9
Where to Find Information	1-10
Using Help on Your Device	1-10
Using This Manual	1-10

02 Getting Started

Complete the Welcome wizard	2-2
Using Today Screen	2-6
User Information	2-6
Volume	2-8
Time	2-8
Open the recently used program & start it	2-9
Open program directly you want from the Today screen	2-10
File Explorer	2-11
View the contents of SD card	2-11
Make or delete a new folder	2-12
Copy and paste	2-13
Powering up device	2-14
Battery	2-14
AC Power with Cradle	2-15
Turning device On and Off	2-16
Using the Hardware Buttons	2-17
Short-cut Keys	2-17
Phone Status LED	2-17
Charging Status LED	2-17
Navigation Pad	2-17
Infrared port of your device	2-18
Caring for your device	2-19
Protect the screen	2-19
Do not drop your device	2-19
Avoid radiated interference	2-19
Avoid high temperatures	2-19

03 Using Input Panel

Block Recognizer	3-2
Keyboard	3-3
Letter Recognizer	3-4
POZ Keypad	3-5
Transcriber	3-6

04 Connecting to Desktop

Install Microsoft ActiveSync and establish a partnership	4-2
Install Microsoft ActiveSync	4-2
Synchronizing Data	4-9
Copy, Paste and Transfer files	4-13
Full Backup & Restore using Backup/Restore of ActiveSync	4-15
Backup	4-15
Restore	4-16
How to install programs using ActiveSync	4-18
Using Setup.exe or Install.exe	4-18
Using cabinet (*.cab) file	4-18

05 Configuring Device

Settings	5-2
The Personal tab	5-2
The System tab	5-10
The Connections tab	5-22

06 Using the Internet & E-mail

Browsing the Web on your device	6-2
To start Pocket Internet Explorer	6-2
Mobile Favorites folder	6-3
To make Mobile Favorites	6-3
To make the Mobile Favorites button on the Tools menu of your desktop PC	6-4

To reduce the amount of memory caused by Mobile Favorites	6-4
To view Mobile Favorites offline	6-5
Sending and Receiving E-mail Messages	6-6
Synchronizing E-mail Messages	6-6
Using the Message List	6-8
Make a new message	6-9
Delete a message	6-11
Reply, Reply all or Forward a message	6-11
Connecting Directly to an E-mail Server	6-12
Customize a new mail service	6-12
To connect to an e-mail service	6-14
To synchronize your own local folder through ActiveSync	6-15
To download the attachments of message	6-16

07 Using the Mobile Phone

Phone Program	7-2
The Phone Display	7-2
Indicators in the Phone display	7-2
Using the NOTE button	7-3
Using the CALL button	7-4
Using the SEND button	7-5
Using the CLEAR button	7-5
Using the END button	7-5
Using the Vibrate mode	7-5
Using the Lock button	7-5
Placing a call	7-6
To receive a call	7-8
Make a speed dial using Contacts	7-9
Add a picture to contact	7-12
Using the Settings button	7-14
SMS(Short Message Service)	7-24
Add sender's phone number to your contacts	7-25
Reply to and Forward SMS	7-26
Compose a new message	7-27

08 Microsoft Pocket Outlook

Calendar: Scheduling Appointments and Meetings	8-2
To create an appointment	8-4

Table of Contents

Using the Summary Screen	8-5
Creating Meeting Request	8-6
To schedule a meeting	8-7
Contacts: Tracking Friends and Colleagues	8-8
To create a contact	8-10
Using the Summary screen	8-11
Tasks: Keeping a To-Do List	8-12
To create a task	8-13
Using the Summary screen	8-14
Notes: Capturing Thoughts and Ideas	8-15
To create a note	8-16

09 Microsoft Programs

Microsoft Pocket Word	9-2
To use Pocket Word	9-2
Tips for Working in Pocket Word	9-4
Microsoft Pocket Excel	9-5
To use Pocket Excel	9-5
Tips for Working in Pocket Excel	9-6
Microsoft Windows Media Player	9-7
To start Windows Media Player	9-7
Connect to Windowsmedia.com	9-8
Playlist	9-9
Working with Audio Files on a SD Card	9-10
Assign functions to hardware buttons	9-11
Terminal Services Client	9-12
Connecting and Using TSC	9-12
Pictures	9-14
Working with Images	9-15
Image Tools	9-16
Editing Images	9-18
Rotating Images	9-18
Cropping Images	9-19
Zooming into Images	9-20
Undoing Changes	9-20
Changing Images Brightness and Contrast	9-21
Viewing Images in a Slideshow	9-22
Configuring Pictures	9-23
MSN Messenger	9-24
To set up an account and sign in	9-24
Working with Contacts	9-26

Chatting with Contacts	9-27
Editing My Text Messages	9-28
Adding a Contact	9-28
Set Options	9-29

10 Applications

CB Camera	10-2
Save pictures	10-3
Shortcut to CB Album	10-4
Settings	10-4
CB Camcorder	10-5
Playback	10-6
Make a new album	10-6
Open video file	10-8
Options	10-8
CB Album	10-9
Open the Photo folder	10-10
Edit File	10-11
Make a new album	10-11
Open the existing album	10-12
Slideshow	10-13
Options	10-13
CB Scanner	10-14

11 Support & Service

Service	11-2
---------------	------

Appendix

A. Hardware Specifications	A-2
B. Warranty	B-2

01

About Device

Congratulations on purchasing our PDA (personal digital assistant) device, Triton, powered by Microsoft® Windows® for Pocket PC. Your device lets you keep your most important business and personal information current and close at hand. Your device includes Microsoft Pocket PC Software 2003 second edition, which includes the latest version of Microsoft Pocket Outlook®, so you can read and write e-mail while on the road and manage your appointments and contacts. You will find that your device is also the perfect companion to your desktop or notebook PC, allowing you to take vital business data and documents with you and easily upload updated information. The device offers you the highest quality in performance and power management as well as rich programs and utilities designed by cyberbank.

In this chapter, you will find

- What's in the Box?
- Hardware Features
- Using Stylus
- Soft Reset & Hard Reset
- Microsoft Pocket PC Software
- Where to Find Information
- Using Help on Your Device
- Using This Manual

What's in the Box?


Your device package includes the following items




Device & Stylus




Cradle

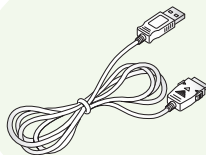


USB Cable

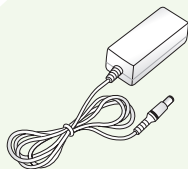


AC Adapter

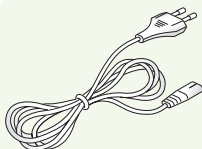


Power Cable

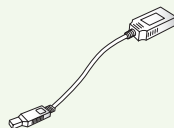


USB Converter Cable



Quick Start Guide



User's Manual



Pocket PC Companion CD




Additional Stylus Pen

Hardware Features

The illustrations below introduce you to the various buttons and other features of your device.

CB-0880NZ

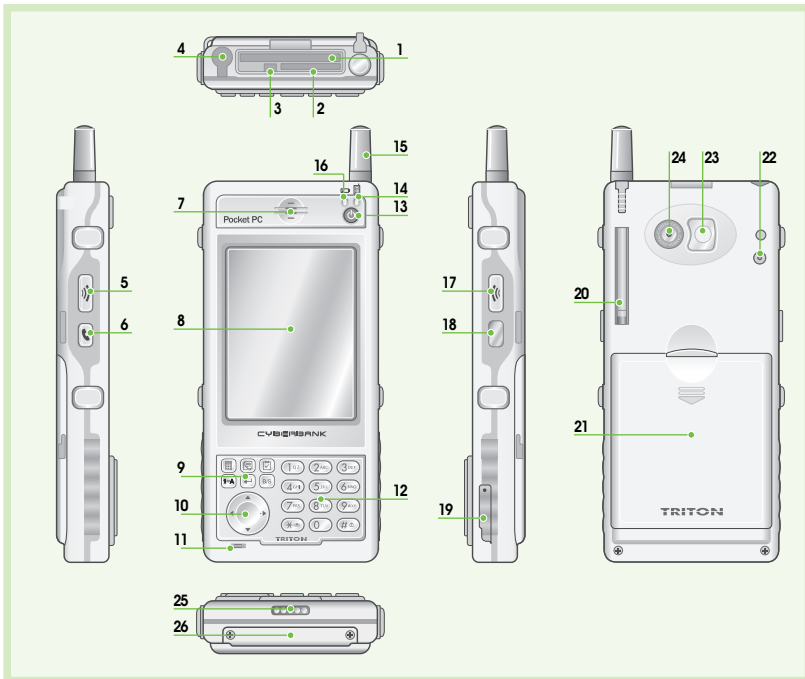


1. **CF(Compact Flash) card slot** : Insert an optional CF card to add memory.
2. **SD(Secure Digital) card slot** : Insert an optional SD card to add memory.
3. **USB Host slot** : With USB Converter Cable, connect USB devices such as USB keyboard, USB drive.
4. **Stereo headphone jack** : Connect a stereo headphone provided by Cyberbank.
5. **Camera button** : press this button to take a picture.
6. **Phone button** : Press to make your phone program appear on the screen.
7. **Speaker** : you can listen to music or set audible reminders and alerts and hear the voice while communicating on the mobile phone.
8. **Touch screen(TFT LCD)** : Tap on-screen controls or buttons to select menu commands or input text.
9. **Short-cut keys** : launch calculator, notes and tasks programs and also provide text mode key, enter key and back space key.

Hardware Features

10. **Navigation pad** : Press to navigate through documents or select on-screen buttons and controls.
11. **Microphone** : Speak to record voice notes and communicate on the mobile phone.
12. **Numeric keys** : enter numbers and alphabets.
13. **Power button** : Press to turn your device on and off.
14. **Phone status LED** : flashes when a phone-call comes in and displays the status of mobile phone. Notifies you of phone status including SMS.
15. **Antenna** : used for built-in cellular module.
16. **Charging status LED** : indicates power status while recharging. (Blue : fully charged, Red : charging)
17. **Camera button** : press this button to take a picture.
18. **Infrared(IrDA) port** : Beam files to other mobile devices.
19. **USB/Serial port** : connect to desktop PC through the USB cable.
20. **Stylus** : Use the stylus to navigate on the touch screen.
21. **Battery** : removable Lithium Ion battery(1800mAh).
22. **Reset button** : Use the stylus to press the reset switch and restart your device so that all your unsaved files will be deleted.
23. **Mirror** : show your face.
24. **Camera Lens** : Take a picture.
25. **Cradle port** : when your device is seated on cradle, it connects to cradle.
26. **PCMCIA expansion pack slot** : connect to the optional expansion pack.

CB-1880NZ

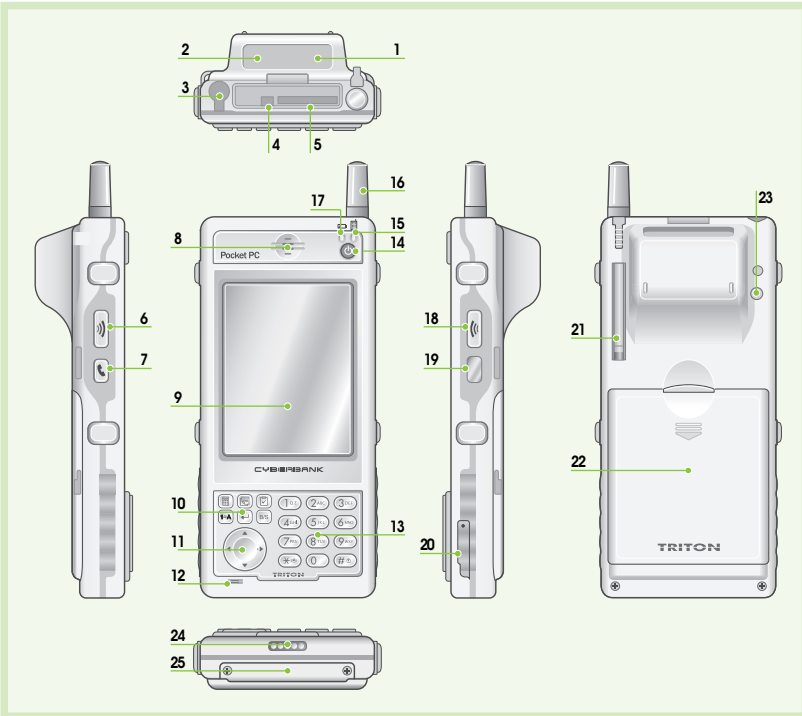

1. **Scanner Lens** : you can use it when scanning information.
2. **Camera Lens** : Take a picture.
3. **Stereo headphone jack** : Connect a stereo headphone provided by Cyberbank.
4. **USB Host slot** : With USB Converter Cable, connect USB devices such as USB keyboard, USB drive.
5. **SD(Secure Digital) card slot** : Insert an optional SD card to add memory.
6. **Scanner button** : press it when you scan information.
7. **Phone button** : Press to make your phone program appear on the screen.
8. **Speaker** : you can listen to music or set audible reminders and alerts and hear the voice while communicating on the mobile phone.
9. **Touch screen(TFT LCD)** : Tap on-screen controls or buttons to select menu commands or input text.
10. **Short-cut keys** : launch calculator, notes and tasks programs and also provide text mode key, enter key and back space key.

Hardware Features

11. **Navigation pad** : Press to navigate through documents or select on-screen buttons and controls.
12. **Microphone** : Speak to record voice notes and communicate on the mobile phone.
13. **Numeric keys** : enter numbers and alphabets.
14. **Power button** : Press to turn your device on and off.
15. **Phone status LED** : flashes when a phone-call comes in and displays the status of mobile phone. Notifies you of phone status including SMS.
16. **Antenna** : used for built-in cellular module.
17. **Charging status LED** : indicates power status while recharging. (Blue : fully charged, Red : charging)
18. **Scanner button** : press to scan information.
19. **Infrared(IrDA) port** : Beam files to other mobile devices.
20. **USB/Serial port** : connect to desktop PC through the USB cable.
21. **Stylus** : Use the stylus to navigate on the touch screen.
22. **Battery** : removable Lithium Ion battery(1800mAh).
23. **Reset button** : Use the stylus to press the reset switch and restart your device so that all your unsaved files will be deleted.
24. **Cradle port** : when your device is seated on cradle, it connects to cradle.
25. **PCMCIA expansion pack slot** : connect to the optional expansion pack.

Using the Stylus

Use the stylus to navigate and select objects on the screen.



Tap

Touch the screen once with the stylus to open items and select options.

Drag

Hold the stylus on the screen and drag across the screen to select text and images. Drag in a list to select multiple items.


Tap and Hold

Tap and hold the stylus on an item to see a list of actions available for that item. On the pop-up menu that appears, tap the action you want to perform.

Pop-up menu

With pop-up menus, you can quickly choose an action for an item. For example, you can use the pop-up menu in the contact list to quickly delete a contact, make a copy of a contact, or send an e-mail message to a contact. The actions in the pop-up menus vary from program to program.

To access a pop-up menu, tap and hold the stylus on the name of the item that you want. When the menu appears, lift the stylus, and tap the action you want. Or tap anywhere outside the menu to close the menu without performing an action.

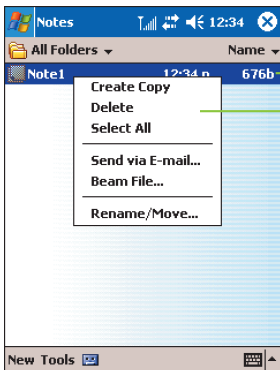

● Tap and hold to display the pop-up menu.

● Lift the stylus and tap the action you want. Select from the pop-up menu to copy, delete, paste, select all, rename, move.

Soft Reset & Hard Reset

When your device is running slow or improperly, use the stylus to press the Reset button (see the picture below). This is called "Soft Reset" in this manual. When you perform a Soft Reset, you will lose all unsaved data. Be sure to save all data in open documents or programs beforehand. This is similar to pressing the Reset button on your desktop.



Performing Hard Reset is to press the power button with a finger and press the reset button with a stylus at the same time. When you perform Hard Reset, you will lose all information that is stored in the RAM. Be sure to save all data using ActiveSync or the Backup utility before you perform Hard Reset.



+



Be sure to use the stylus provided by Cyberbank.

Microsoft Pocket PC Software

Your device already includes the full suite of software you need to function as a mobile professional. These programs are introduced below.

Detailed information can be found in later chapters.

The programs listed below are preinstalled in Flash ROM. These preinstalled programs will not be deleted if your device suffers a loss of power.



ActiveSync : Synchronize information between your device and desktop computer.



Calendar : Keep track of your appointments and create meeting requests.



Tasks : Keep track of your to-do list.



Contacts : Keep track of your friends and colleagues.



Notes : Create handwritten or typed notes, drawings, and recordings.



Inbox : Send and receive e-mail messages from your device.



Pocket Word : Create new documents or view and edit Word documents created on your desktop PC.



Pocket Excel : Create new workbooks or view and edit Excel workbooks created on your desktop PC.



Microsoft Pocket Internet Explorer : Browse the Web and view channels and subscription content.



MSN Messenger¹ : Send and receive instant messages with your MSN Messenger contacts.



Microsoft Windows Media Player for Pocket PC² : Play audio and video clips on your device. Windows Media Player™ lets you play songs and video files that have been recorded in the MP3 or WMA formats.

1. Requires an account with an Internet service provider.

2. Check the Microsoft Mobile Devices Web site for updates to Windows Media Player, including details on support for video file formats and streaming audio and video capabilities.

Where to Find Information

ActiveSync

The ActiveSync Troubleshooter on your desktop PC is on the ActiveSync File menu, click Connection Settings, and then click Help. You can install ActiveSync 3.7.1 from the provided Companion CD. In case that you lose the companion CD, download and install the latest ActiveSync version on www.microsoft.com/mobile/pocketpc/download on your desktop PC.

Using Help on Your Device

You can get help for specific programs and for Microsoft Pocket PC software by tapping Help on the Start menu. Help can be displayed for the active program. To display a menu of all Help files available on your device, tap the View menu, and then tap All Installed Help, or simply tap Help while the Today screen is active.

Using This Manual

This User's manual is designed to help you get started using your device quickly and easily. Although great care has been taken to ensure the accuracy of procedures and artwork, some of the screens displayed on your device may be a little different from the ones that appear in this User's manual.

This User's manual includes certain visual cues that will help you find the information you want easily.



Notes

Helpful information related to the topic.



Notice

This is important information that should be observed to prevent loss of data or damage to your device.

Getting Started 02

This chapter will help you start using your device. You will become familiar with the hardware and learn how to set up your device. When you finish this chapter, you will have all the information you need to begin working with your device..

This chapter includes step-by-step instructions to help you.

- Complete the Welcome Wizard
- Using Today Screen
- Using File Explorer
- Power up device
- Hardware buttons
- Caring for your device

Complete the Welcome wizard

Follow the steps in this section to start using your device for the first time or after performing hard-reset.




● Gently touch the screen with stylus. From now on, it is called "tap".

align screen

Tap the target firmly and accurately at each location on the screen. The target will continue to move until the screen is aligned.




● A target(+) will move in the order of "center -> upper left -> lower left -> lower right -> upper right" on your screen. Since calibrating the touch screen has a direct affect on the recognition ability of your touch screen, be sure to accurately tap the center of the target(+) with your stylus.

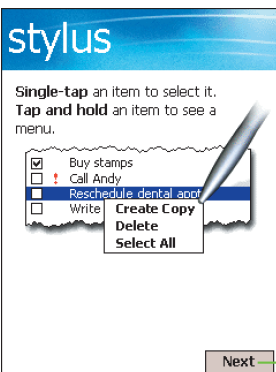

● This is the way of how to single-tap and tap and hold. Tap the Next button.

pop-up menus


Try it: **Tap and hold** the 9 A.M. dental appointment, and then tap **Cut** on the pop-up menu.



Tap and hold this location to have next window.

pop-up menus

Try it: **Tap and hold** the 9 A.M. dental appointment, and then tap **Cut** on the pop-up menu.

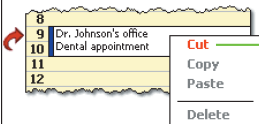

It is called "Pop-up" menu. Select Cut.



pop-up menus

Now **tap and hold** 11 A.M. and then tap **Paste** on the pop-up menu.



Tap and hold this location next to 11 to paste the cut contents. Then you will have the new pop-up menu.

Complete the Welcome wizard

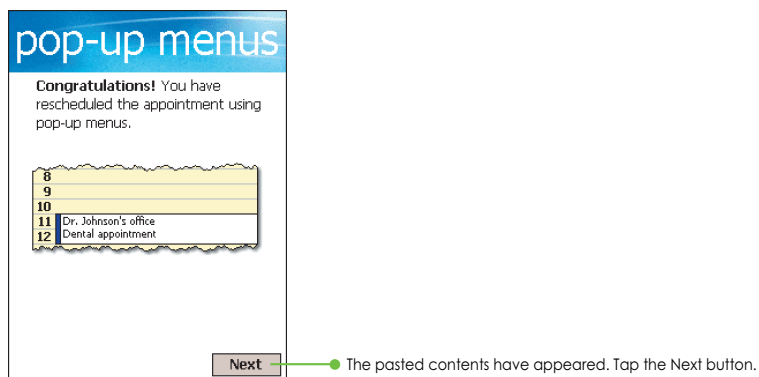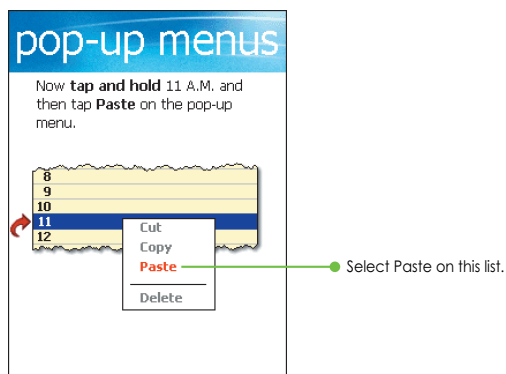




location

Select your time zone:

Time zone: GMT+12 New Zealand ▼

Next

● Select a time zone you stay from the drop-down list box.

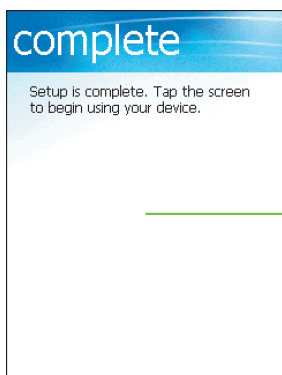


complete

Setup is complete. Tap the screen to begin using your device.

● Tap the screen to finish the Welcome wizard.

Using Today Screen

After finishing the Welcome wizard, put your device on the cradle connected to your desktop PC to automatically synchronize through Microsoft ActiveSync so that you have the next screen.

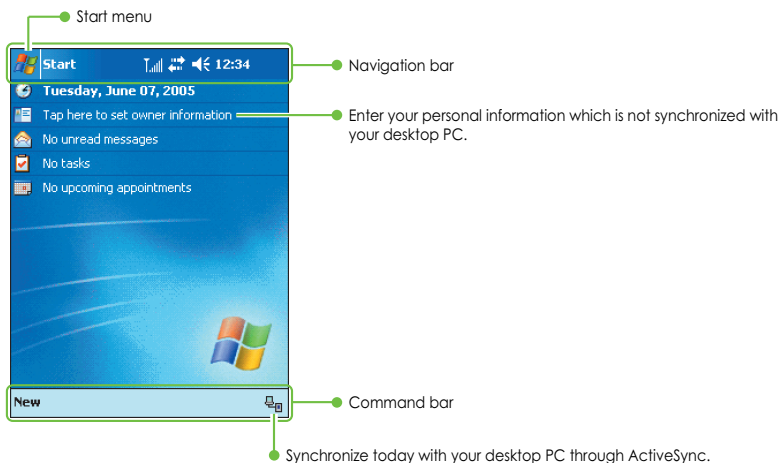


User Information

Now, you are ready to enter Owner information. Tap Owner information to have next screen.


The screenshot shows the 'Settings' screen with the 'Owner Information' form. The top status bar displays 'Settings', signal strength, battery level, and the time '12:34'. The form has the following fields: 'Name:', 'Company:', 'Address:', 'Telephone:', and 'E-mail:'. At the bottom, there are tabs for 'Identification', 'Notes', and 'Options', and a 'Back' button.

Tap any text box where you want to enter information to have input panel displayed. For more detailed information on input panel, see chapter 3.

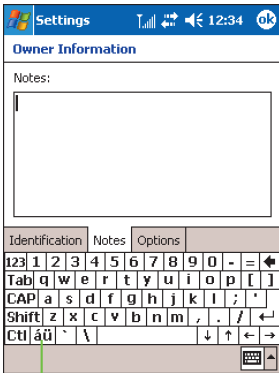

- Tap to have special characters display. Tap again to go back to normal.

For more personal information if needed, select the Options tab as shown below.

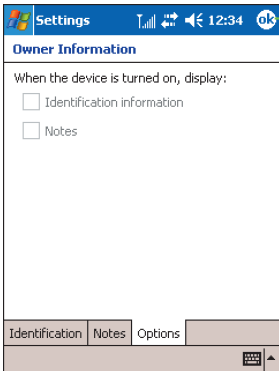


- Tap OK to save the current screen.

Using Today Screen

Volume

Tap the speaker icon on the navigation bar to control the volume as shown below.


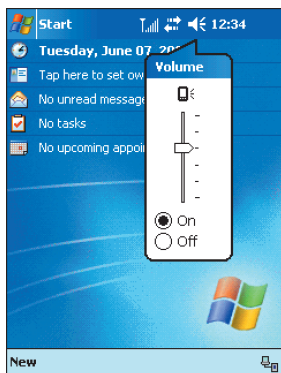


Time

Tap the time icon on the navigation bar to have the information on date, time and assignments appear as shown below.




Tap the date the navigation bar as shown below.

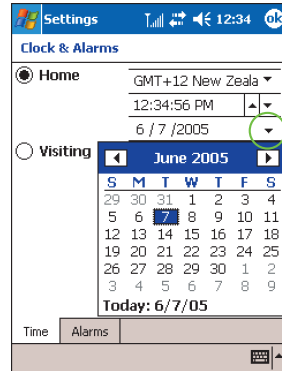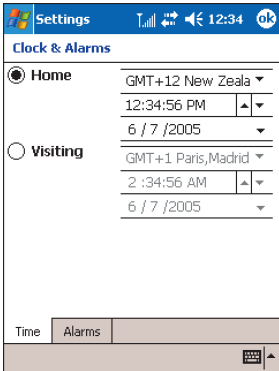

Open the recently used program & start it.

Tap the Start menu().

Select the program you want from the list on the Start menu or select the program from the recently used programs.

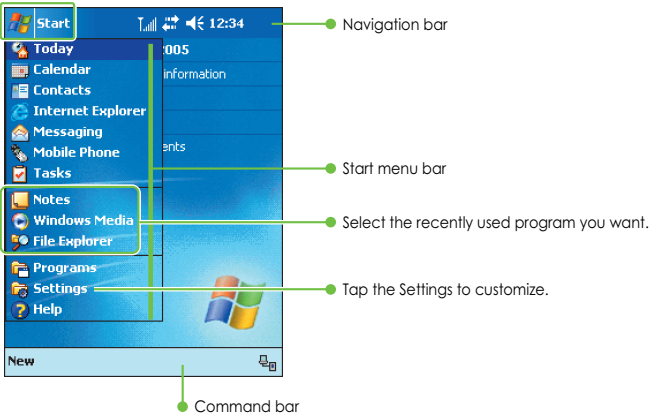

Using Today Screen



Open program directly you want from the Today screen

Tap "New" on the Command bar to open the frequently used program from the Today screen.



Select the program you want to open the corresponding program.


Tap Start() > Settings > Personal tab > Menu() icon to customize the Start menu and the New menu in advance.

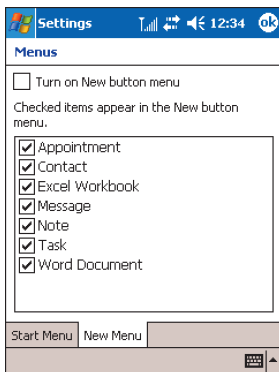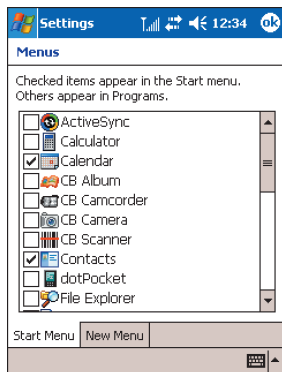

Tap OK to save these settings.


File Explorer

This File Explorer of your device is similar to Window Explorer of desktop PC. Select the Start menu > Programs > File Explorer.

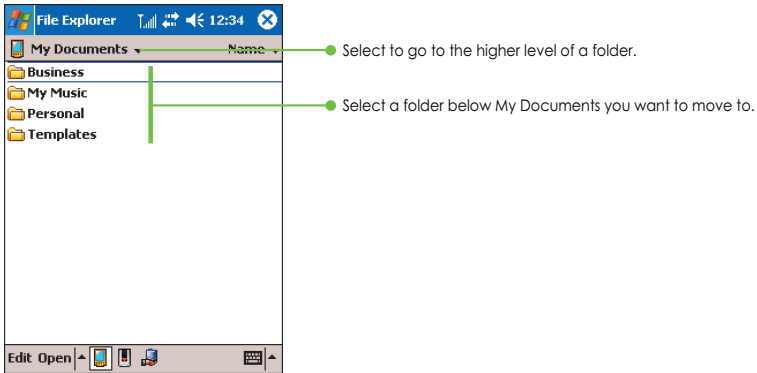

View the contents of SD card


Insert SD cards into the SD card slot so that SDMMC Disk folder appears. Tap this folder to view the contents of SD card.

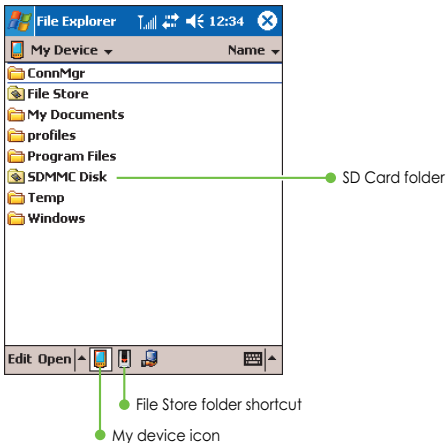

File Explorer


Make or delete a new folder

Select the new folder on the Edit menu of the Command bar.

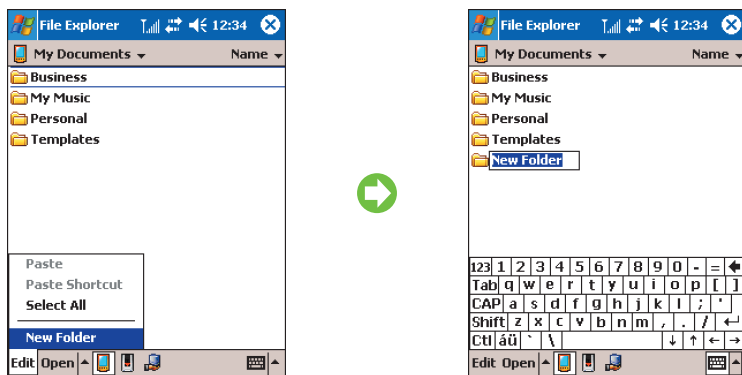


Enter the new folder name.

Select "Delete" on the pop-up menu you tap and hold on this folder to delete this folder.

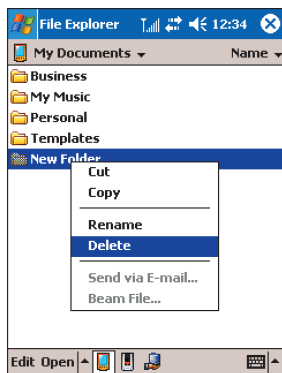


Copy and Paste

Tap and hold the file you cut, copy, rename and delete to have Pop-up menu appear. Also tap and hold out of files or folders to have a little different pop-up menu that includes new folder. Now we show you an example of process where we copy a file from a folder and paste it to another folder.

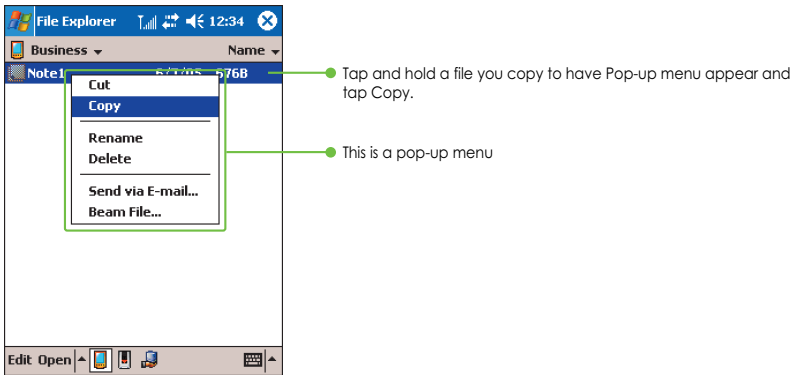

Tap and hold a file you copy to have Pop-up menu appear and tap Copy. Select My Device you want to paste the copied file to. On the My Device folder, tap and hold the empty space to have pop-up menu that includes Paste.

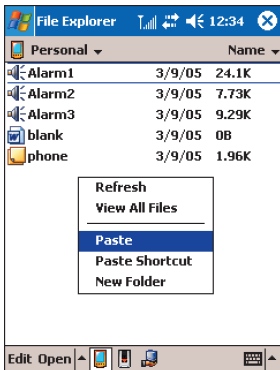

Tap OK to save these settings.

Powering up device

Because the data and files you save on your device are stored in RAM, maintaining a continuous power supply to the device at all times is extremely important. If your device runs out of power, all information stored in RAM is lost. The preinstalled programs will not be deleted even if your device suffers a loss of power; however, any custom settings and programs you have added will be erased.


To safeguard data against loss in the event of power failure, you can save or back up files to NAND Flash ROM(called "File Store" here). For more information, see "Backing Up and Restoring Data" in chapter 4.

Your device receives power from two sources: the main battery and the ac power adapter. The following sections describe these sources.

Battery

The lithium-ion battery pack provides power to your device while it is not connected to ac power. Actual battery life will vary depending on how you use your device. Some functions, such as listening to music, using the backlight, or operating SD cards, use considerable power and may reduce this time significantly.

The battery is charged whenever your device is connected to an ac power source-either the AC adapter or the USB cradle. Usually, it may take up to 3 hours to charge your battery fully depending on the battery status. Connect your device to AC power or place it in the cradle when it is not in use, to ensure that the battery is fully charged when you need to take it with you. When the battery is fully charged, charging stops automatically; the battery will not overcharge even if it is left upon being connected to AC power.

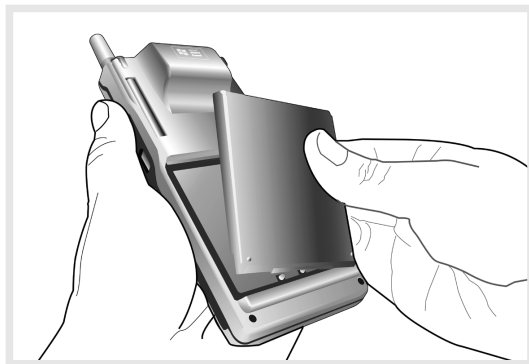


When the charging level of battery is low, a low battery warning is displayed. If you see a low battery warning message, connect to AC power and charge the battery immediately to prevent possible data loss.

AC Power with Cradle

To avoid running out of battery power, you can operate your device on AC power using the AC adapter. The AC adapter accepts 100V to 240V, enabling you to connect to AC power anywhere in the world. When you travel, you may need adapters to accommodate different electrical outlets, but the AC adapter will safely convert AC voltage to the DC voltage required by your device.

While your device is connected to AC power, the battery is charged automatically. The color of the LED indicates the status of the battery:

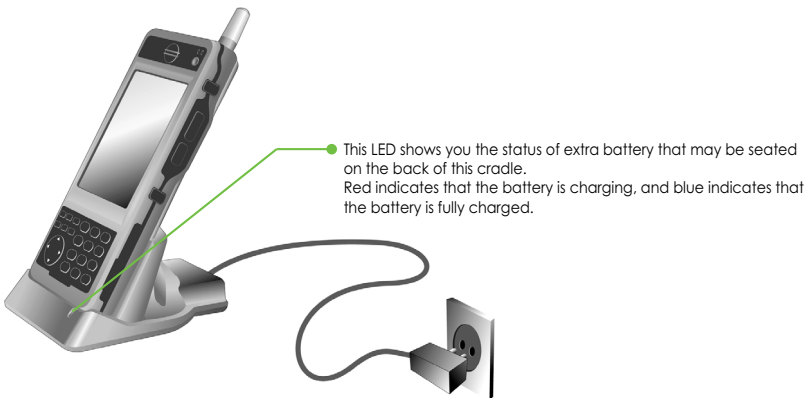

Red indicates that the battery is charging, and blue indicates that the battery is fully charged.

Using the USB cradle, you can charge and synchronize your device at the same time even though the charging circuit is not included on your cradle.

Keep your device in the cradle when you are not carrying it with you, so it is always charged, synchronized, and ready to go.

Turn off your device or remove it from the cradle before you shut down your desktop PC.



Before you connect, be sure of the following:

- your desktop PC is on,
- you have installed ActiveSync on your desktop PC, and
- ActiveSync is configured to allow a USB connection.

When you remove your device from the cradle, hold the cradle with one hand, and gently lift your device with the other to avoid putting stress on the connectors.

Powering up device

Turning device On and Off

One of the most convenient features of device is “instant on.” With instant on, there is no waiting for your device to start up or shut down; you can start working immediately by pressing the power button.

When you are finished working, turn off your device by pressing the power button. By default, your device will turn off automatically after 5 minute of inactivity if it is not connected to an AC power source. You can use the Power control panel to change these settings.



You can use the Power control panel to change these settings. On the **Start** menu, tap **Settings**, tap the **System** tab, and then tap the Power icon.

Using the Hardware Buttons

Short-cut Keys

-  : Calculator
-  : Notes
-  : Tasks
-  : Tab
-  : Space
-  : Backspace

Phone Status LED

- Phone service area: Green flashing with a period of 20 seconds.
- No Phone service area: Red on.
- When sending call signal, your call is connected: Blue on.
- When receiving call signal, bell sound rings: Blue on.
- Receiving SMS message : Blue on
- You have the unread SMS message: Blue flashing.
- Using wireless internet: Blue on when transferring data, green on when receiving data.

Charging Status LED

- Blue indicates that the battery is fully charged.
- Red indicates that the battery is charging.
- Flashing Red indicates that the temperature of battery is higher than the standard temperature. It is recommended to seat your device on the cradle again.

Navigation Pad

Use the Navigation Pad to scroll through documents or to highlight items in a list.

Using the Hardware Buttons

Infrared port of your device

For infrared communication, there must not be any obstruction between Notebook PC and your device, and the distance between the two IR ports must be less than 20 cm. Also, you must align the IR windows of the two devices so that they are aimed directly at one another as shown below:



The infrared port on your device provides a convenient way to connect to an IrDA-equipped PC without a cable or cradle. Many notebook computers have built-in infrared ports; however, you may need to install and configure an infrared port on a desktop PC. To install the port, follow the manufacturers' instructions.



Windows 95 and Windows NT® do not support USB or infrared connectivity.

Caring for Your device

When treated properly, your device will be a reliable personal digital assistant. Follow these tips to ensure long and trouble-free use of your device:

Protect the screen

Pressing too hard on the touch screen may damage the screen. Use the stylus to tap the device screen to avoid scratches or damage to the screen. To clean the screen, use a small amount of commercial glass cleaner sprayed on a soft cloth. Avoid spraying the screen directly.

Be sure to turn off your device before cleaning the touch screen. If your device is set to power on when you tap the screen, change this setting before you clean the touch screen.

Do not drop your device

Dropping your device can cause damage to delicate components such as the screen. Accidental damage is not covered under the warranty.

Avoid radiated interference

Radiated interference from other electronic equipment may affect the appearance of the display of your device. Removing the source of the interference will return the display to normal.

Avoid high temperatures

Your device is designed to operate at temperatures between -20 to 50°C (-4 to 122°F). Using the device at temperatures outside this range may damage the unit or result in loss of data. Be especially careful not to leave your device in direct sunlight or in a car where temperatures can rise to harmful levels.


A large, light green rectangular area with rounded corners, serving as a background for the memo content. It contains a series of horizontal dotted lines for writing, with a vertical margin line on the left side. The area is partially obscured by a series of overlapping, light green rectangular blocks of varying sizes, creating a stepped effect on the left side of the page.

This chapter offers recommendations for the documentation you should use text input effectively.


In this chapter you have several options for entering new information

- Block Recognizer
- Keyboard
- Letter Recognizer
- POZ Keypad
- Transcriber

To show or hide the Input panel, tap the Input panel button. Tap the arrow next to the Input Panel button to see your choice.

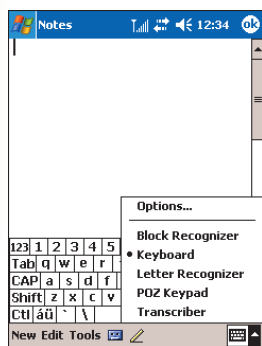

Block Recognizer

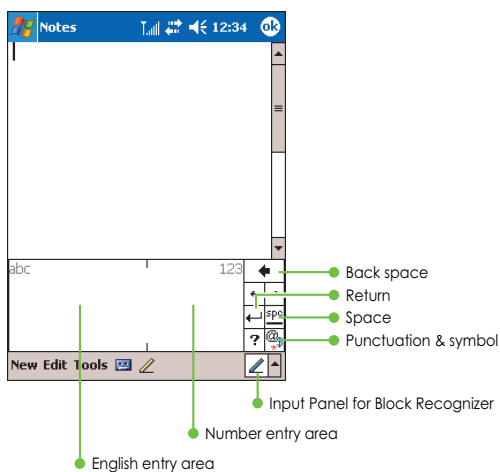


Using Block Recognizer

1. Tap the arrow next to the Input panel button, and then tap Block Recognizer.
2. Write a letter in the box.

When you write a letter, it is converted to typed text that appears on the screen. For specific instructions on using Block Recognizer, open Block Recognizer, and then tap the question mark next to the writing area.


Keyboard

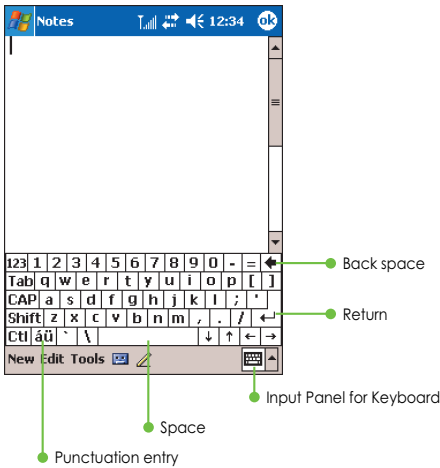

To type with the soft keyboard

1. Tap the arrow next to the Input panel button, and then tap Keyboard.
2. On the keyboard that is displayed, tap the keys with your stylus.

Letter Recognizer

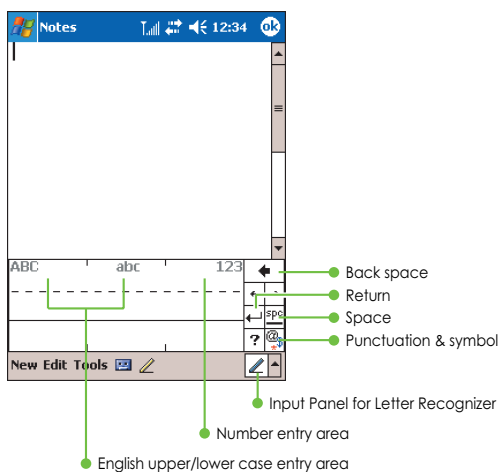

Using Block Recognizer

1. Tap the arrow next to the Input panel button, and then tap Block Recognizer.
2. Write a letter in the box.

When you write a letter, it is converted to typed text that appears on the screen. For specific instructions on using Block Recognizer, open Block Recognizer, and then tap the question mark next to the writing area.

POZ Keypad

When you are in text input mode, press  to change to POZ Keypad mode.

POZ Keypad has four text-entry modes. You can see which mode is active by looking at the bottom of your screen. If you want to switch one mode to the next, press .


You will see one of icons as shown below:



 : lowercase

 : uppercase




 : numeric

 : special characters : when you are in special characters mode, a page of special characters appears on the bottom of screen. If you need to move to the previous or next page of special characters, press the right or left side of . If you see the special character you want, press the corresponding number, and the special character is added. Special characters are shown below:

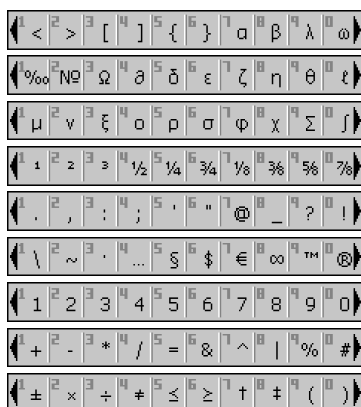

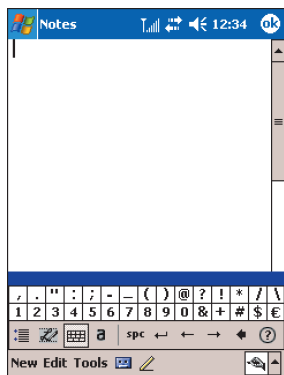


Tap  to have the next window appear.

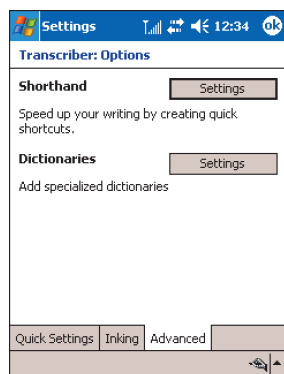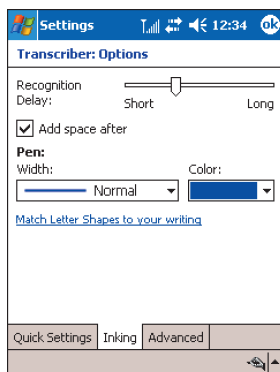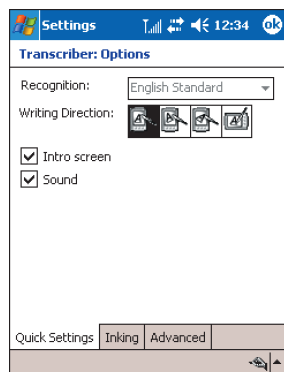

Transcriber

Tap  to refer to how to make strokes.

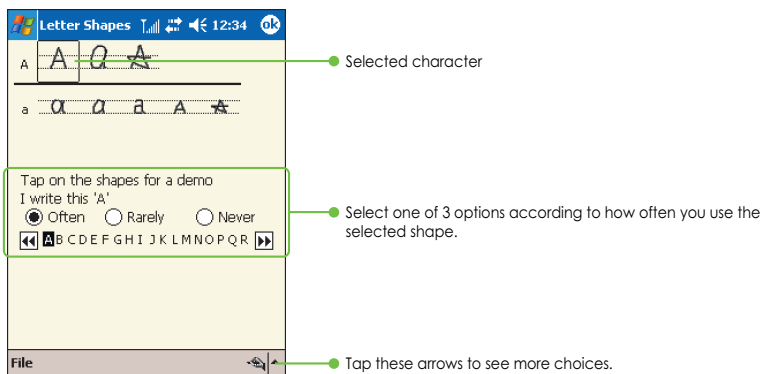

To type with Transcriber

1. Tap the arrow next to the Input panel button, and then tap Transcriber.
2. Write anywhere on the screen.

For specific instructions on using Transcriber, open Transcriber and then tap the question mark in the lower-right corner of the screen.

To get the most from your device, you will want to connect to your desktop or notebook PC. This chapter describes how to establish the connection between your device and your desktop PC, and how to synchronize and transfer files between your device and your desktop (or any PC that has Microsoft ActiveSync installed).

	Pocket PC 2002	Pocket PC 2003
ActiveSync 3.7.1	O	O
ActiveSync 3.6	O	X
ActiveSync 3.5	O	X

Because Pocket PC 2003 version is installed on your device, you have to install ActiveSync 3.7.1 version or later instead of ActiveSync 3.6 or ActiveSync 3.5.

In this chapter, you will learn the followings

- Install Microsoft ActiveSync and establish a partnership
- Full Backup & Restore using Backup/Restore of ActiveSync
- How to install programs using ActiveSync

Install Microsoft ActiveSync and establish a partnership

Install Microsoft ActiveSync



System Requirements

- Windows 2000 recommended.
- Microsoft Outlook 2002 recommended.
- Office 2000 recommended.
- Microsoft Internet 4.01 SP1 or later recommended.
- 12 ~ 65 MB free hard disk drive
- 9 or 25-pin communication port, IrDA port or USB(Universal Serial Bus) port
- CD-ROM drive
- VGA graphic card or 256 color video graphic adapter
- Keyboard & Mouse

You can download ActiveSync 3.7.1 or later from followings

- Companion CD
- Cyberbank web site www.cb.co.kr
- Microsoft web site www.microsoft.com/downloads/

ActiveSync 3.7.1 file is named as Setup.exe on companion CD, and ActiveSync 3.7.1 file is named as MSASYNC.EXE when it is downloaded from web site.



This is an explanation on how to install ActiveSync 3.7.1, based on Windows 2000 Professional, so you may have a little bit different screen on the different OS versions from below.

To use your device, cradle your device and connect USB cable and the power cable with your desktop computer physically.



Insert the Companion CD into CD-ROM drive of your desktop computer. From your initial screen of Companion CD, click the Start button > Install Microsoft ActiveSync 3.7.1.




On desktop computer, without Autorun enabled, Microsoft ActiveSync setup can be launched by using the run command. Click on Start, and then Run. In the text dialog box, enter the path for the setup file. Typically, you would type X:\Setup.exe, where X is the letter for your CD-ROM drive.

To get the most from your device, you have to connect to your desktop or notebook PC. Microsoft ActiveSync enables you to synchronize the information on your desktop PC with the information on your device. In addition, you can back up data from your device to your desktop PC and restore this data to your device, and copy files between your device and desktop PC. Before you begin synchronization, install ActiveSync on your desktop PC from the Companion CD or download the latest version from Microsoft web site www.microsoft.com. By the way, ActiveSync is already installed on your device.

First of all, insert Companion CD into the CD-ROM of your desktop PC and the CD-ROM will begin automatically. Then, select Start and select Install ActiveSync 3.7.1. Just follow the Installation Wizard that automatically begins to install ActiveSync 3.7.1.


After installation is completed, the ActiveSync Setup Wizard helps you connect your device to your desktop PC, establish a partnership so you can synchronize information between your device and your desktop computer, and customize your synchronization settings.

This is an explanation on how to install ActiveSync 3.7.1, based on Windows 2000 Professional, so you may have a little bit different screen on the different OS versions from below.

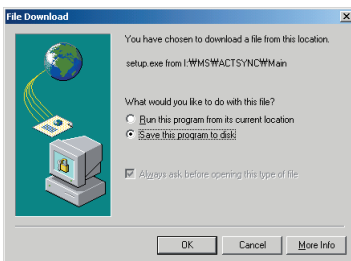


Install Microsoft ActiveSync and establish a partnership


Select Run this program from its current location to install without saving.

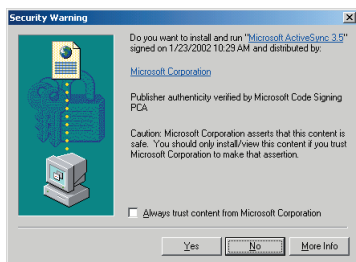


Click Yes to move to the next screen.

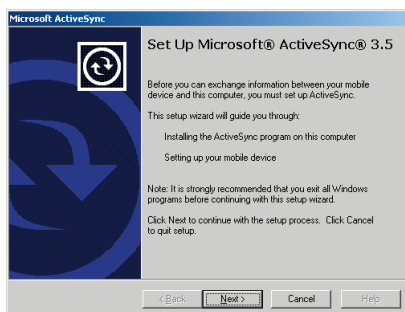

Click Next.

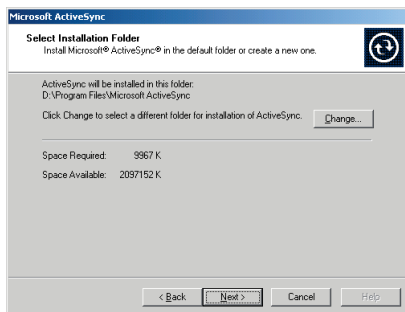


Click Next.




When the process becomes 100%, automatically it will go to the next screen.

Connect USB port to desktop PC and the power cable to cradle. Then seat your device

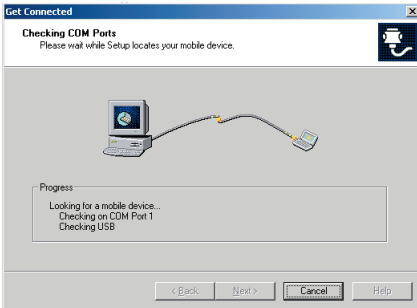

A wizard of finding a new hardware will begin automatically as below.

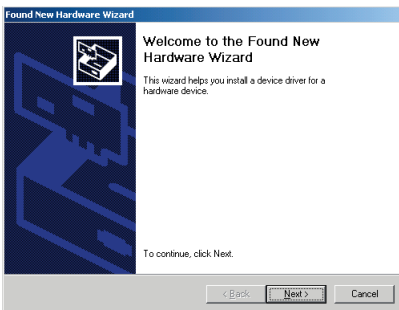


Click Next.




Install Microsoft ActiveSync and establish a partnership


Click Next.

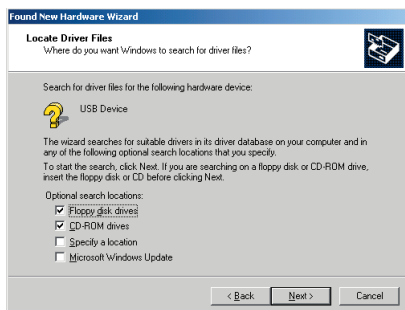


Select CD-ROM drive and click Next.

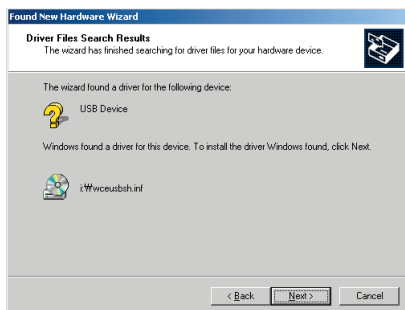

Click Next.

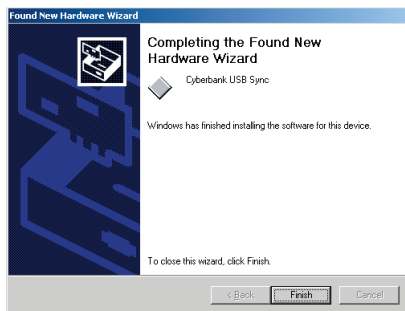

Click Finish and automatically the synchronization process will begin. And then the following processes will appear on your desktop PC.

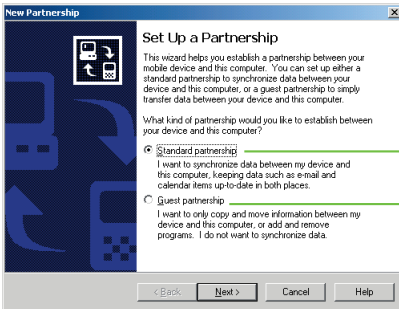


Now, you are ready to synchronize between your device and desktop PC, it may take a little long time to finish synchronization.

When it is in a state of Guest, find files you want by pressing the Explore button of toolbar.


Instead of synchronizing, you may set up your device as guest. Even though a guest, you may transfer files and data between your device and your desktop PC.

When you perform hard reset or re-establish a new partnership after deleting the existing partnership, you can select one of the options.

A desktop PC can establish partnerships with several devices while one device can establish partnerships with up to two desktop PCs. However, you cannot synchronize two devices with one desktop PC at the same time.

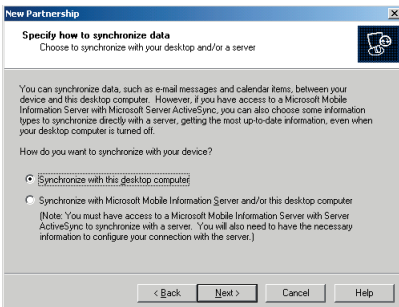


Click Next.

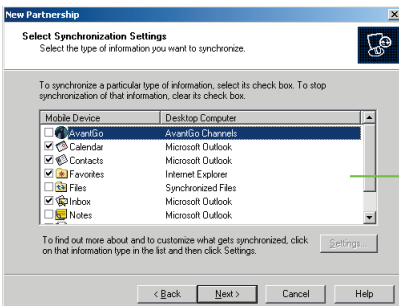

Select any items you want to synchronize and otherwise, deselect the others.


Install Microsoft ActiveSync and establish a partnership

Click Next.

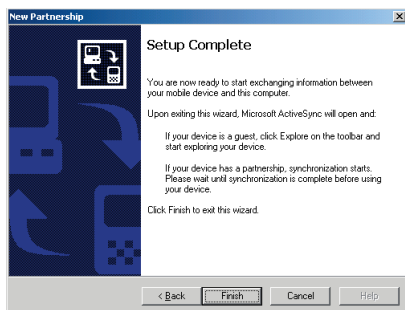

Click Finish. Now, you are ready to establish a new partnership.


You will have the Microsoft ActiveSync screen as shown below.

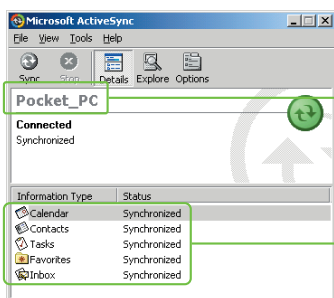

● This is the partnership name that is established with your desktop PC through ActiveSync.


● These are the items you have selected for synchronizing with desktop PC.

When you have some difficulties synchronizing your device with your desktop PC, click the Connection Settings on the File menu to have the Connection Settings screen displayed as below.

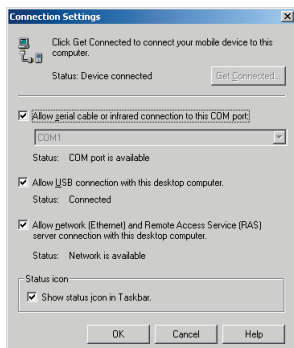


Synchronizing Data

Synchronization compares the data on your device with your desktop PC and updates both computers with the most recent information. For example, you can synchronize Microsoft Word and Microsoft Excel files between your device and desktop PC. Your files are automatically converted to the correct format. And you can synchronize e-mail messages in Inbox on your device with e-mail messages in Microsoft Outlook on your desktop PC. And you can keep your Pocket Outlook Contacts, Calendar, and Tasks databases up-to-dated by synchronizing your device with Microsoft Outlook data on your desktop PC. Use the ActiveSync options to select which information should be synchronized and to control how much data is synchronized. By default, ActiveSync does not automatically synchronize all types of information.

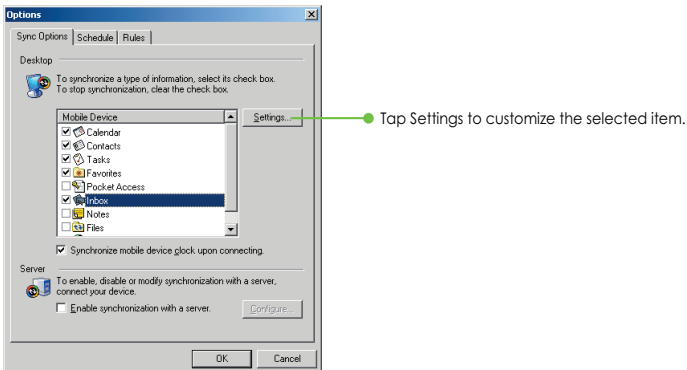


Select Calendar and click the Settings button.

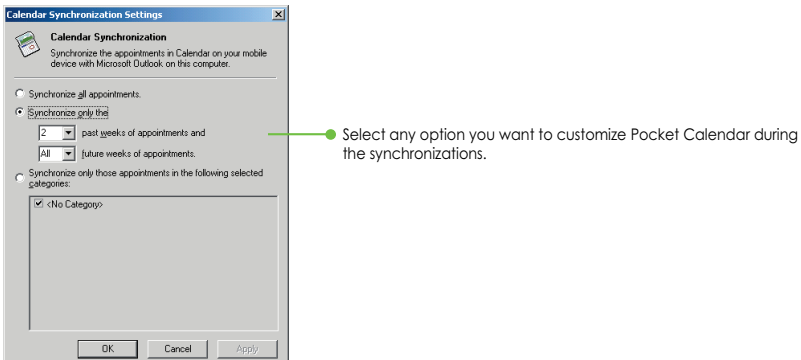


Install Microsoft ActiveSync and establish a partnership

Select Contacts and click the Settings button.

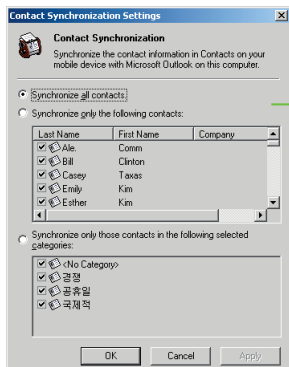


Select any option you want to customize Pocket Contacts during the synchronizations.

Select Tasks and click the Settings button.

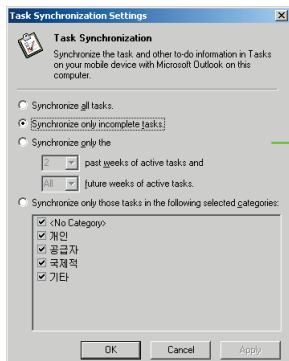


Select any option you want to customize Pocket Tasks during the synchronizations.

Select Favorites and click the Settings button.

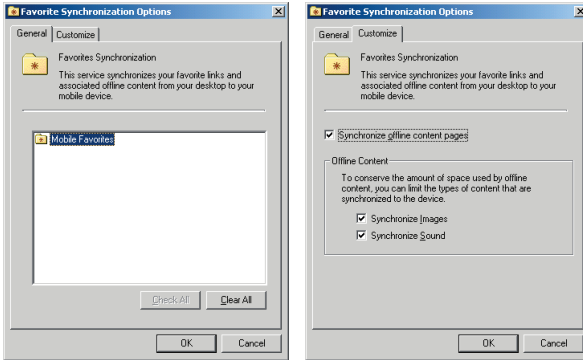


Select Files and click the Settings button.

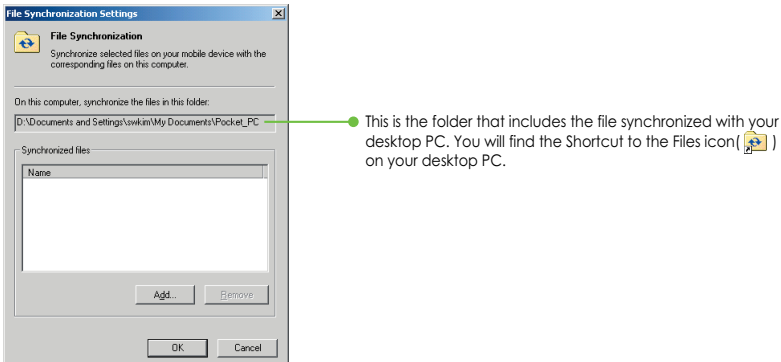


Install Microsoft ActiveSync and establish a partnership

Select Inbox and click the Settings button.

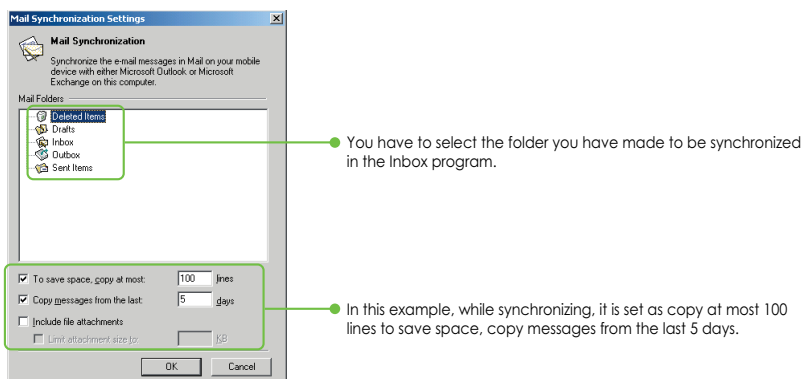


After you customized ActiveSync and completed the first synchronization, you can control when synchronization occurs by selecting a synchronization mode.

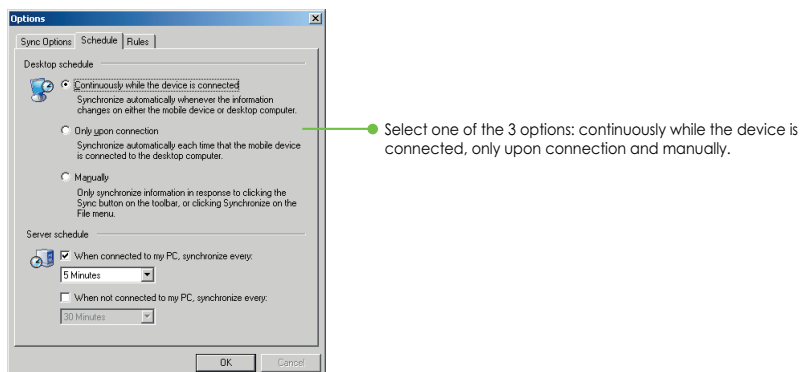

Copy, Paste and transfer files


Select the file(s) you want to copy and select Copy on the Edit menu or select Copy on the pop-up menu. For pasting file(s), select the Explore button on the Microsoft ActiveSync screen of your desktop PC to have the Mobile Device screen appear as below :

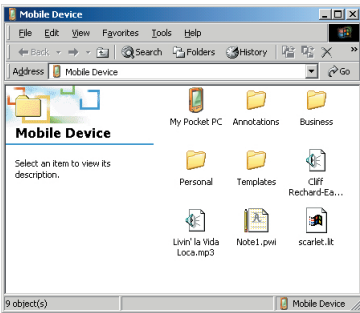

First, select the folder you want to paste to and select Paste on the Edit menu or select Paste on the pop-up menu.

However, when you transfer file(s) between desktop PC and your device, files created on your desktop PC may automatically need to be converted before you can use them on your device, and also files created on your device may automatically need to be converted before you can use them on your desktop PC. However, when you work with software such as ClearVue Presentations or ClearVue Image, files should not be converted to the different format. In other words, those software use the format identical to the corresponding software of your desktop PC. That's why we need to change the settings of converting file format when files don't need to be converted before you can use them on your device.


You can change the settings as follows :

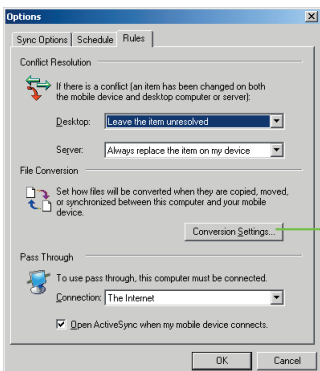

Tap the Conversion Settings to change the options for conversion between desktop PC and your device while copying, pasting and synchronizing.

Install Microsoft ActiveSync and establish a partnership

Select Conversion Settings.

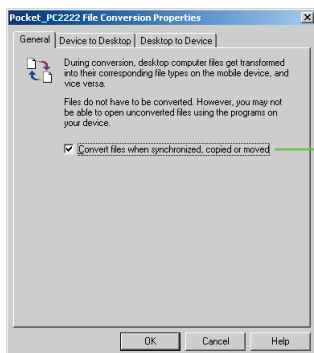

Deselect this option box not to change the file format.

Full Backup & Restore using Backup/Restore of ActiveSync

You can back up files, database, PIM data and programs installed in RAM to your desktop PC using Microsoft ActiveSync, and restore them when needed.


Backup can either be performed automatically when your device is connected to your desktop PC, or manually whenever needed. Also, you can back up updated or new data only or choose to back up all data.




Automatic backup is only possible when a Partnership is established with a desktop PC. Only a manual backup is possible when the partnership is established as Guest. For more information on Backup/Restoring to and from a desktop PC, see Microsoft ActiveSync Help.

Backup

1. Connect your device to desktop PC.
2. Tap **Backup/Restore** on the **Tools** menu of the ActiveSync screen.

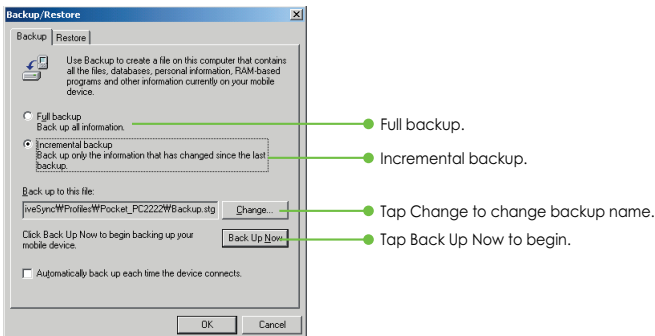

3. Select "Full backup" or "Incremental backup" according to your needs.
4. You may need the backup file name and the folder when restoring your backup file.
5. Tap the Back Up Now button to begin.

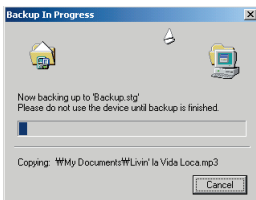

Do not remove your device from the cradle or disconnect the USB cable during backup.

Full Backup & Restore using Backup/Restore of ActiveSync

Restore




As newly installed programs or new files created on your device since your last backup will be lost after restoring, you should move them to your desktop PC or to File Store (NAND Flash memory) before you restore data.

1. Connect your device to desktop PC.
2. Close all programs running on your device.
3. Establish a partnership as Guest.




Select this options box to set up your device as guest.


4. Tap **Backup/Restore** on the **Tools** menu of the ActiveSync screen, and select the Restore tab.

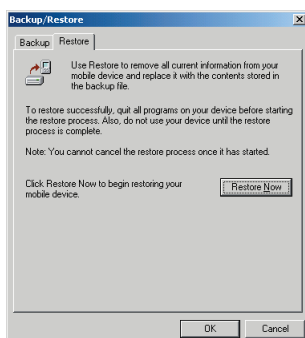


5. Tap the Restore Now button.

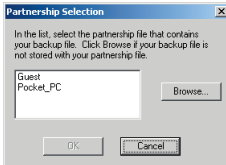

6. Select the backup file you want to restore and select OK to begin.

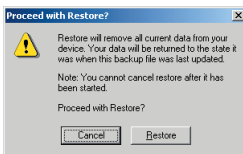

7. Click Restore to begin the restore process.

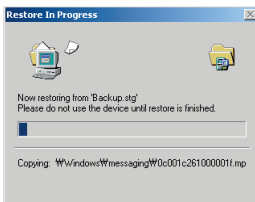

8. When completed, perform **soft Reset** on your device with your stylus and seat your device on your cradle to synchronize.



Do not use your device until Restoration is completed.

How to install programs using ActiveSync

Using Setup.exe or Install.exe

1. Download the program to your desktop computer (or insert the CD or disk that contains the program into your desktop computer).
2. Connect your device to your desktop PC.
3. If the program includes an installer program (typically named Setup.exe or Install.exe), double-click the installer program on the desktop PC. The installer program copies the necessary files to your device.

Using cabinet (*.cab) file

1. Download the program to your desktop computer (or insert the CD or disk that contains the program into your desktop computer).
2. Connect your device to your desktop PC.
3. Use the ActiveSync Explore button to copy the cabinet (*.cab) file to your device, and then double-tap the icon on your device to install the program.
4. Refer to the Read Me file or documentation that came with the program to be sure you have copied the necessary file(s). For more information on copying files using ActiveSync, see ActiveSync Help.

This chapter details ways you can optimize your device using the Settings, and describes ways you can expand features and functionality.


- Settings

05 Configuring Device


Settings

On the Start menu, tap **Settings**. You will see 3 tabs: **Personal**, **System** and **Connections**.


The Personal tab

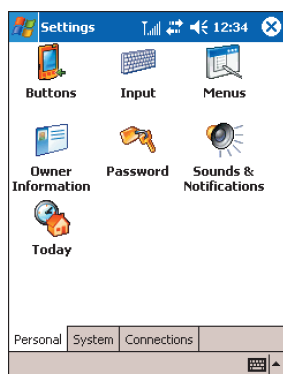

Tap the **Buttons** () icon to assign functions to the four hardware buttons located on your device.

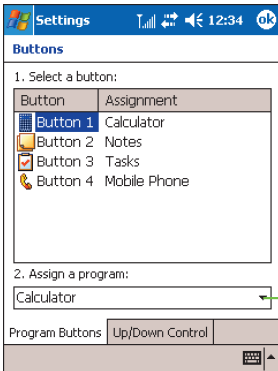

First, select a button among the 4 buttons and select a program you want for that button on the assignment.



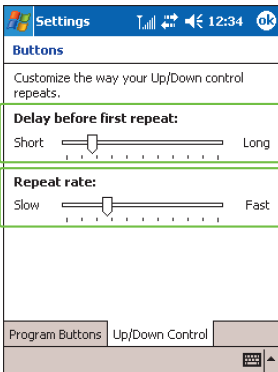


Move the slide to adjust the delay before first repeat.


Move the slide to adjust the repeat rate.

Settings


Tap the **Input**() icon to adjust a setting on the Input Panel.

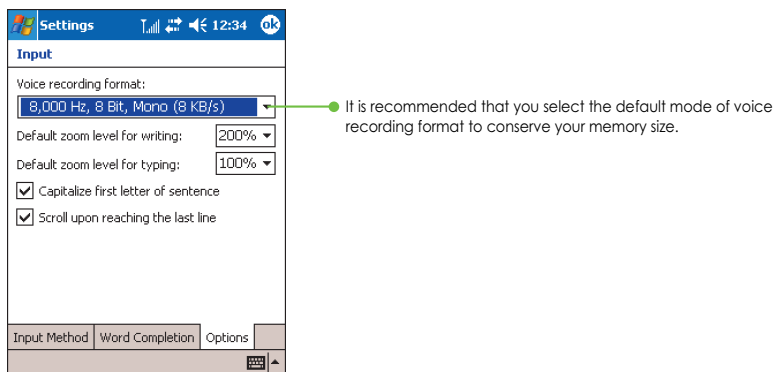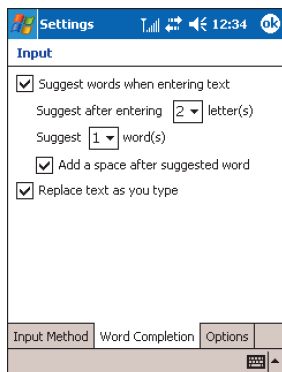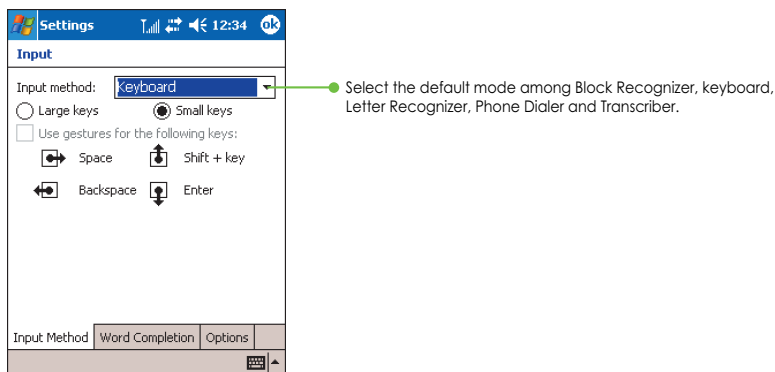

Tap the **Menu** () icon to adjust the programs listed on the Start menu and New menu.

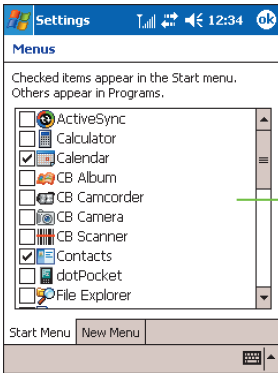

Selected items appear in the Start menu. Otherwise, the rest appear in Programs.

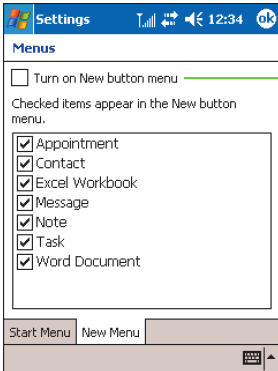

Select the Turn on New button menu item to have the selected items displayed on the New menu list.

Settings

Tap the **Owner Information** () icon to enter your personal information.



Settings 12:34

Owner Information

Name:


Company:

Address:

Telephone:

E-mail:

Identification Notes Options

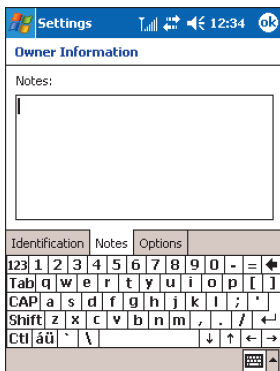


Settings 12:34

Owner Information

Notes:

Identification Notes Options

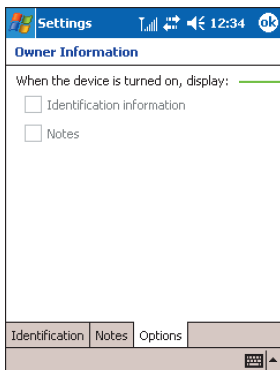

Settings 12:34

Owner Information

When the device is turned on, display:

☐ Identification information

☐ Notes

Identification Notes Options

Select this option box to show this information when device is turned on.

Tap the **Password**(🔑) icon to change a password.

Settings 12:34 ok

Password

☐ Prompt if device unused for 1 hour

Password type: Simple 4 digit

Password:

Password Hint

Settings 12:34 ok

Password

☒ Prompt if device unused for 1 hour

Password type: Strong alphanumeric

Password:

Confirm:

Password Hint

123 1 2 3 4 5 6 7 8 9 0 = +
 Tab q w e r t y u i o p []
 CAP a s d f g h j k l ; '
 Shift z x c v b n m , . / <
 Ctl á ü ` \ ↓ ↑ ← →

When you select the Strong alphanumeric password item, you have to enter the 7-digit password: a combination of the English upper case and lower case letters.

Settings 12:34 ok

Password


Provide a password hint in case you forget your password. This hint may be visible by others.

Password Hint

123 1 2 3 4 5 6 7 8 9 0 = +
 Tab q w e r t y u i o p []
 CAP a s d f g h j k l ; '
 Shift z x c v b n m , . / <
 Ctl á ü ` \ ↓ ↑ ← →



Settings

Tap the **Sounds & Notifications** (🔊) icon to adjust sounds that is enabled for events, programs, screen taps and hardware buttons.

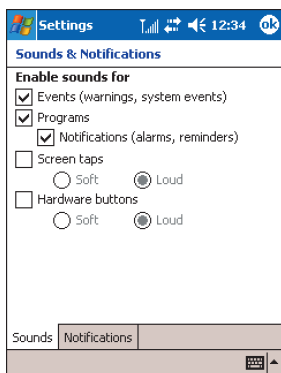

According to each event, select the corresponding sounds or notifications.

Tap the **Today** (📅) icon to use an image file as the background and select programs that appear on the Today screen.

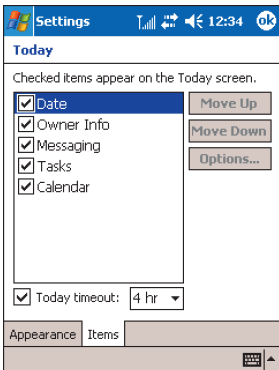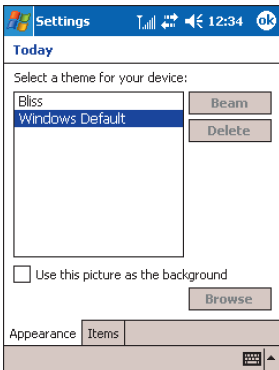


Settings

The System tab



Tap the **About** () icon to see the version and copyright.

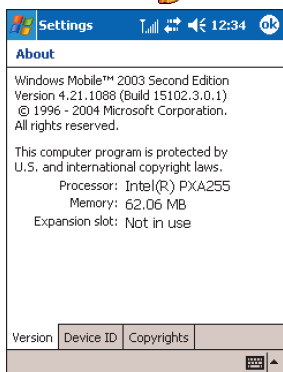


Settings 12:34

About

Windows Mobile™ 2003 Second Edition
Version 4.21.1088 (Build 15102.3.0.1)
© 1996 - 2004 Microsoft Corporation.
All rights reserved.

This computer program is protected by
U.S. and international copyright laws.
Processor: Intel(R) PxA255
Memory: 62.06 MB
Expansion slot: Not in use

Version | Device ID | Copyrights

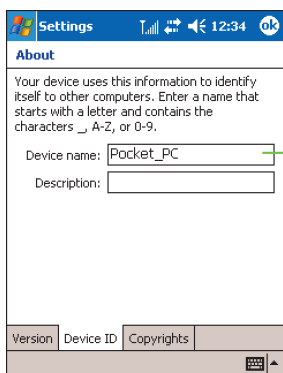

Settings 12:34

About


Your device uses this information to identify
itself to other computers. Enter a name that
starts with a letter and contains the
characters _ A-Z, or 0-9.

Device name:

Description:

Version | Device ID | Copyrights

While synchronized, this will be used for identifying itself and establishing a partnership.

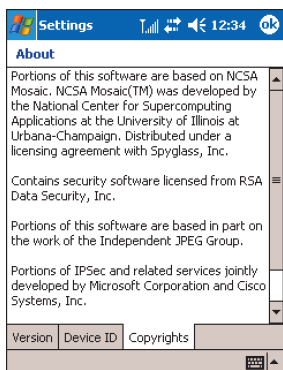

Settings 12:34

About

Portions of this software are based on NCSA
Mosaic. NCSA Mosaic(TM) was developed by
the National Center for Supercomputing
Applications at the University of Illinois at
Urbana-Champaign. Distributed under a
licensing agreement with Spyglass, Inc.

Contains security software licensed from RSA
Data Security, Inc.


Portions of this software are based in part on
the work of the Independent JPEG Group.

Portions of IPsec and related services jointly
developed by Microsoft Corporation and Cisco
Systems, Inc.



Version | Device ID | Copyrights

Settings


Tap the **Backlight**() icon to adjust the backlight.

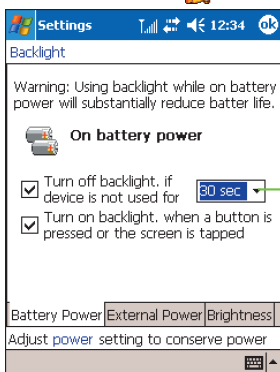

It is recommended to conserve your battery life that you turn off backlight if device is not used for the time you select here.

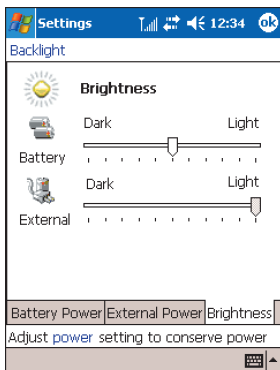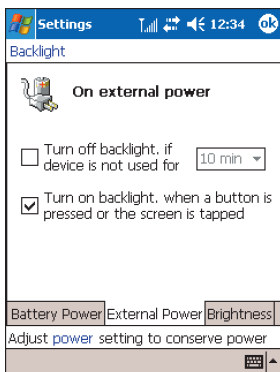


Tap the **Certificates** () icon to adjust the backlight.

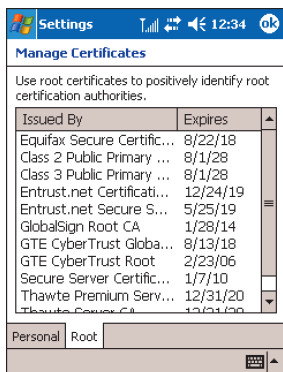


Settings




Tap the **Clock** (🕒) icon to adjust the current time and alarms.

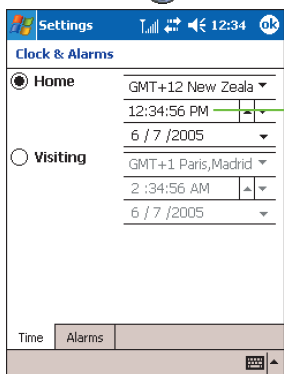

Select the right one according to where you stay.

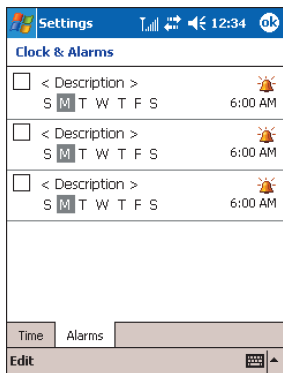


Tap the **Memory** (🗑️) icon to adjust the allocation of memory temporarily.

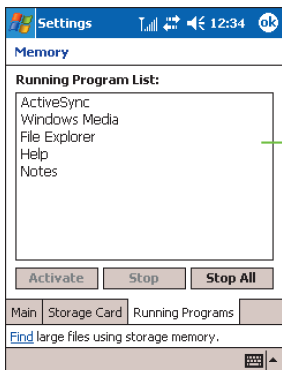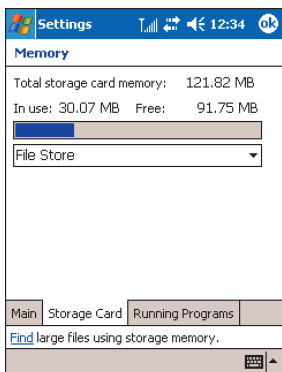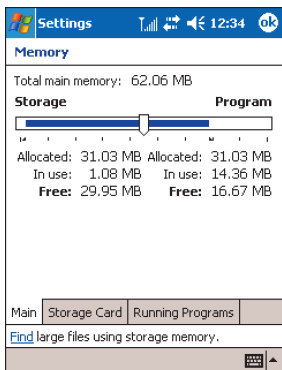




● To conserve the program memory, you can stop programs that are not being used.

Settings


Tap the **Power** (🔋) icon to see the state of battery.

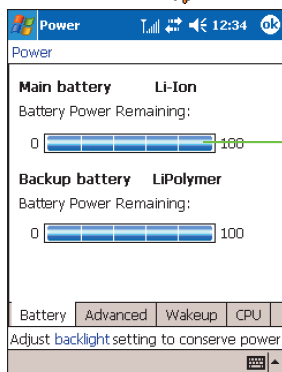

While being seated on cradle, if main battery is not fully charged, it will move from 0 to 100% on the charging bar

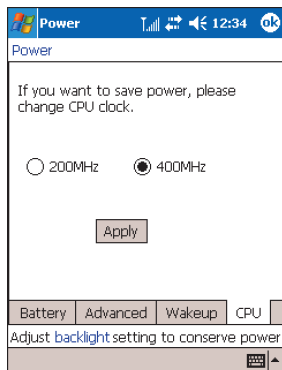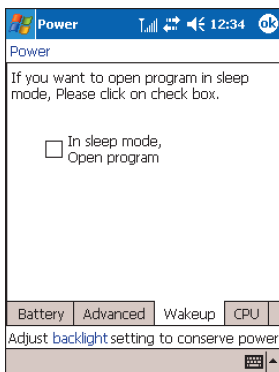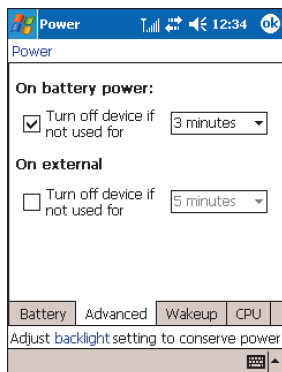

Tap the **Regional Settings** () icon to adjust the time, number, especially period, money and data type.

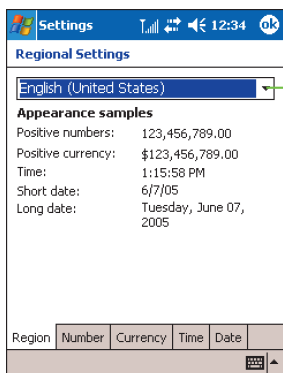

Settings 12:34

Regional Settings


English (United States) 

Appearance samples

Positive numbers: 123,456,789.00
 Positive currency: \$123,456,789.00
 Time: 1:15:58 PM
 Short date: 6/7/05
 Long date: Tuesday, June 07, 2005

Region Number Currency Time Date

Select where you stay.

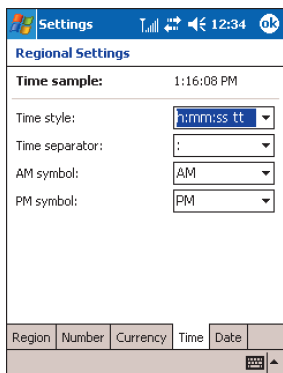

Settings 12:34

Regional Settings

Time sample: 1:16:08 PM


Time style: h:mm:ss tt 

Time separator: : 

AM symbol: AM 

PM symbol: PM 

Region Number Currency Time Date

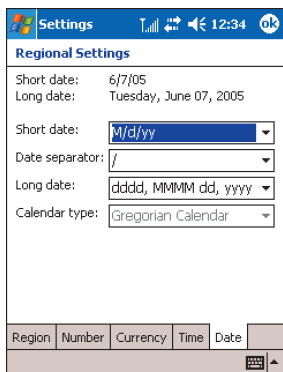

Settings 12:34

Regional Settings

Short date: 6/7/05
 Long date: Tuesday, June 07, 2005

Short date: M/d/yy 

Date separator: / 


Long date: dddd, MMMM dd, yyyy 

Calendar type: Gregorian Calendar 

Region Number Currency Time Date


Settings

Tap the **Remove Programs**() icon to remove the programs that are installed on your device.


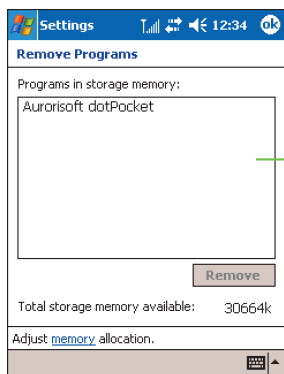


When the storage memory is short, remove the program installed on your device.

Tap the **Screen** () icon to adjust the touch screen if your device is not responding accurately to screen taps.



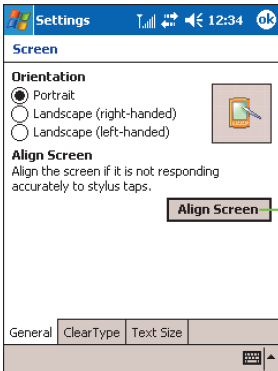


Press down the up button of the navigation pad and press the power button at the same time to have the Align Screen appear.

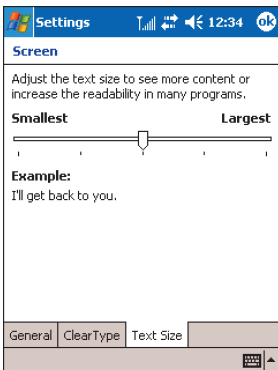
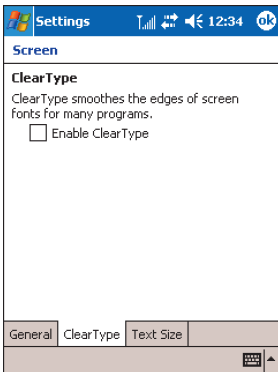


Settings

Tap the **System**() icon to see system information and adjust the wake up, USB and GPS.

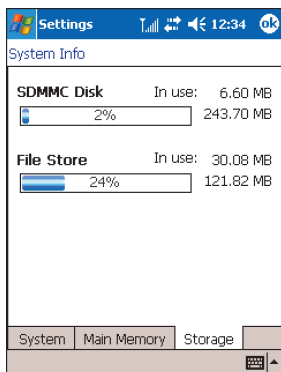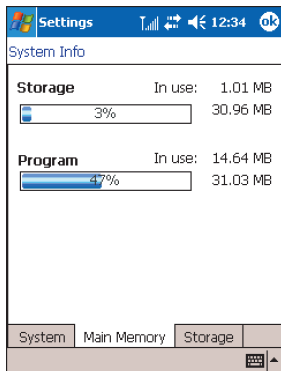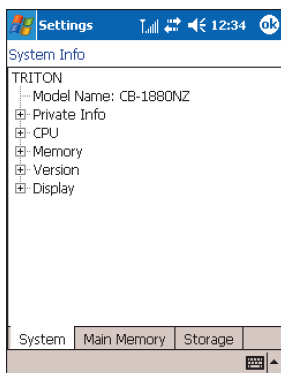


Tap the **WLAN**() icon to check the status of WLAN and turn it on/off.

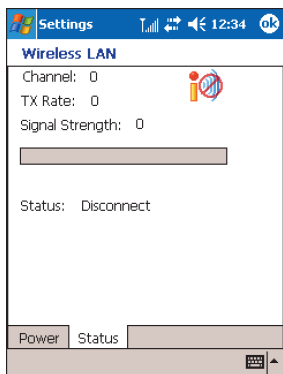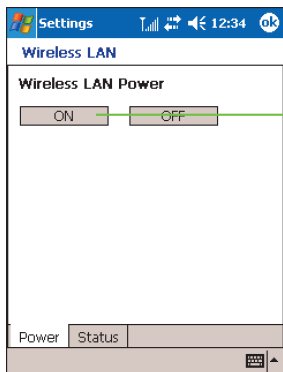


Settings

The Connections tab


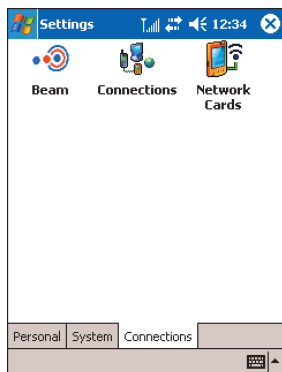


Tap the **Beam**() icon to adjust the beam settings of your device.

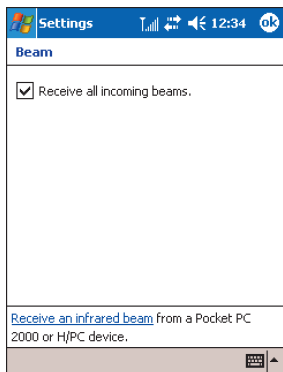


Settings

Tap the **Connections**() icon to set the options for a modem connection.

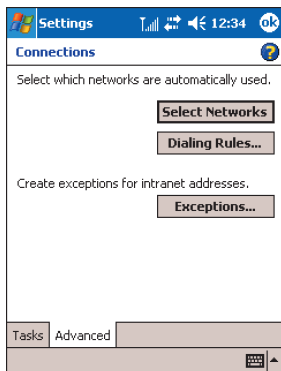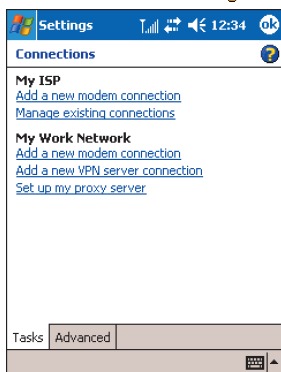

Tap the **Network Cards** () icon to change the settings for network adapters.

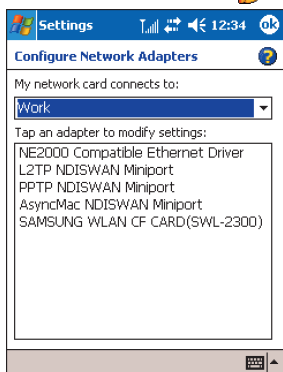

In addition to connecting your device to your desktop PC, you may want to connect to remote computers so you can access e-mail, browse the Internet, or retrieve files from a corporate network, whether you are at home or on the road.

To start the connection, simply open a program that requires a connection to the Internet. Your device will attempt to connect automatically.

- Visit Internet or intranet Web pages by using Pocket Internet Explorer.
- Send and receive e-mail messages by using Inbox. Before you can use Inbox, you need to provide the information it needs to communicate with the e-mail server.
- Send and receive instant messages with MSN Messenger. For more information, see "MSN Messenger" in chapter 9.

This chapter describes

- Browsing the Web on your device
- Sending and Receiving E-mail Messages
- Connecting Directly to an E-mail Server

06

Using the Internet & E-mail

Browsing the Web on your device

You have to set up the Internet Settings before you use the Internet Explorer for the first time. Once you are connected to an ISP or to a network, you can browse the Internet or a corporate intranet. You can also use Pocket Internet Explorer to browse Web content while you are not connected-by downloading mobile favorites and channels to your device.

Use Microsoft Pocket Internet Explorer to view Web pages in either of these ways:

- Connect to an ISP or network and browse the Web. To do this, you will need to create the connection first.
- During synchronization with your desktop PC, download mobile favorites that are stored in the Mobile Favorites subfolder in Internet Explorer on the desktop PC.

To start Pocket Internet Explorer

1. On the Start menu, tap Internet Explorer.



2. On the View menu, tap Address Bar.
3. Enter address you want on the address bar located on the top of screen and tap the arrow next to the address bar, then it will automatically connect to the Internet using CDMA module. When the internet connection is completed, the  icon will appear on the Navigation bar.
4. When you want to finish using Internet, tap the  button on the Command bar so that you have  stopped. And also you need to tap  on the right-upper corner to stop your Internet connection completely.


Mobile Favorites folder

Only items stored in the Mobile Favorites subfolder in the Favorites folder in Internet Explorer on your desktop PC can be synchronized with your device. This folder is created automatically when you install ActiveSync.


You can only view the mobile favorites offline that was synchronized with your desktop PC. If the page is not synchronized with your desktop PC, it will be dimmed in the Favorites list of your device. You will need to synchronize with your desktop PC again to download the page to your device, or connect to the Internet to view the page.

To make Mobile Favorites

1. Select Options on the Tools menu or click the Options button to have the Options screen appear. Then select the Favorites check box and click OK.

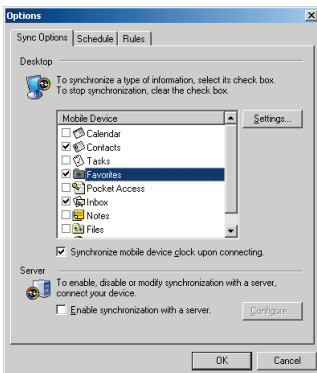

2. Select Create Mobile Favorites on the Tools menu of Microsoft Internet Explorer of your desktop PC.

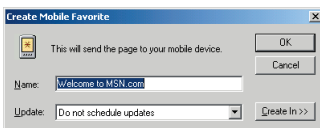


3. When you select OK, the Internet Explorer will download the latest version of the corresponding page. Then you will find the icon() on the task tray bar of your desktop PC.

Browsing the Web on your device

To make the Mobile Favorites button on the Tools menu of your desktop PC

Select Tools bar > Customize on the View menu of Microsoft Internet Explorer to add the Mobile Favorites button on the Tools bar.

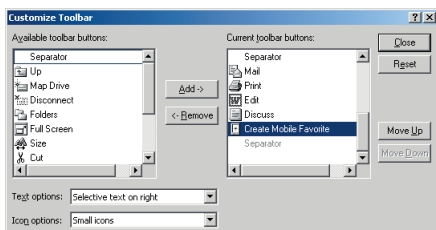


Select Create Mobile Favorites on your left pane and click the Add button to send that icon you select to the right pane as described above. Then you will find the Mobile Favorites() button on your tools bar of your Microsoft Internet Explorer.

To reduce the amount of memory caused by Mobile Favorites


Mobile favorites take up storage memory on your device. Follow these tips to minimize the amount of memory used:

- Use ActiveSync settings to turn off pictures and sounds for the Mobile Favorites or to stop some mobile favorites from being downloaded to your device. For more information, see ActiveSync Help.

1. Select Options on the Tools menu or click the Options button to have the Options screen appear.

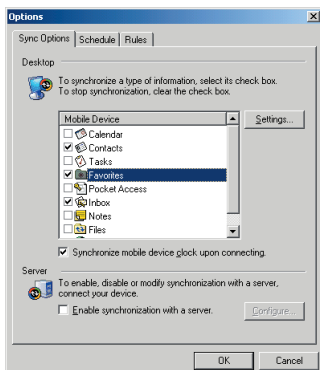


2. Then select the Favorites check box and click the Settings button.

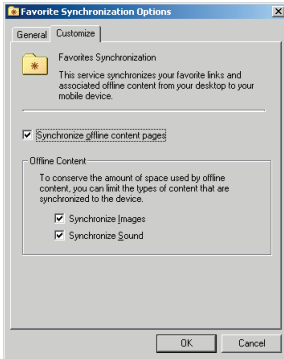

3. Deselect pictures and sounds for the Mobile Favorites and click OK.

To view Mobile Favorites offline

1. Tap the Favorites button on Pocket Internet Explorer of your device to display your list of favorites.

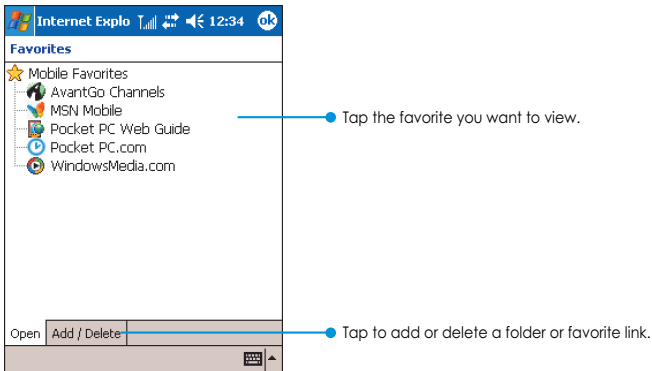

2. In the list, tap the page you want to view.

Sending and Receiving E-mail Messages


If you have an e-mail account with an ISP or on a corporate network, you can use Inbox to send and receive e-mail messages in two ways:

- Synchronize e-mail messages with Microsoft Outlook on your desktop PC.
- Send and receive e-mail messages by connecting directly to an e-mail server.


Synchronizing E-mail Messages

You can synchronize e-mail messages as part of the general synchronization process whenever you connect your device to your desktop PC. First, you must enable Inbox synchronization in ActiveSync.

Select the Options button on the Microsoft ActiveSync screen.

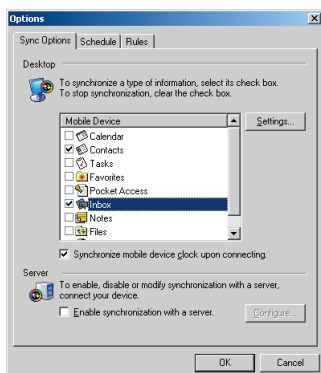


Select Inbox and click the Settings button.

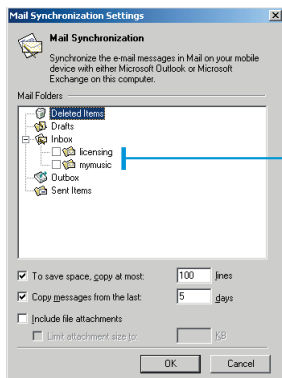

These subfolders are made by yourself, so you have to select the folders you want to synchronize.

Make selections as you want and click OK to copy the Inbox folder of your desktop PC to the Inbox folder of your device.

Here is the list of mail messages after you synchronize through ActiveSync.

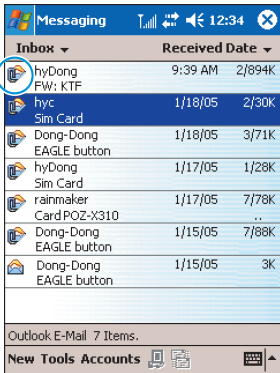

: This is an unread message.

: This is an unread message with attachments that need to be downloaded.


: This is an unread message with attachments that is already downloaded.

: This is an already read message.

: This is an read message with attachments that need to be downloaded.

: This is an read message with attachments that is already downloaded.

If you want to download the attachments, tap and hold the corresponding message to have pop-up menu appear. Then select Mark for Download.

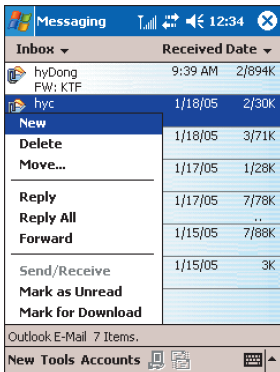


Then this icon will be changed to .


Sending and Receiving E-mail Messages

Using the Message List

Messages you receive appear in the message list. By default, the most recently received messages are displayed first in the list.

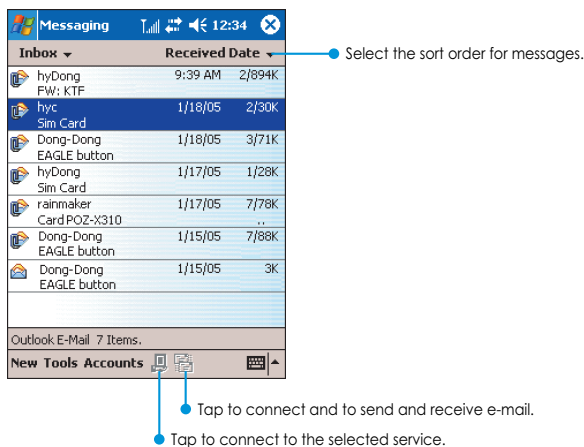


When you receive a message, tap it to open it.

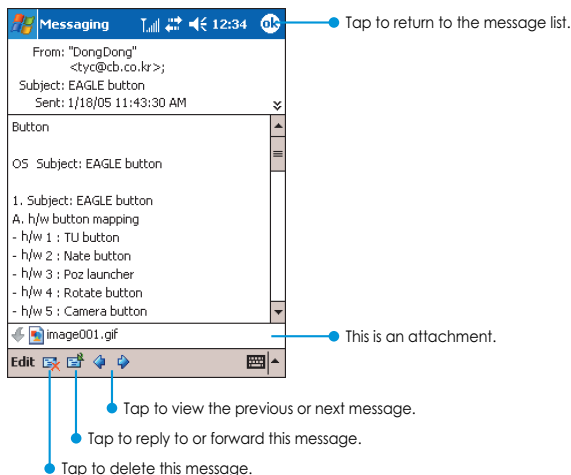

You can mark the messages that you want to retrieve in full during your next synchronization. In the message list, tap and hold the message you want to retrieve. On the pop-up menu, tap Mark for Download. The icons in the Inbox message list give you visual indications of message status.

Make a new message

1. Tap **New**.

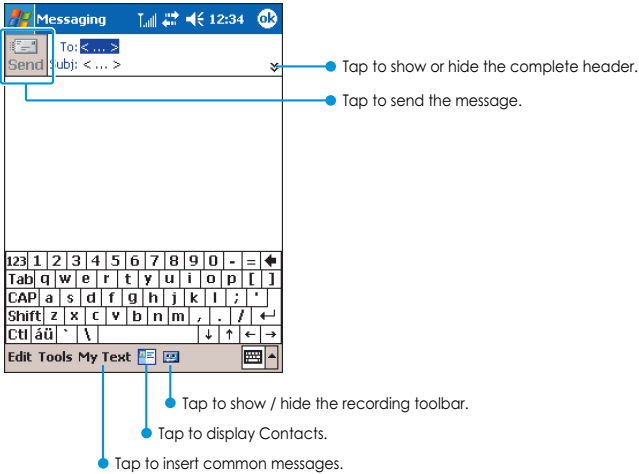


2. In the **To** field, enter an e-mail address of one or more recipients, separating them with a semicolon, or select a name from the contact list by tapping the **Contacts** button.



Sending and Receiving E-mail Messages


3. Compose your message. To enter preset or frequently used messages, tap **My Text** and select a message.

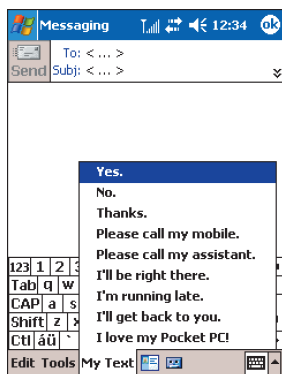

4. When you have finished the message, tap **Send**.

Delete a message


When your device is synchronized with your desktop PC, and when you want to delete a message on your device, tap and hold the message to have pop-up menu appear. Then select Delete.

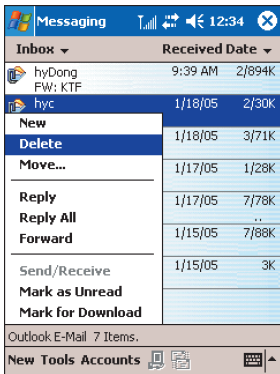

If your device is not synchronized with your device, the next time your device is synchronized, the corresponding message on your desktop PC will be deleted.

Reply, Reply all or Forward a message

When you want to reply, reply all or forward a message on your device, tap and hold the message to have pop-up menu appear. Then select Reply, Reply all or Forward.

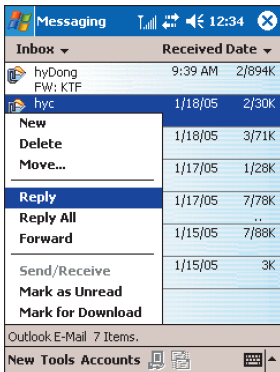

Connecting Directly to an E-mail Server

In addition to synchronizing e-mail messages with your desktop PC, you can send and receive e-mail messages by CDMA module on your device.

The ISP or network must use a POP3 or IMAP4 e-mail server and an SMTP gateway.

Customize a new mail service

You can use multiple e-mail services to receive your messages. For each email service you intend to use, first set up and name the e-mail service. If you use the same service to connect to different mailboxes, set up a separate service for each mailbox.

In Inbox, tap Accounts, and then tap New Account. Follow the directions in the New Service Wizard. Here are just parts of setting a wizard.

Messaging 12:34

E-mail Setup (1/5)

E-mail address

Enter e-mail address:

Cancel Back Next

123 1 2 3 4 5 6 7 8 9 0 - = < >
 Tab q w e r t y u i o p []
 CAP a s d f g h j k l ; ' < >
 Shift z x c v b n m , . / < >
 Ctl á ü ~ \ | _ < >
 Edit X

Enter e-mail address and tap Next.

Messaging 12:34

E-mail Setup (2/5)

Auto configuration

Attempting to automatically configure your e-mail settings.

To skip this step, tap Skip.

Status:

Cancel Back Next

Edit X

After the status becomes Completed as shown above, tap Next.

Enter your name and password and then tap Next.

Select POP3 or IMAP4 if it is supported, enter a name in the Name box (for example, My Mail).


Enter a name in the Name box (for example, My Mail) and tap Next.

Enter server names in the Incoming mail box and the Outgoing mail box (for example, mail.bigpond.com), and if needed, tap Options to set the other options. For more detailed information, ask your network administrator or corporate mail-server administrator.

Connecting Directly to an E-mail Server


To connect to an e-mail service

In Inbox, tap Services, and then tap Connect. Then through CDMA module, you will be connected to mail server. Messages in your own local folder will be downloaded from this mail server directly.

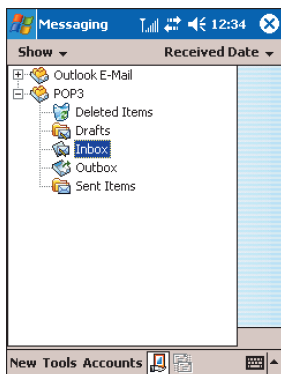

To synchronize your own local folder through ActiveSync

If you want to synchronize your own local folder through ActiveSync, select the local folder (for example, POP3 as shown below) and on the Tools menu, select Manage Folders.

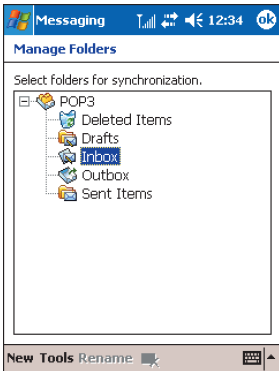

Select the subfolder you want to synchronize through ActiveSync and tap OK on the upper-right corner.

By default, each mail service is composed of 5 subfolders.

- Inbox
- Outbox
- Sent Items
- Deleted Items
- Drafts

When you connect to the e-mail server, new messages are downloaded to the Inbox folder on your device, messages in the Outbox folder are sent, and messages that have been deleted on the e-mail server are removed from the Inbox folder on your device.

You can work online or offline. When working online, you read and respond to messages while connected to the e-mail server. Messages are sent as soon as you tap Send, which saves space on your device.

When working offline, you should download new message headers or partial messages, and then you can disconnect from the e-mail server while you decide which messages to download completely. The next time you connect, Inbox downloads any messages you marked for retrieval and sends the messages in your Outbox folder.

Connecting Directly to an E-mail Server

To download the attachments of message


You can download the attachments of message through directly connecting to mail server using the CDMA module.

Tap the  icon to directly connect to the mail server.

Then you will find the  icon on the navigation bar.

Tap the connect  icon on the navigation bar to finish this connection.

Tap and hold the message to download the attachments and select Mark for Download on the pop-up menu.

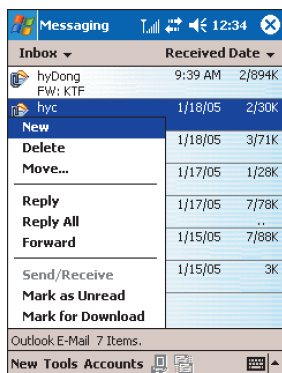

A blue notepad with a white tab on the left containing the word 'MEMO' in orange, green, blue, and dark blue blocks. The notepad has horizontal dashed lines for writing. A white staircase graphic is on the left side of the notepad.

Your device has a built-in CDMA module that supports wide-range data communication and additional features including SMS (Short Messaging Service), along with voice calls. These features save you the trouble of having to purchase another cellular phone with a phone number. Remember that you have no other right to copy the ESN number against the communication law.

This chapter includes information on:

- Phone Program
- SMS(Short Messaging Service)

07

Using the Mobile Phone

Phone Program


This phone program enables you to place a call.

Use the dial pad to enter the phone number and tap the Send button.



You can communicate with other persons through the speaker and microphone and the optional earphone that should be inserted into earphone jack.

The Phone display

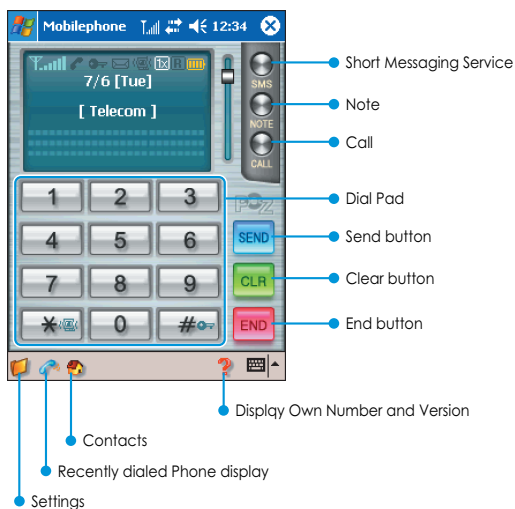


Indicators in the Phone display

Indicators	Description	Indicators	Description
	Signal Intensity		Vibrate mode
	Service area		1x network
	Not in service area		95A network
	Lock		Roaming
	Voice message or SMS		Battery charging status


Using the NOTE button

Here is how we can use the NOTE button during a voice call.

When you need to make a note during a voice call, tap the NOTE button to open the note program that is provided on your phone program. You can enter any contents you want and record your voice.

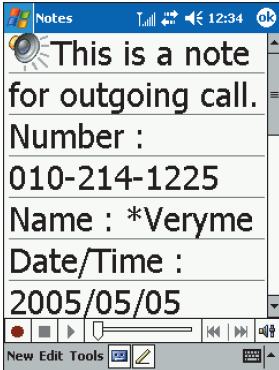


When you finish entering any contents you want, tap  to display the folder(File Store\CallNotes).

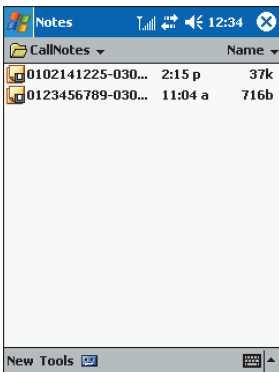

Phone Program

Using the CALL button

Tap the Call button to display a list of recently incoming, outgoing and missed calls, including caller information and call time since initializing your phone.

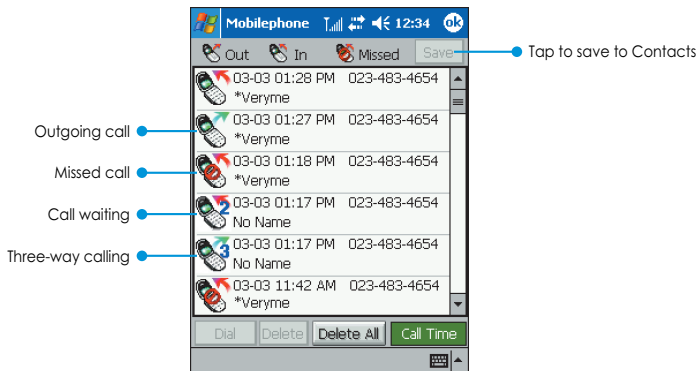

Select the item that is displayed as No Name and tap the Save button to save a corresponding name.

Name

Last First Display

Phone Number

Type Mobile Tel Number 023-483-4654

123 1 2 3 4 5 6 7 8 9 0 - =

Tab q w e r t y u i o p []

CAP a s d f g h j k l ; ' ,

Shift z x c v b n m , . / <

Ctrl á ü ì ò ù ò ù ò ù

OK Cancel

Enter the corresponding name for it and tap OK.

Using the SEND button

You can make a call as follows :

- Enter phone number and tap the **SEND** button to make a call.
- When you tap the SEND button once, the number you called appears on the screen and if you tap this button once more, you are connected to this number.
- You can use the up/down control to have the recently dialed numbers appear. When you press the up button or down button of the up/down control, the number you called appears on the screen. If you press the SEND button, you are connected to this number.

Using the CLEAR button

If a mistake is made while dialing, tap the Clear button to clear the last digit, or tap and hold the Clear button to clear all the digits.

Using the END button

Tap the END button to end a call.

Tap and hold the END button for a little longer(2 or 3 seconds) to turn the CDMA module off so that you cannot make a call, send SMS messages and browse the Internet. Tap and hold the END button again for a little longer(2 or 3 seconds) to turn the CDMA module on.



You can not make a call, browse the Internet and send SMS messages while the CDMA module is not on.

Using the Vibrate mode

Press down  (about 2 seconds) on the numeric key to turn the Vibrate mode on. Then you will be able to feel vibrating on your device and also see  on the Phone status pane. On this Vibrate mode, you will feel the vibration on your device when a call is coming. Press down  again(about 2 seconds) on the numeric key to return to normal.

Using the Lock button


Press down  (about 2 seconds) on the numeric key to lock your mobile phone. Then you will see  on the Phone status pane. To unlock your device, press down  (about 2 seconds) on the numeric key and enter the 4-digit(set as "0000") password on your numeric key.

Phone Program


Placing a call

You can place a call as follows :

- **Use the dial pad(or numeric key) to enter the phone number, including the area code and tap the Send button.**
- **When you want to use the Contacts to place a call, tap the Contacts icon on the Command bar.**

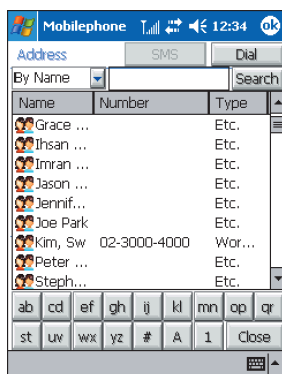

Select a phone number you want and tap the Dial button on the upper-right corner. You will see only one phone number for each person at this screen. If you want to place a call with another phone number, double-tap the corresponding contact to display the screen as shown below:

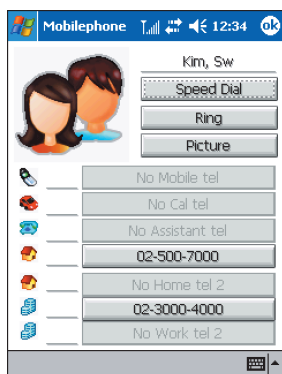


Tap a phone number you want to place a call automatically.

• Use speed dial numbers to place a call as follows:

- One-digit number (0 ~ 9): Tap and hold (about 2 seconds) the corresponding speed dial number.
- Two-digit number (10 ~ 99): tap the first digit of the speed dial number, and then tap and hold the second digit of the speed dial number.
- Or tap the corresponding speed dial and tap the Send button.

If you don't remember the corresponding speed dial, tap the Settings icon on the Command bar > the User button and select the Speed dial icon.

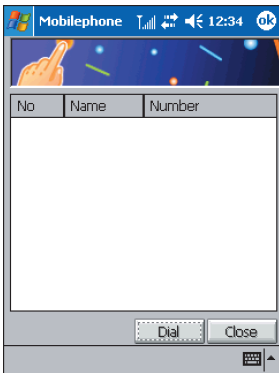


Select the speed dial you want and tap the Dial button.

Phone Program

To receive a call

The incoming call is alerted with a flashing indicator and an audible sound or a vibrating alert with the screen as shown below:

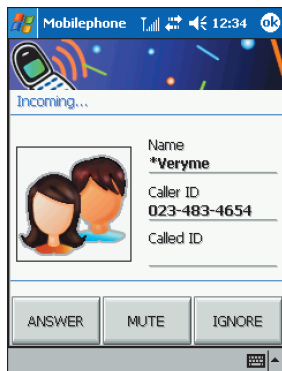


Tap the **ANSWER** button to receive this call, or tap the **MUTE** button when you don't want to hear the bell sound (but the caller can still hear the outgoing bell sound) or tap the **IGNORE** button to disconnect the call without answer.

While communicating through your phone module, you will also see icons on the Command bar as follows:


Icons	Descriptions
 Mute	Tap icon to have the other icon appear.
 Un-mute	You can un-mute while communicating.
 Key Sound	Tap icon to have the other icon appear.
 Remove Key Sound	You cannot hear any key sound while tapping any key on your dial pad.
 User Information	Tap this icon to have the User Information screen appear and you can select any number you have entered before to send out.

Make a speed dial using Contacts

Tap the Contacts icon on the Command bar.

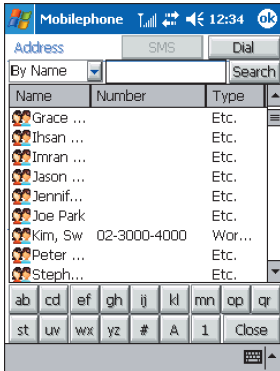


Double-tap a contact you want to make a speed dial for.

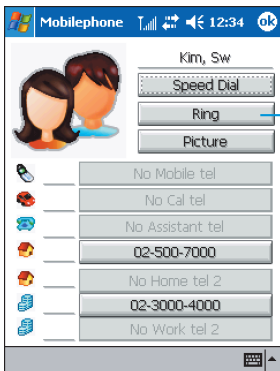


Tap to assign a specific bell sound to the specific person.

Phone Program


Tap the Speed dial button.

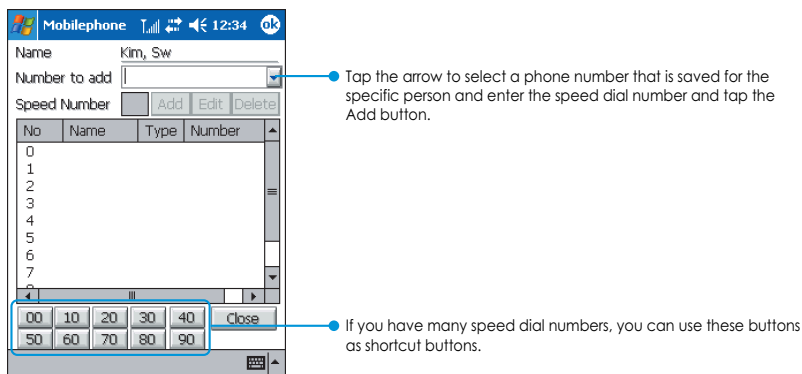

Tap the arrow to select a phone number that is saved for the specific person.

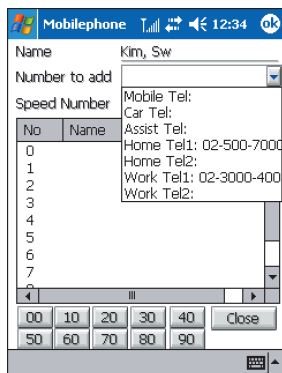

Select the phone number you want and select speed dial number on the list as shown below.

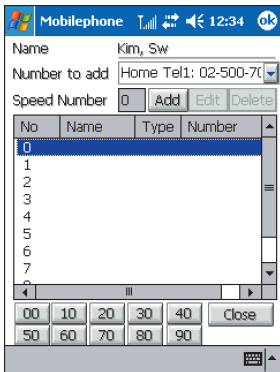


Tap the Add button to add this number to the Speed Dial list

Phone Program


Add a picture to contact

Copy a picture (100 X 100 pixel, BMP file recommended) to a folder you want through Microsoft ActiveSync.


Tap the Contacts icon on the Command bar.

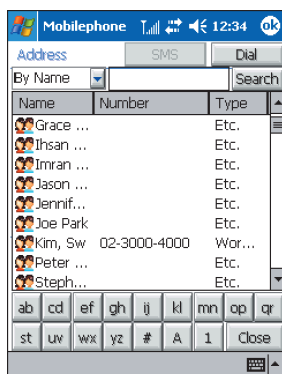

Double-tap a contact you want.

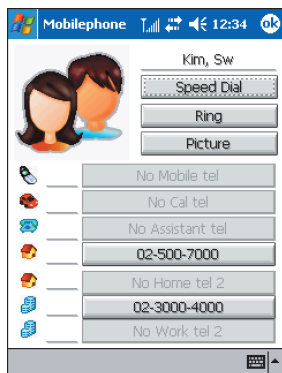

Tap the Picture button.

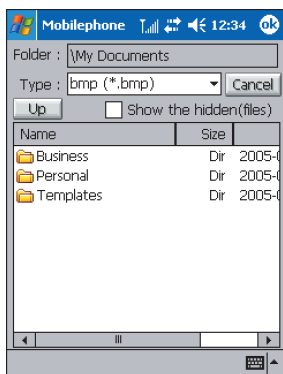

Select the folder you want and tap the picture.


Phone Program

Using the Settings button


Tap the Settings() icon to adjust the settings on the phone program. Tap the User Settings button to display the User Settings screen.



When you are asked to enter password, enter the 4-digit(set as "0000") password on your numeric key.

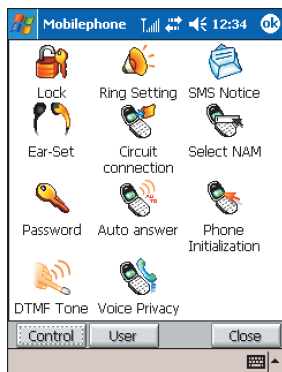


Control Panel Settings

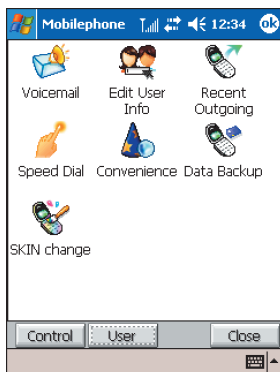

User Settings

Tap the **Lock**() icon to adjust the settings on restricting calls including the international call, Call Log and SMS.

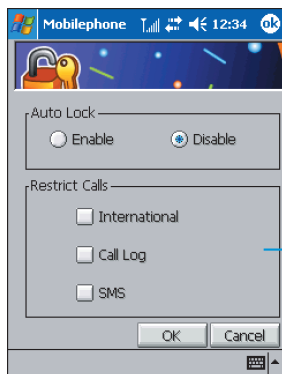


This enables you to restrict these functions: international call, call log, SMS.

Tap the **Ring Setting** (🔔) icon to display the sound screen.



Select the bell sound or adjust the volume. Also you can download the bell and install it for your favorite bell sound.


Tap the **SMS Notice** (✉️) icon to display the SMS settings screen.

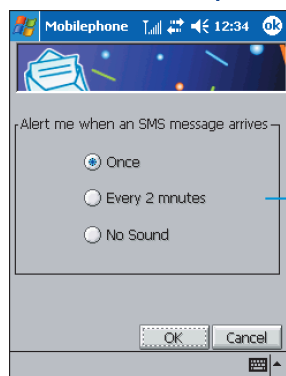


Select the option of how your device let you know that SMS arrives.

Phone Program


Tap the **Ear-Set**() icon to adjust the setting on headphone.

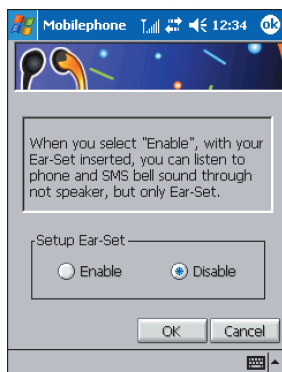

Tap the **Circuit connection**() icon to adjust the setting on how you close the connection to avoid unnecessary charging after using data communication.

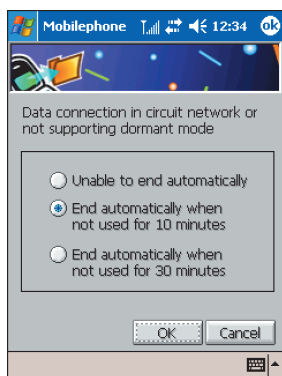


Tap the **Select NAM**() icon to select NAM.

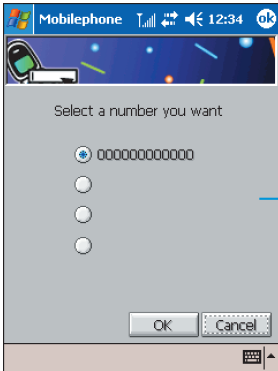

● Select the number you want and tap the OK button.

Tap the **Password**() icon to change your password.

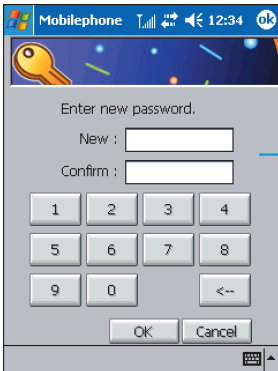


● By default, your password is "0000", but when you want to change to another number your want, use this setting. And also be sure to remember your new password. Otherwise, you have to ask Service Repair Centre to repair.




Your password should be 4 digit number.

Phone Program

Tap the **Auto Answer**() icon to automatically answer an incoming call after a few rings without any key press.

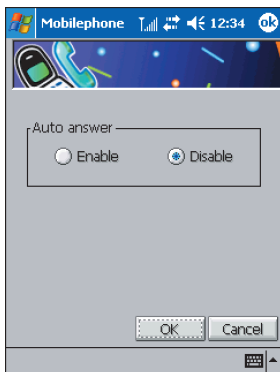


Tap the **Phone Initialization**() icon to initialize your phone program.

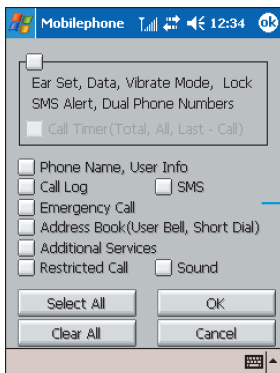


● Select the items you want to initialize and tap the OK button.

Tap the **DTMF Tone**() icon to change the DTMF tone.

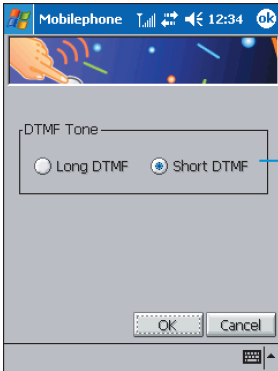

Select Long DTMF when you want the key-pressing tone to sound long, and select Short DTMF when you want the key-pressing tone to sound short, regardless of how long you press the key.


Tap the **Voice Privacy**() icon to make Voice Privacy available during a call.

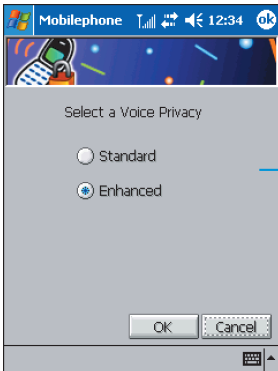

Tap Enhanced to make Voice Privacy available during a call.


Phone Program

Tap the **VoiceMail**() icon to adjust the settings of voice mail.

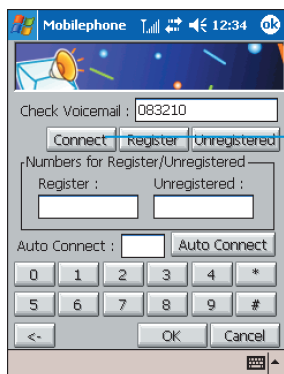


First, ask your service provider of how you register for this service and tap the register button to register. To hear the voice mail that arrived while you could not receive them, tap the Connect button.

Tap the **Edit User Info**() icon to save the frequently used number in advance.

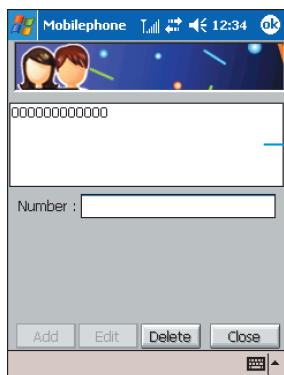


Save the frequently used numbers in advance, such as bank account, social security number. While communicating, you don't need to press the long numeric keys.

Tap the **Recent Outgoing**() icon to delete or see the recently sent phone numbers.

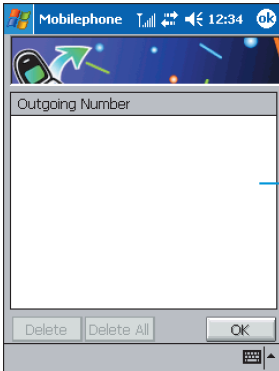


Double-tap the number you want to make a call to. Select an item you want to delete and tap the Delete button. Be careful not to tap the Delete All button mistakenly.

Tap the **Speed Dial**() icon to see a list of the speed dial numbers you use frequently.

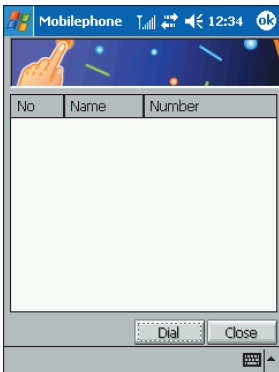


Phone Program


Tap the **Convenience**() icon to reset your calls including voice and Internet.

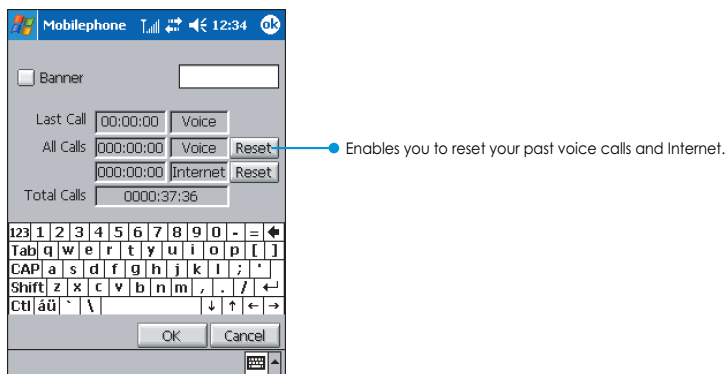

Tap the **Data Backup**() icon to perform the data backup.

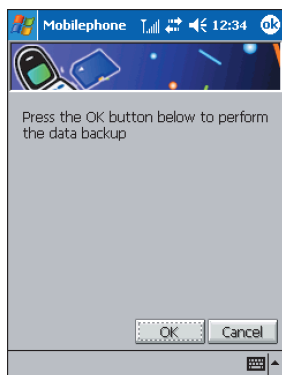

Tap the **SKIN change**() icon to change the skin.

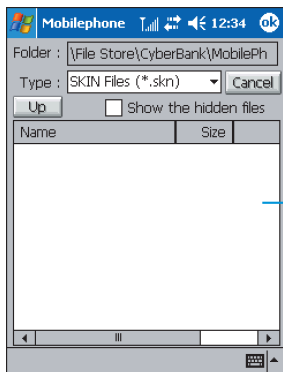


First, save your skin to a folder you want, then your phone program skin will be displayed.

SMS(Short Messaging Service)

Contact your service provider before using this function.

Tap the SMS button on the phone program to display the SMS message screen. When you receive a SMS message,  appears on the phone status pane of the phone program. When you tap  on the phone status pane of the phone program, nothing happens and you have to tap the SMS button on the right side of the phone program.

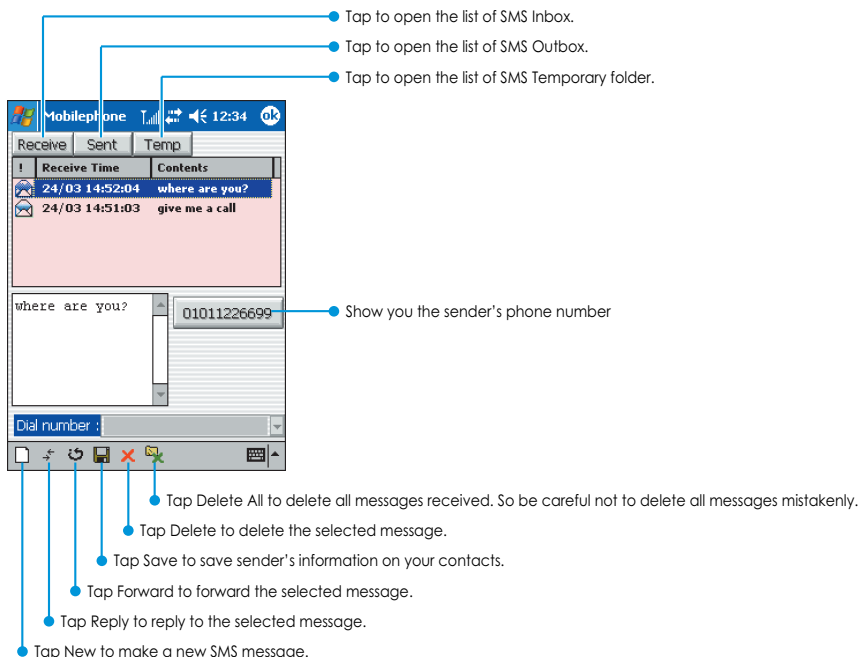


Tap a message you want to open.


-  : Unread message
-  : Read message
-  : Duplicated message

Add sender's phone number to your contacts

Tap the SMS button on the right side of the phone program.

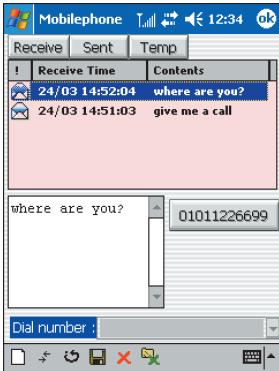

Among the SMS messages listed on the Receive tab, if there are messages whose phone numbers you want to add to your contacts, select the message and tap the Save button to save the phone number to Contacts.

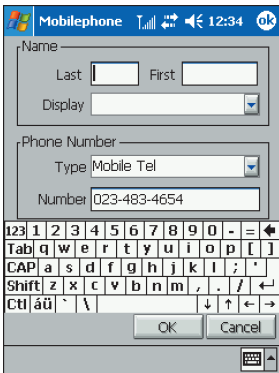


Enter any necessary information and tap OK.


SMS(Short Messaging Service)

Reply to and Forward SMS

Among the messages listed on the Inbox, select a message you want to reply to.

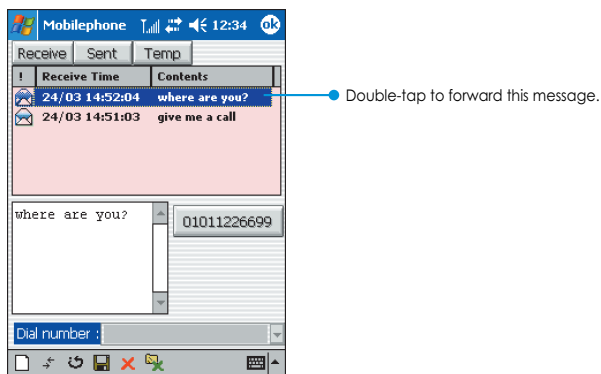

Tap the Reply button

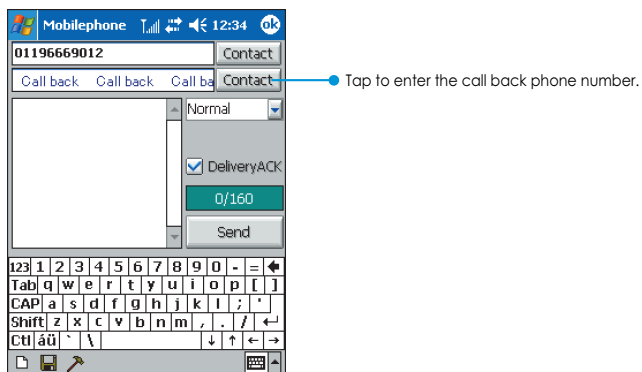

Tap the Contact button or tap the Enter Phone Number box to enter phone number you want directly.




When you enter several phone numbers on the Enter Phone Number box, each phone number should be separated by semicolon(;).

Enter messages on the text box and tap the Send button to send the message.

Compose a new message

Tap the New button of each view. (Inbox, Outbox and Temp of SMS)

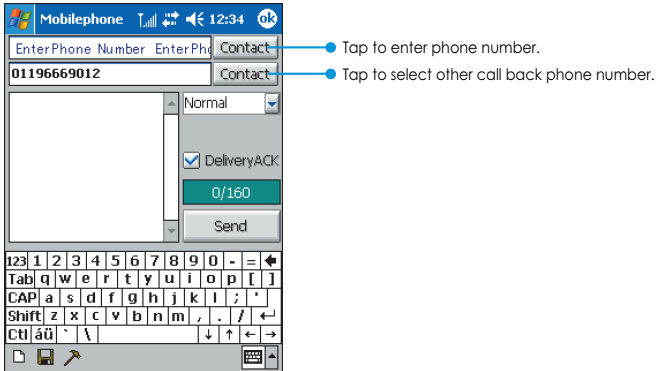

Tap the Contact button or tap the Enter Phone Number box to enter phone number you want directly.

Enter messages on the text box and tap the Send button to send the message.



The length of a text message that you can send each time varies slightly from each service provider, but it is mainly limited to approximately 80 characters in English characters. Therefore, if the message you have created surpasses the limit, it will be divided into 80 characters. The number of messages to be sent is automatically displayed on the bottom part of the New window.

Microsoft Pocket Outlook includes Calendar, Contacts, Tasks, Inbox, and Notes. You can use these programs individually or together. For example, e-mail addresses stored in Contacts can be used to address e-mail messages in Inbox.

Using ActiveSync, you can synchronize information in Microsoft Outlook on your desktop PC with information in Pocket Outlook on your device. Each time you synchronize, ActiveSync compares the changes you made on your device and desktop PC and updates both computers with the latest information. For information on using ActiveSync, see ActiveSync Help on your desktop PC.


In this chapter, you will learn to

- Schedule appointments and meetings using Calendar.
- Keep track of friends and colleagues using Contacts.
- Keep a to-do list in Tasks.
- Capture thoughts and ideas with Notes.


For details on using Inbox to send and receive e-mail messages, see “Sending and Receiving E-mail Messages” in chapter 6.

Calendar: Scheduling Appointments and Meetings

Use Calendar to schedule appointments, including meetings and other events. You can check your appointments in one of several views (Agenda, Day, Week, Month, and Year) and easily switch views by using the **View** menu.

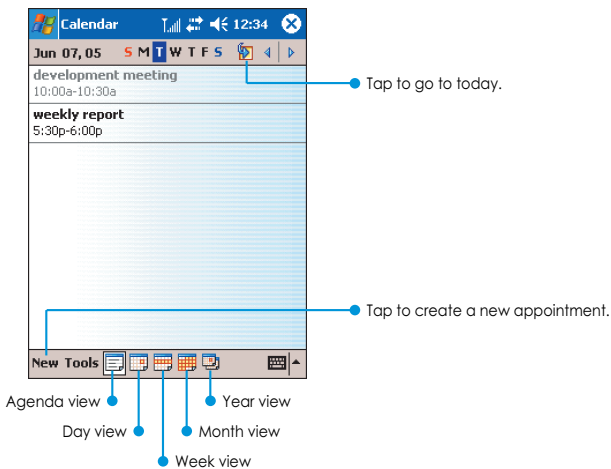



When you select landscape on the settings you will have a screen as follows :

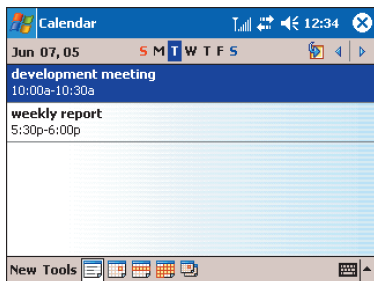

(If you want to select "landscape",  > "Settings" > "System" tab > "Screen()" icon. For more detailed information, see the screen setting on chapter 5 Configuring Device.)

For description below, portrait screens are used.

You can customize the Calendar display (for example, change the first day of the week), by tapping **Options** on the **Tools** menu.

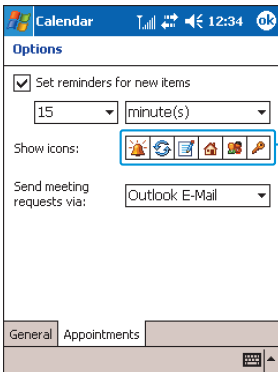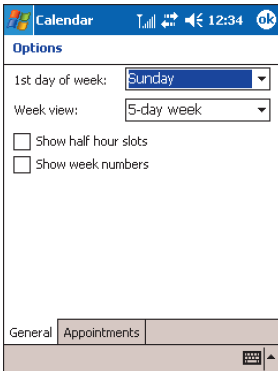


Reminder Location Recurs Attendees Note Private

Calendar: Scheduling Appointments and Meetings


To create an appointment

1. In Day or Week view, tap the desired date and time for the appointment.
2. Tap **New**.

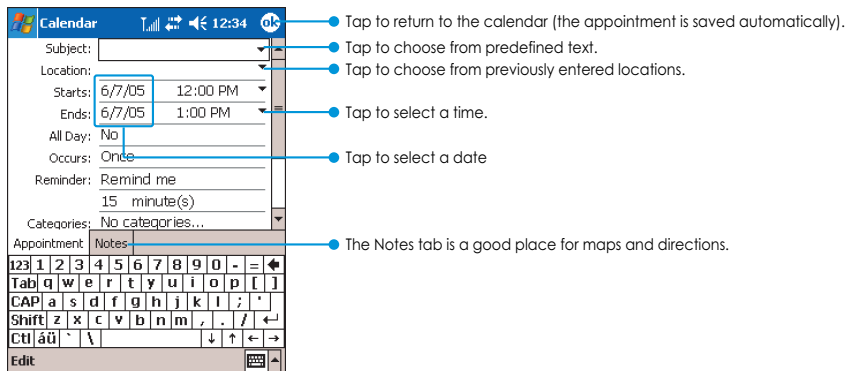

3. Using the Input panel, tap first to select the field, and then enter a description and a location.
4. If needed, tap the date and time to change them.

For example, select the date to have the calendar pane displayed as below.

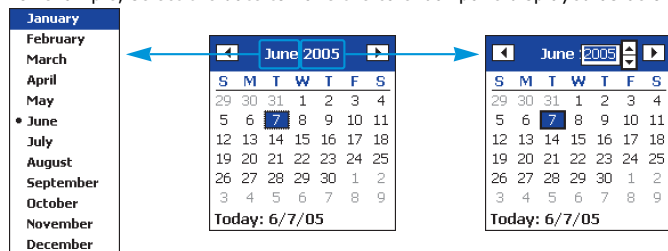

5. Enter other desired information. You will need to hide the Input panel to see all available fields.
6. To add notes, tap the **Notes** tab. You can enter text, draw, or create a recording. For more information on creating notes, see "Notes: Capturing Thoughts and Ideas," later in this chapter.
7. Tap **OK** to return to Calendar.

If you select Remind me in an appointment, your device will remind you according to the options set in the Sounds & Notifications control panel.

Using the Summary Screen

When you tap an appointment in Calendar, a summary screen is displayed. To change the appointment, tap **Edit**.




● Tap to change appointment.

Calendar: Scheduling Appointments and Meetings

Creating Meeting Requests

You can use Calendar to set up meetings with users of Outlook or Pocket Outlook. The meeting notices will be created automatically and sent either when you synchronize Inbox or when you connect to your e-mail server.

Indicate how you want meeting requests sent by tapping Tools and then Options.

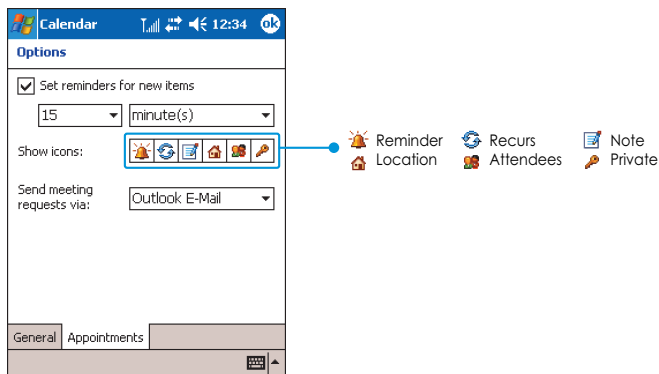

If you send and receive e-mail messages through ActiveSync, select ActiveSync.

To schedule a meeting

1. Create an appointment.

In the appointment details, hide the Input panel, and then tap **Attendees**.

Calendar 12:34

Subject: No subject

Location:

Starts: 6/7/05 12:00 PM

Ends: 6/7/05 1:00 PM

All Day: No

Occurs: Once

Reminder: Remind me
15 minute(s)

Categories: No categories...

Attendees: No attendees...

Status: Busy

Sensitivity: Normal

Appointment Notes

Edit

Tap to show Input Panel.

2. From the list of e-mail addresses in Contacts, select the meeting attendees.

Calendar 12:34


☐	Ale Comm	alecomm@...
☐	Bill Clinton	billclinton@...
☐	Casey Taxas	taxas@wes...
☐	Emily Kim	emilykim@...
☐	Esther Kim	estherkim...
☐	Grace Kim	gracekim@...
☐	Ihsan Muse	ihsanmuse...
☐	Imran Communic...	imran@com...
☐	Jason Park	jasonpark@...
☐	Jennifer Choi	jenniferchoi...
☐	Joe Park	joepark@co...
☐	Kim, Sw	manager@c...
☐	Kinzinho Kim	kinzinho@lu...
☐	Park Joe	joepark@co...
☐	Peter Park	peterpark@...

The meeting notice is created automatically and placed in the Outbox folder.


For more information on sending and receiving meeting requests, see Calendar Help and Inbox Help on your device.

Contacts: Tracking Friends and Colleagues

Contacts maintains a list of your friends and colleagues so that you can easily find the information you are looking for, whether you are at home or on the road. Using the infrared port of your device, you can quickly share Contacts information with users of Pocket PCs and other mobile devices.

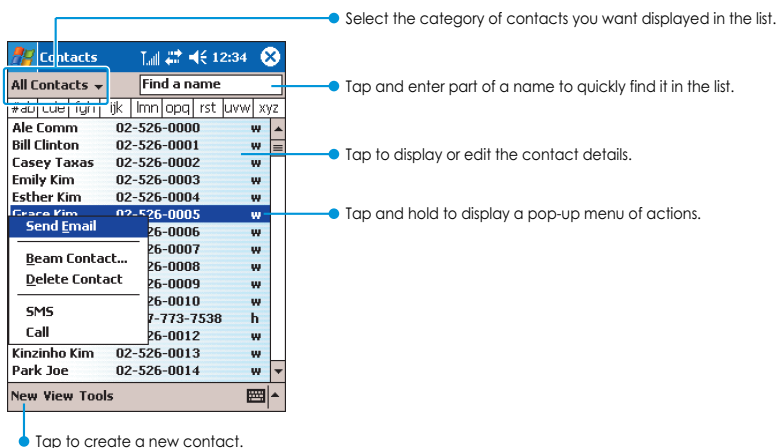

When you select landscape on the settings you will have a screen as follows :

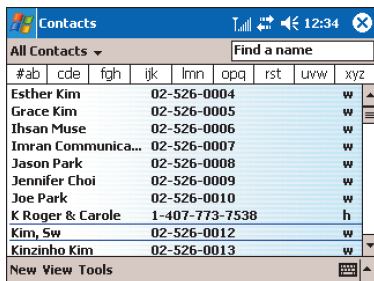

(If you want to select "landscape", > "Settings" > "System" tab > "Screen()" icon. For more detailed information, see the screen setting on chapter 5 Configuring Device.)

For description below, portrait screens are used.

To change the way information is displayed in the list, tap Tools, and then tap Options.

The screenshot shows the 'Options' dialog box for the 'Contacts' list in Microsoft Pocket Outlook. The dialog has a blue header bar with the title 'Contacts' and a status bar at the bottom with the text 'Edit'. The main content area is titled 'Options' and contains two sections: 'List view settings' and 'Country/Region settings'. In the 'List view settings' section, there are two checkboxes: 'Show ABC tabs' (checked) and 'Show contact names only' (unchecked). In the 'Country/Region settings' section, there is a text field for 'Area code' containing '425' and a dropdown menu for 'Country/Region' showing 'United States'.

Contacts 12:34 ok

Options

List view settings

☒ Show ABC tabs

☐ Show contact names only

Country/Region settings

Area code: 425


Country/Region: United States

Edit

Contacts: Tracking Friends and Colleagues


To create a contact

1. Tap **New**.

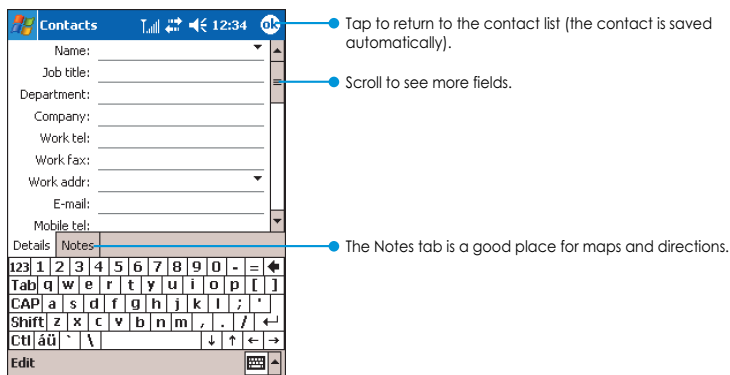

2. Using the Input panel, enter a name and other contact information. You will need to scroll down to see all available fields.

3. To assign the contact to a category, scroll to and tap **Categories** and select a category from the list. In the contact list, you can display contacts by category.

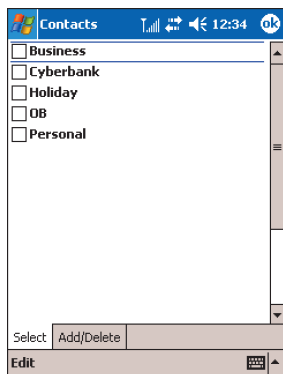


4. To add notes, tap the **Notes** tab. You can enter text, draw, or create a recording. For more information on creating notes, see "Notes: Capturing Thoughts and Ideas," later in this chapter.

5. Tap **OK** to return to the contact list.


Using the Summary Screen

When you tap a contact in the contact list, a summary screen is displayed.

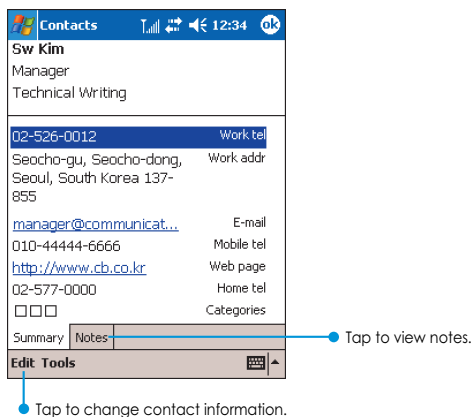


Tasks: Keeping a To-Do List

Use Tasks to keep track of what you have to do.

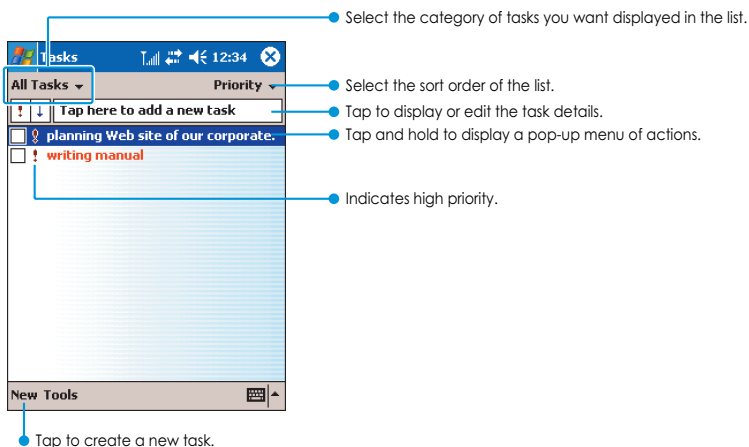

To change the way information is displayed in the list, tap **Tools**, and then tap **Options**.

When you select landscape on the settings you will have a screen as follows :

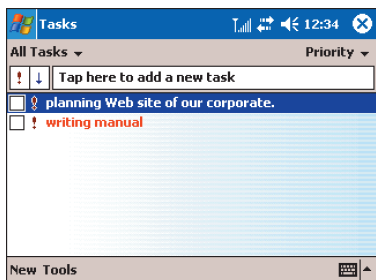


(If you want to select "landscape",  > "Settings" > "System" tab > "Screen()" icon. For more detailed information, see the screen setting on chapter 5 Configuring Device.)

For description below, portrait screens are used.

To create a task

1. Tap **New**.

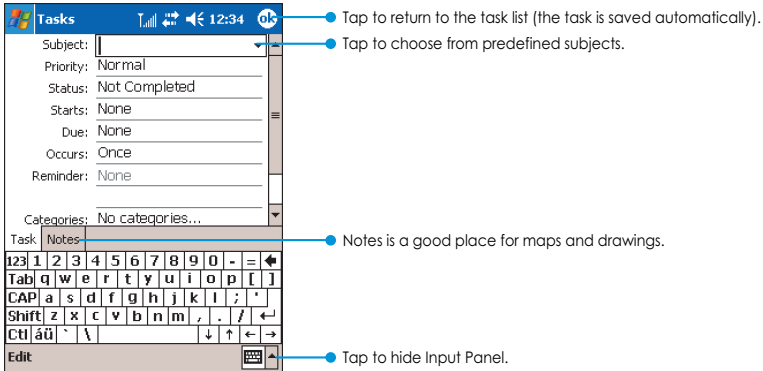


- Using the Input panel, enter a description.
- You can enter a start date and due date or enter other information by first tapping the corresponding field. If the Input panel is open, you will need to hide it to see all available fields.
- To assign the task to a category, tap **Categories** and select a category from the list. In the task list, you can display tasks by category.
- To add notes, tap the **Notes** tab. You can enter text, draw, or create a recording. For more information on creating notes, see "Notes: Capturing Thoughts and Ideas," later in this chapter.
- Tap **OK** to return to the task list.

To quickly create a task with only a subject, tap **Entry Bar** on the **Tools** menu, and then tap **Tap here to add a new task**.

Tasks: Keeping a To-Do List


Using the Summary Screen

When you tap a task in the task list, a summary screen is displayed. To change the task, tap **Edit**.

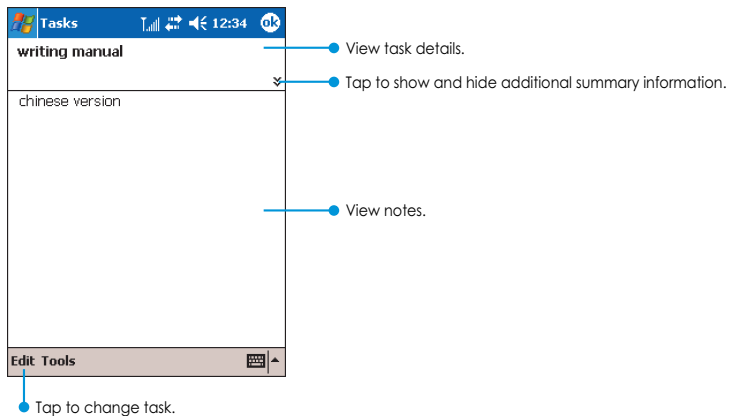


Notes: Capturing Thoughts and Ideas

Quickly capture thoughts, reminders, ideas, drawings, and phone numbers with Notes. You can create a written note or a recording. If a note is open when you create the recording, it will be included in the note as an icon. If the note list is displayed, it will be created as a stand-alone recording.

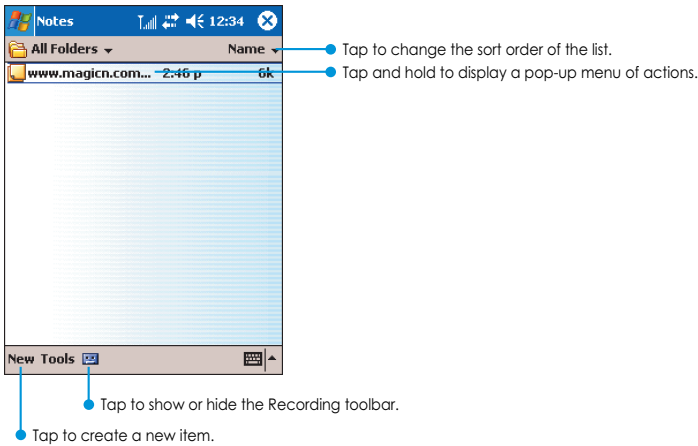

When you select landscape on the settings you will have a screen as follows :

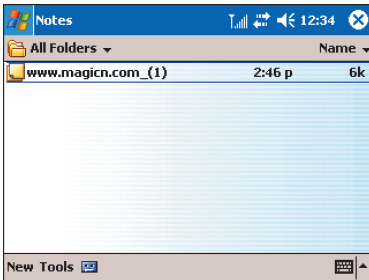


(If you want to select "landscape",  > "Settings" > "System" tab > "Screen()" icon. For more detailed information, see the screen setting on chapter 5 Configuring Device.)

For description below, portrait screens are used.


Notes: Capturing Thoughts and Ideas

To create a note

1. Tap **New**.

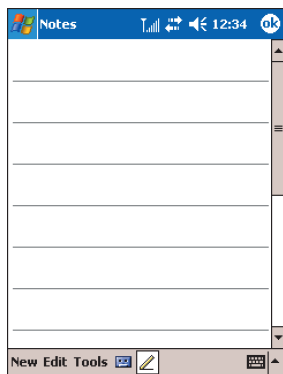

2. Create your note by writing, drawing, typing, or recording.

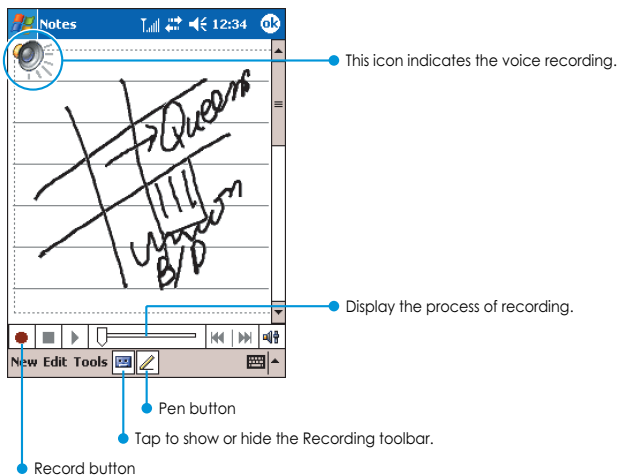

Create your note by writing, drawing, typing, or recording. For more information about using the Input panel, writing and drawing on the screen, and creating recordings, see chapter 3 Using the Input Panel.

Your device has Microsoft Pocket PC Software 2003 (Microsoft Pocket Word, Microsoft Pocket Excel, Windows Media Player for Pocket PC, Terminal Service Client, Pictures and Microsoft Messenger) preinstalled. This section provides an overview of these programs and enough information to get you started. For more detailed instructions on using a program, refer to online Help for that program.

In this chapter, you will learn about

- Microsoft Pocket Word
- Microsoft Pocket Excel
- Microsoft Windows Media Player
- Terminal Service Client
- Pictures
- Microsoft Messenger

09


Microsoft Programs

Microsoft Pocket Word


Microsoft Pocket Word works with Microsoft Word on your desktop PC to give you easy access to copies of your documents. You can create new documents on your device, or you can copy documents from your desktop PC. Synchronize documents between your desktop PC and your device regularly so that you have the most up-to-date content in both locations.

To use Pocket Word

1. On the **Start** menu, tap **Programs**, and then tap the Pocket Word icon.

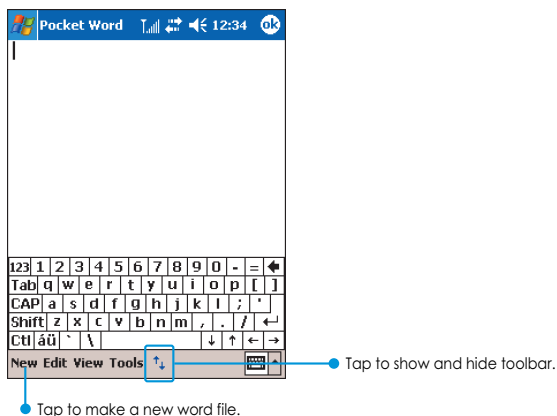

When you select landscape on the settings you will have a screen as follows :

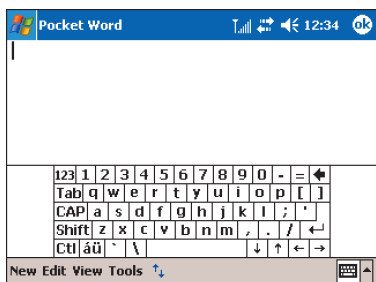

(If you want to select "landscape",  > "Settings" > "System" tab > "Screen()" icon. For more detailed information, see the screen setting on chapter 5 Configuring Device.)

For description below, portrait screens are used.

2. Tap **New** to open a blank document.

You can open only one document at a time; when you open a second document, you will be asked to save the first. You can save a document you create or edit in a variety of formats, including Pocket Word (.psw), Rich Text Format (.rtf), and Plain Text (.txt).

You can enter information in Pocket Word in four modes: typing, writing, drawing, and recording. Use the **View** menu to switch between modes. Each mode has its own toolbar, which you can show and hide by tapping the Show/Hide Toolbar button on the Command bar.

Typing Mode. Use the Input panel to enter typed text into the document with either the keyboard or the Letter Recognizer.

For more information on entering typed text, see chapter 3 Using Input Panel.

Writing Mode. In writing mode, use your stylus to write directly on the screen. Ruled lines are displayed as a guide, and the zoom magnification is greater than in typing mode to allow you to write more easily. For more information on writing and selecting writing, see chapter 3 Using Input Panel.


Written words are converted to graphics (metafiles) when a Pocket Word document is converted to a Word document on your desktop PC.

Drawing mode. In drawing mode, use your stylus to draw on the screen. Gridlines appear as a guide. When you lift your stylus off the screen after the first stroke, you will see a drawing box indicating the boundaries of the drawing. Every subsequent stroke within or touching the drawing box becomes part of the drawing. For more information on drawing and selecting drawings, see chapter 3 Using Input Panel.

Recording mode. Use recording mode to embed a recording into your document. Recordings are saved as WAV files.

Microsoft Pocket Word

To open a template rather than a blank document, select a template for new documents. On the **Tools** menu, tap **Options**, and then browse to select the default template. When you tap **New**, the template appears with appropriate text and formatting already provided.

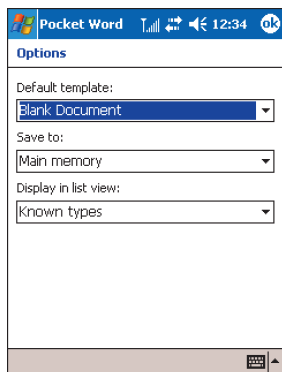

Tips for Working in Pocket Word


- You can change the zoom magnification by tapping **View** and then **Zoom**. Then select the percentage you want. Select a higher percentage to enter text and a lower one to see more of your document.
- If you are opening a Word document created on a desktop PC, select **Wrap to Window** on the **View** menu so that you can see the entire document.

Microsoft Pocket Excel


Microsoft Pocket Excel works with Microsoft Excel on your desktop PC to give you easy access to copies of your workbooks. You can create new workbooks on your device, or you can copy workbooks from your desktop PC to your device. Synchronize workbooks between your desktop PC and your device so that you have the most up-to-date content in both locations. Pocket Excel provides fundamental spreadsheet tools, such as formulas, functions, sorting, and filtering, which enable you to create simple workbooks, such as expense reports and mileage logs.

To use Pocket Excel

1. On the **Start** menu, tap **Programs**, and then tap the Pocket Excel icon.

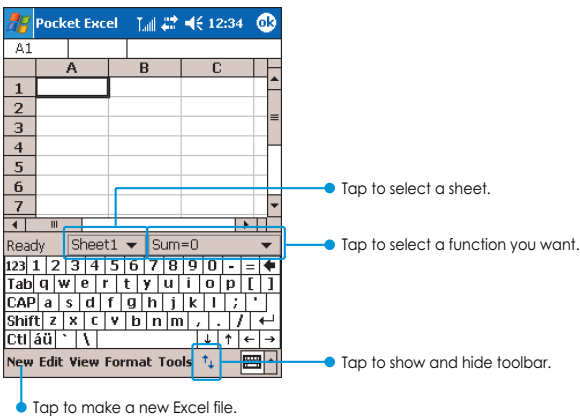

When you select landscape on the settings you will have a screen as follows :

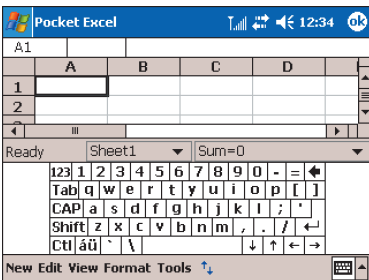

(If you want to select "landscape",  > "Settings" > "System" tab > "Screen()" icon. For more detailed information, see the screen setting on chapter 5 Configuring Device.)

For description below, portrait screens are used.

Microsoft Pocket Excel

2. Tap **New** to open a blank workbook.

To open a template rather than a blank workbook, select a template for new workbooks. On the **Tools** menu, tap **Options**, and then browse to select the default template. When you tap **New**, the template appears with appropriate text and formatting already provided.

You can open only one workbook at a time; when you open a second workbook, you will be asked to save the first. You can save a workbook you create or edit in a variety of formats, including Pocket Excel (.pxl) and Excel (.xls).

Tips for Working in Pocket Excel

- View in full-screen mode to see as much of your worksheet as possible. Tap **View** and then tap **Full Screen**.
- If your workbook contains sensitive information, you can protect it with a password. To do so, open the workbook, tap **Edit**, and then tap **Password**.
- Freeze panes on a worksheet. First, select the cell where you want to freeze panes. Tap **View** and then tap **Freeze Panes**. You might want to freeze the top and leftmost panes in a worksheet to keep row and column labels visible as you scroll through a sheet.
- Split panes to view different areas of a large worksheet. Tap **View** and then tap **Split**. Then drag the split bar to where you want it. To remove the split, tap **View** and then tap **Remove Split**.
- Show and hide rows and columns. To hide a row or column, select a cell in the row or column you want to hide. Tap **Format**, then tap **Row** or **Column**, and then tap **Hide**. To show a hidden row or column, tap **Tools**, then tap **Go To**, and then type a reference that is in the hidden row or column. Tap **Format**, then tap **Row** or **Column**, and then tap **Unhide**.


Microsoft Windows Media Player

Use Microsoft Windows Media Player for Pocket PC to listen to digital audio and video files, such as songs or movie clips.

Windows Media Player supports file formats, such as MP3, WMA, WMV, ASF and WMP.

To start Windows Media Player


On the Start menu, tap Programs, and then tap the Windows Media Player icon.

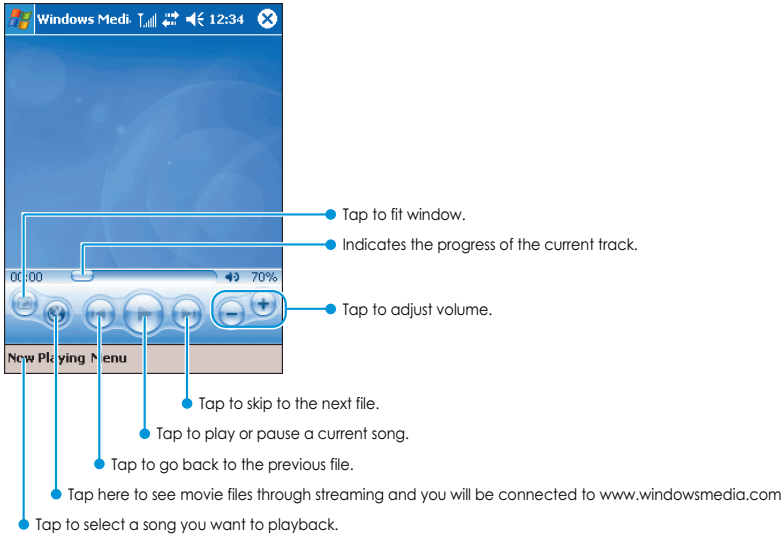

To play the music file repeatedly, on the Menu, Shuffle/Repeat and select Repeat.

Microsoft Windows Media Player

When you select landscape on the settings you will have a screen as follows :

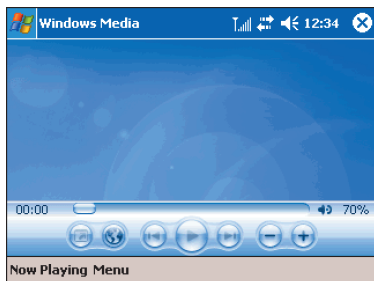


(If you want to select "landscape",  > "Settings" > "System" tab > "Screen()" icon. For more detailed information, see the screen setting on chapter 5 Configuring Device.)


For description below, portrait screens are used.

Connect to Windowsmedia.com

Tap  to connect to www.windowsmedia.com.

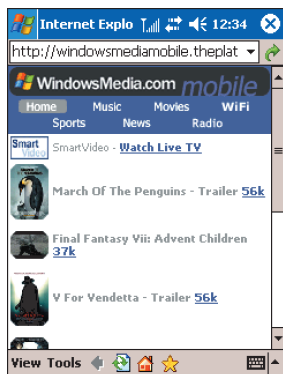


Select the file
you want.

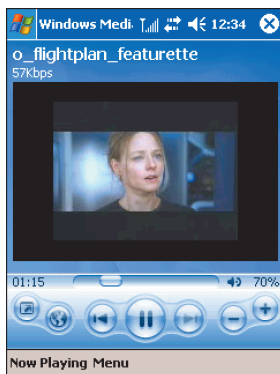


Playlist


Tap "Menu" > "Library" to have screen displayed as below.

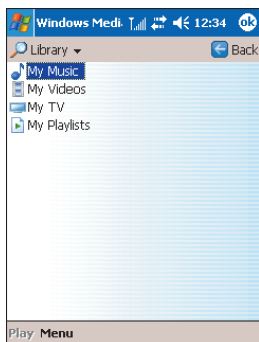

Tap "My Music"

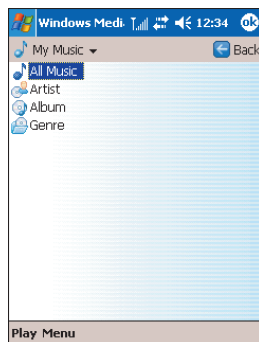


Tap "All Music".

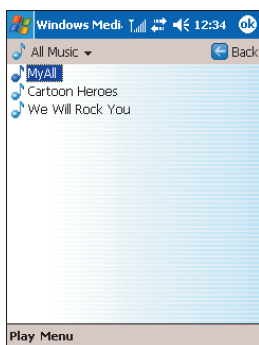

Tap Play.



Tap "Now Playing" to see what is played.

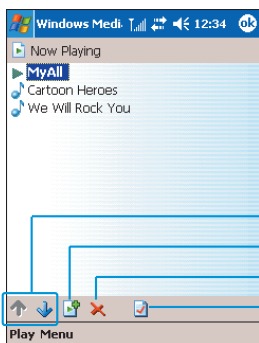

• Move files up or down

• Display all music files.

• Delete.



• This is the same as tapping "Properties" on the Men.

Microsoft Windows Media Player

Working with Audio Files on a SD Card


Because songs and audio files can use a lot of storage memory, you may store them on a SD memory card.

To get settings, select Options on the Menu.

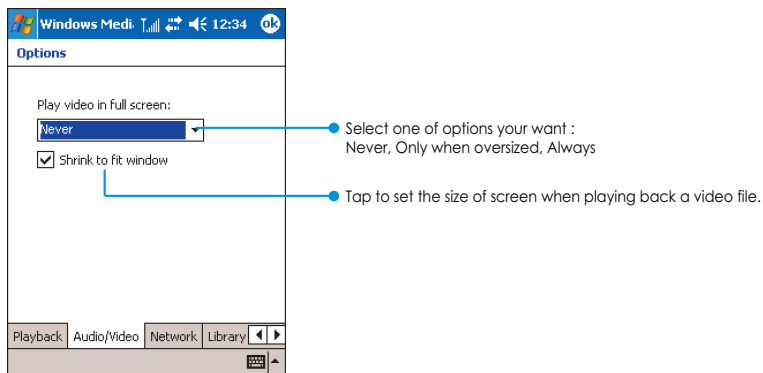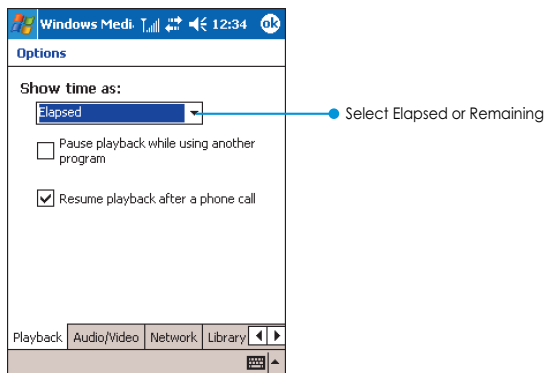

Assign functions to hardware buttons

On the Menu, tap Options > "Buttons" tab to get the settings of button mapping.

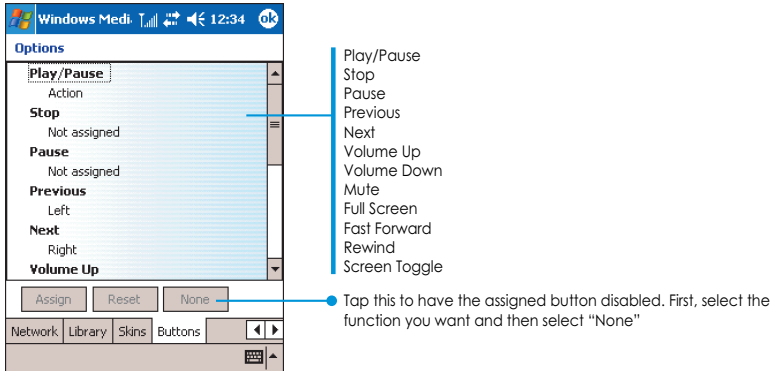


When you want to assign function to hardware button, first select one of functions on the screen and tap the "Assign" button then press the hardware button which you want to assign to. Some descriptions means as follows :

- "Action" means .
- "Up/Down/Left/Right" means pressing the corresponding part of .
- "Hold Left/Hold Right" means to press and hold the left or right part of .
- "Not assigned" means that the corresponding function is not yet assigned to any hardware button.
- "Unknown" mean the hardware button can not be assign to the corresponding function..

Terminal Services Client

Using the Terminal Services Client (TSC), you can log onto a desktop computer running Terminal Services (pre-Windows XP) or Remote Desktop (Windows XP and later) and use all of the programs available on that computer from your mobile device.

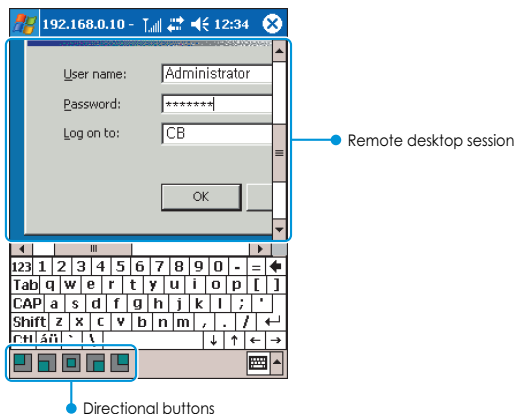


Transcriber is not supported as an input method during a Terminal Services session. You must use Keyboard, Block Recognizer, or Letter Recognizer.


Connecting and Using TSC

Before attempting a Terminal Services connection, you must have authorized access to a desktop or server that supports this service.


1. Launch TSC

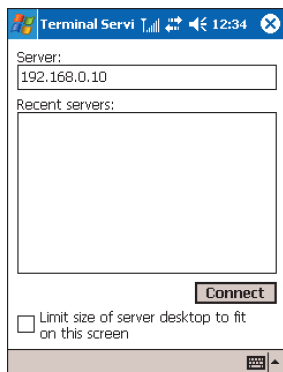

2. Enter the IP address or host name of a valid TS server. Checking **Limit size of server...** attempts to compress the remote desktop screen to minimize scrolling. Press **Connect** to start connection.
3. Typically you will be asked to login. Do so using one of the acceptable input methods.
4. If server desktop size is not in optimized mode, you can use one of the five  buttons to jump to the indicated positions on the screen.

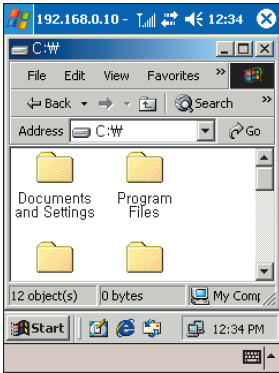


Otherwise, you can tap and hold on the screen to get those same options in a context menu form.

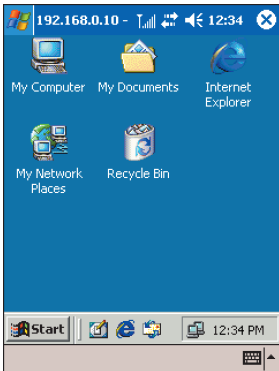


5. Use the remote server as if you were using it directly.

Pictures

Use Pictures to view JPEG pictures stored on your device or in a storage card, send pictures to others, view a slideshow of your pictures, or set a picture as the background on the Today screen. You can even set Pictures to launch itself when a digital camera storage card is inserted into your device!

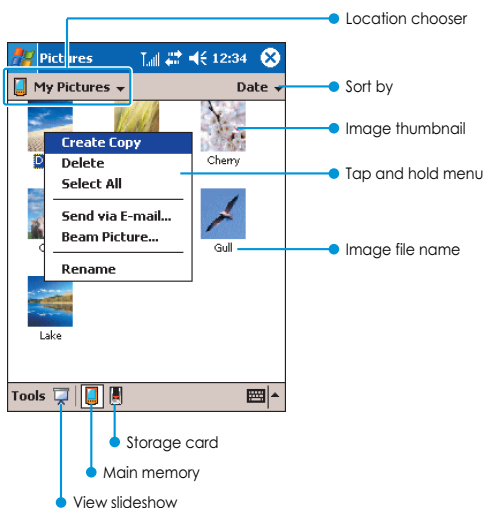


To begin, run **Pictures** and either choose to view main memory or storage card contents. By tapping and holding on an image, you can create a clone of that file, delete that file, select all files, send file via e-mail, beam picture, or rename the image.

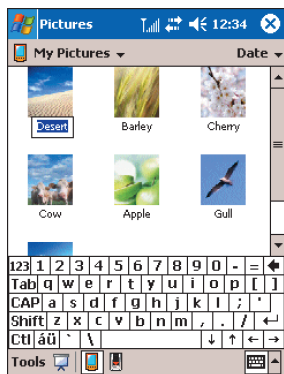


If you choose to **Rename**, type in the new file name.

Working with Images

Single clicking on a thumbnail presents a zoomed-in version of the picture.

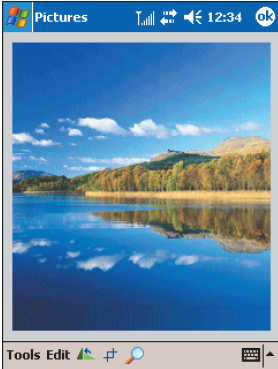

From here, you can rotate, crop, zoom, share, or change brightness and contrast levels of a picture.

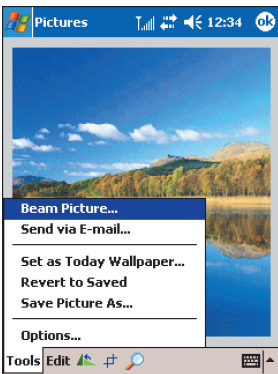

Pictures


Image Tools

Both **Beam Picture** and **Send via e-mail** allow you to share your pictures.


Set as Today Wallpaper... will set the loaded image as your Today screen background.



An improperly sized image will not appear without distortion on the Today screen.

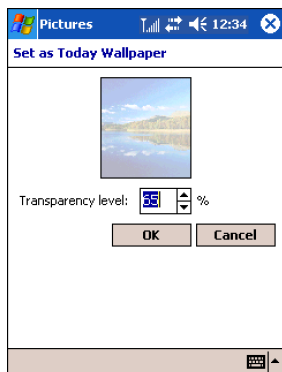

You will be able to either crop the image to fit to the Today screen (for large images) or fit to screen (for small images). You can also set the transparency level so that Today screen content is still legible.

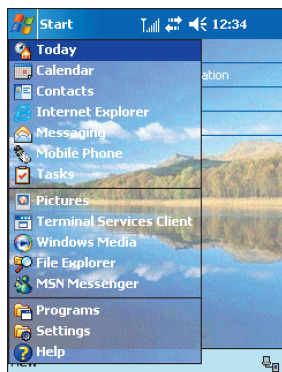

Above is the result of our Today screen.

Revert to Saved discards all changes since the last saving of the image and displays the original image.

Save Picture As... performs a save operation on the picture.



1. Choose the file name and destination for the image then select OK.
2. Image quality might decrease as a result of the save process, so you are reminded of this when saving.

Options: See below


Pictures

Editing Images

Picture allows you to rotate, crop, and adjust brightness and contrast levels of your pictures.

Rotating Images


1. Press the  button.

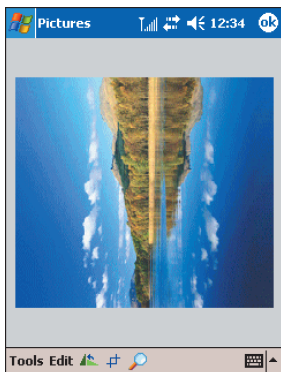

2. The picture will be rotated 90 degrees counter-clockwise.

Cropping Images

1. Press the  button.

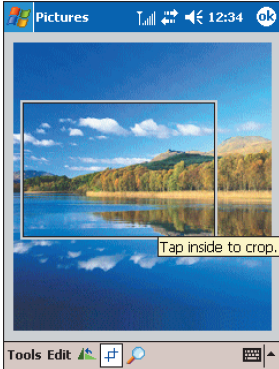

2. Draw a box with the stylus around the area you wish to crop and save.



3. Tap once inside the box you have drawn and your picture will be cropped.


Pictures

Zooming into Images



1. Press the  button to raise the Zoom panel. By default, your image is in **Best Fit** view mode when you open the image.
2. Pan around the red boxed area to focus a portion of the picture into view.
3. Press the  button to zoom in or the  button to zoom out of the area highlighted by the red box.
4. Press the  button to return to **Best Fit** view mode.


Undoing Changes

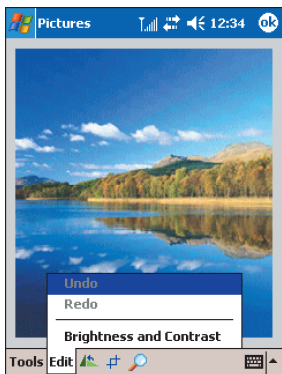

Press **Edit** -> **Undo** or **Edit** -> **Redo** to undo or redo the last change made.

Changing Image Brightness and Contrast

1. Select **Edit** -> **Brightness and Contrast**

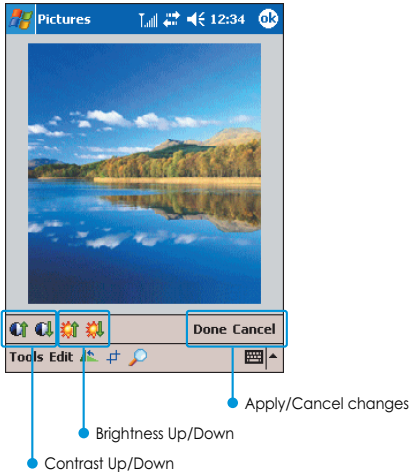


2. Select the **Brightness Up**, **Brightness Down**, **Contrast Up**, or **Contrast Down** button. With each change in brightness or contrast level, **Edit** -> **Undo** will undo that last change.
3. Press **Done** to save changes or **Cancel** to cancel changes.

Pictures

Viewing Images in a Slideshow

With the click of a button, you can create a slideshow of the images located in a folder to present to friends, family, or co-workers.


1. From the main **Pictures** window, press the  button.
2. Automatic playback in vertical viewing mode will begin.

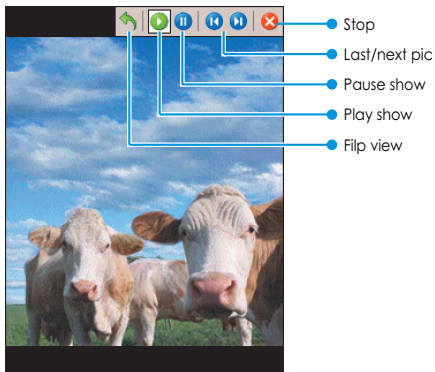


3. To manipulate the slideshow, single tap anywhere on the screen.
4. To change from vertical to horizontal viewing mode, press the **Flip view** button.

Configuring Pictures

Tools -> Options from either the main screen or while viewing an image allows you to set various properties about image display and slideshow playback.

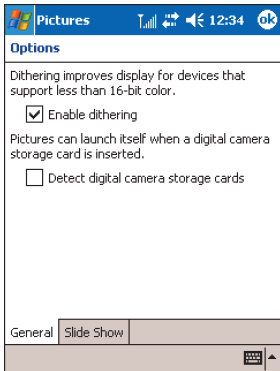

In the **General** tab, you can turn on dithering to improve image display for Pocket PCs with less than 16-bit color screens. A useful feature is that Pictures can launch itself when a digital camera storage card is inserted.

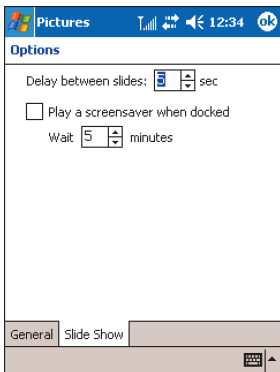

In the **Slide Show** tab, you can change the delay between slides or turn on the slideshow as a screensaver when your device has been idle a set amount of time.

MSN Messenger

MSN Messenger is an instant messaging program that lets you see who is online, send and receive instant messages and have instant message conversations with groups of contacts.

To use MSN Messenger, you must have a Microsoft Passport account. If you have a Hotmail® or MSN account, you already have a Passport. Once you have obtained a Microsoft Passport, you are ready to set up your account.




Sign up for a Microsoft Passport account at <http://www.passport.com> . Get a free Microsoft Hotmail e-mail address at <http://www.hotmail.com>.

To set up an account and sign in

1. On the **Start** menu, tap **Programs**, and then tap the MSN Messenger icon.
2. To sign in, tap the sign-in screen and enter your e-mail address and password.



● Tap here to sign in.

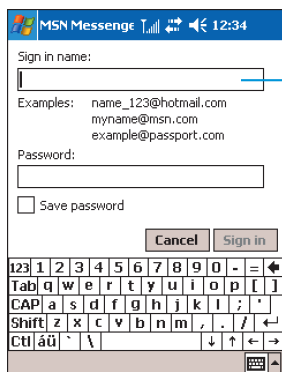

● The account you entered before displays.



If you already use MSN Messenger on your desktop PC, your contacts will show up on your device without being added again.

When you select landscape on the settings you will have a screen as follows :




(If you want to select "landscape",  > "Settings" > "System" tab > "Screen()" icon. For more detailed information, see the screen setting on chapter 5 Configuring Device.)

For description below, portrait screens are used.

MSN Messenger

Working with Contacts

The MSN Messenger window shows all of your messenger contacts at a glance, divided into Online and Not Online categories. From this view, while connected, you can chat, send e-mail messages, block the contact from chatting with you, or delete contacts from your list using the pop-up menu.

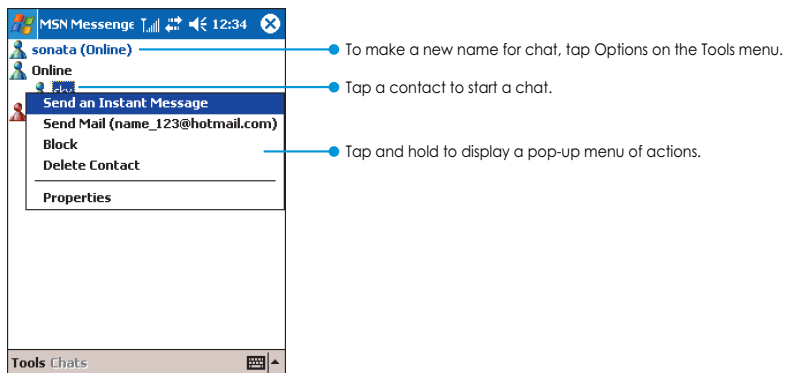


To see others online without being seen, on the **Tools** menu, tap **My Status**, and then tap **Appear Offline**.



If you block a contact, you will appear offline but will remain on the blocked contact's list. To unblock a contact, tap and hold the contact, then tap **Unblock** on the pop-up menu.

Chatting with Contacts

Tap a contact name to open a chat window.

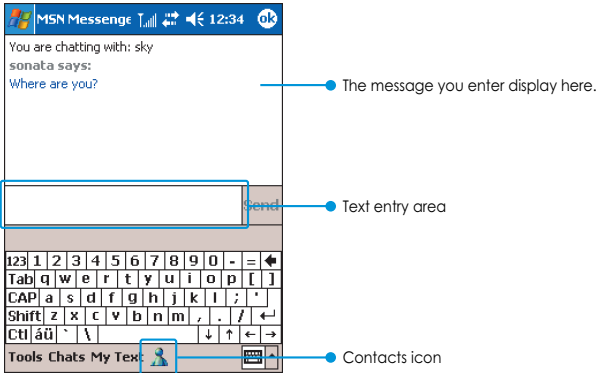

Enter your message in the text entry area at the bottom of the screen (or tap **My Text** to enter a preset message), and then tap **Send**. To invite another contact to a multi-user chat, on the **Tools** menu, tap **Invite**, and then tap the contact you want to invite.




To switch back to the main window without closing a chat, tap the **Contacts** button. To revert to your chat window, tap **Chats**, and then select the person with whom you were chatting.

MSN Messenger

Editing My Text Messages

Tap Edit My Text Messages on the Tools menu to enter a preset message.

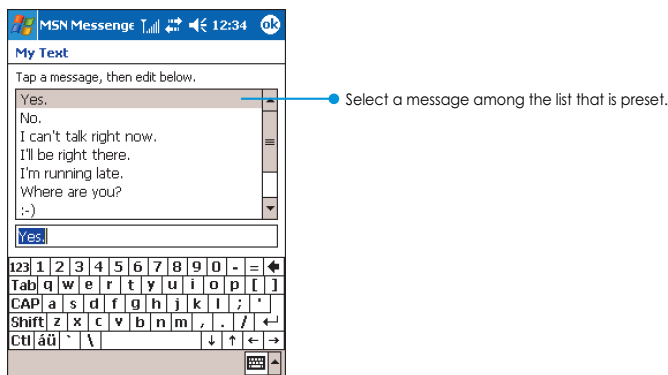

Adding a Contact

To add a new contact, tap **Add a Contact** on the **Tools** menu.



Set Options

On the **Tools** menu, tap **Options**. On the **Accounts** tab, enter your Passport account information.

MSN Messenger 12:34

My display name

Enter the name you want others to see:

gonata

Connection

☐ Run this program upon connection

General Privacy Accounts

123 1 2 3 4 5 6 7 8 9 0 = + *
Tab q w e r t y u i o p []
CAP a s d f g h j k l ; ' <
Shift z x c v b n m , . / \ <
Ctl á ü ' \

Enter your name for chat.

MSN Messenger 12:34

The following users have added you to their contact lists.

sky

☒ Alert me when I am added to a Passport contact list

Blocked Users...

General Privacy Accounts

MSN Messenger 12:34

☒ Enable MSN Messenger Service

Sign in name: example@passport.com

Password: *****

☐ Enable Exchange Instant Messaging

Sign in name:

Password:

Settings...

General Privacy Accounts

You can easily launch any programs you want such as CB Camera to snap a picture and save it CB Camcorder to record a video file and save it using the digital camera lens and CB Album to edit, save and manage the pictures you snap.

In this chapter, you will learn about


- CB Camera
- CB Camcorder
- CB Album
- CB Scanner

CB Camera

CB Camera helps you to snap a picture with the digital camera lens and save it.

You can open CB Camera program as follows :

- Start() button > Programs > "CB Camera()" icon.
- Select the shortcut to CB camera() on the CB Camcorder program.

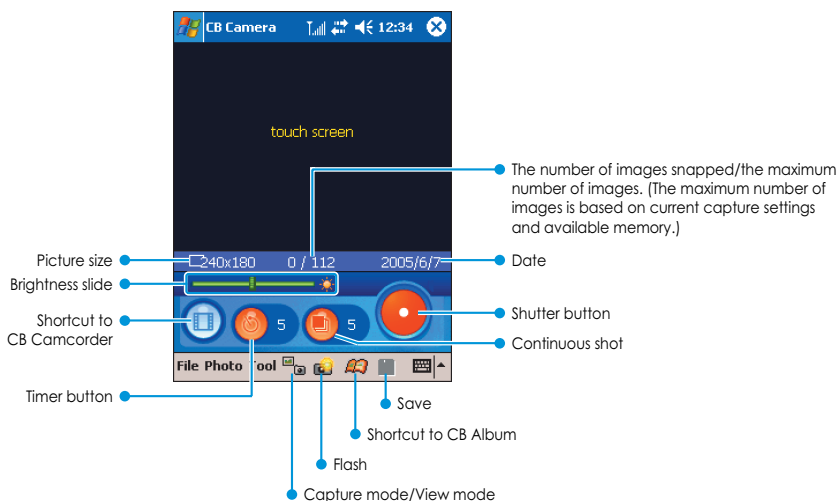

Tap the shutter button when the subject is framed.




Caring for your camera


- Do not drop your device, or it is subject to hard knocks.
- When you place your device on a flat surface, be sure that the lens is not facing down.
- Use quality cleaning products designed for use on photographic lenses to keep your camera lens dirt- and smudge-free. Do not use excessive force on the lenses when cleaning to prevent damage to the lens.

Save pictures

If you want to enter the View mode, tap "Capture mode/View mode()" icon and tap again to return to the Capture mode.

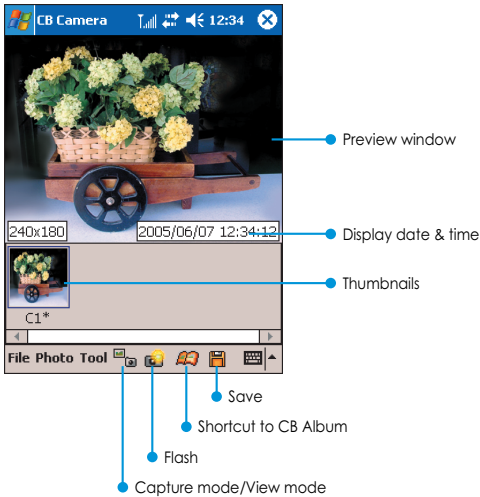

To save the pictures you snapped, tap "save()" icon on the command bar or select "save" or "save all" on the Photo menu.

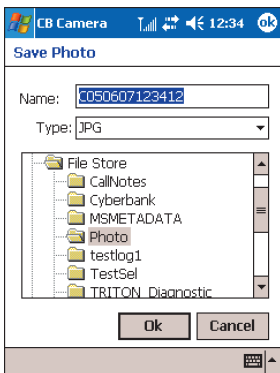

Tap OK to save. The default folder is File Store\Photo.


CB Camera

Shortcut to CB Album

Tap "Shortcut to CB Album(📷)" icon on the command bar to open the CB Album program which helps you to view the stored pictures.

Settings

Tap "Setting" on the Tools menu to set CB Camera program.

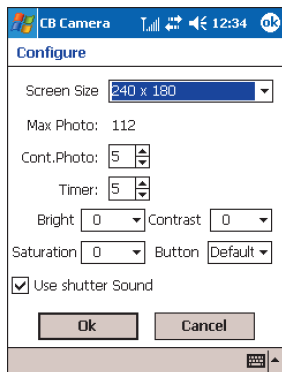


Tap OK to save on Screen size, the maximum number of images, Timer, Brightness, button and shutter sound.

CB Camcorder

CB Camcorder helps you to record a video file and save it using the digital camera lens. You can open CB Camcorder program as follows :

- Start() button > Programs > "CB Camcorder()" icon.
- Select the shortcut to CB Camcorder() on the CB Camera program.

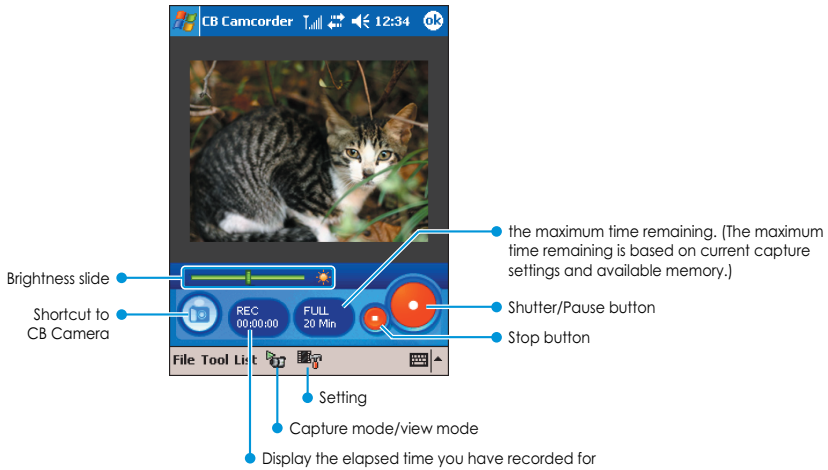


Tap the shutter button when the subject is framed.

CB Camcorder


Playback

Tap "Capture mode/View mode (📷)" icon to return to Capture mode. Select the file you want on the List menu to playback.

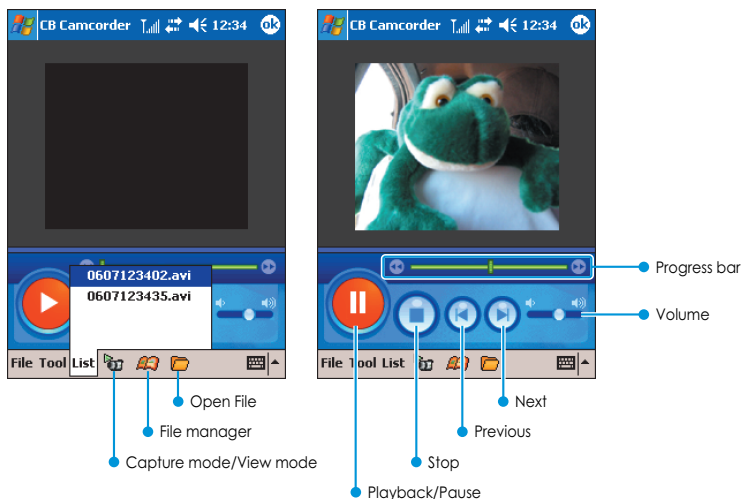


Make a new album


The file you have recorded on the Capture mode will be saved in "File Store\video" folder. Tap "File Manager" on the File menu or tap "File Manager (📁)" icon on the command bar to make a new album.

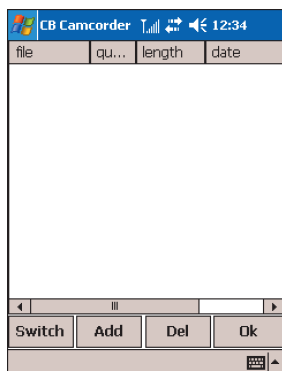


Tap "Add" to select the items you want to add.

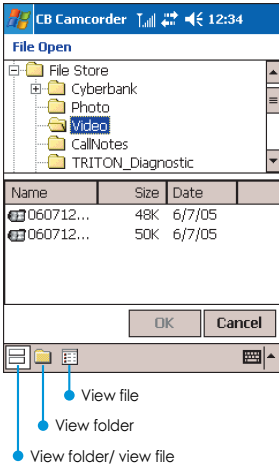

After selecting the file you want, tap OK.

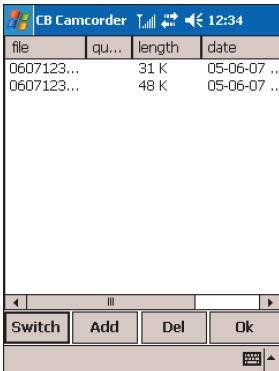

Tap "switch" to switch between both mode.

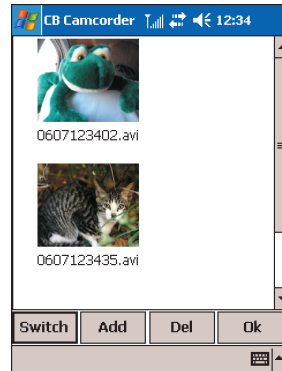

Tap OK to save the video album.


Tap the playback() button to playback all video files saved on the video album.

CB Camcorder

Open video file

Select the files you want on "File Store\video" folder to open among the existing video file a file which is not saved on the video album.

Tap "Open File()" icon on the View mode to open a file you want.

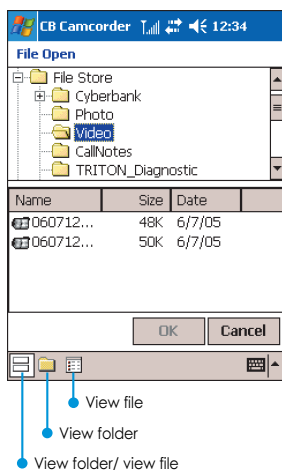


Select a file you want and tap OK to return to normal.

Tap the playback() button to playback the file you have selected.

Options

Tap "Options()" icon in the Capture mode to optimize CB Camcorder program.

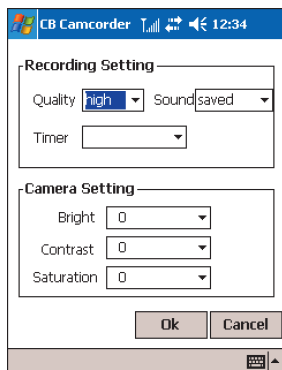


CB Album

CB Album helps you to edit, save and manage the pictures you snap using the digital Camera lens.

You can open CB Album program as follows :


- Start() button > Programs > "CB Album()" icon.
- Select the shortcut to CB Album() icon on the CB Camera program.

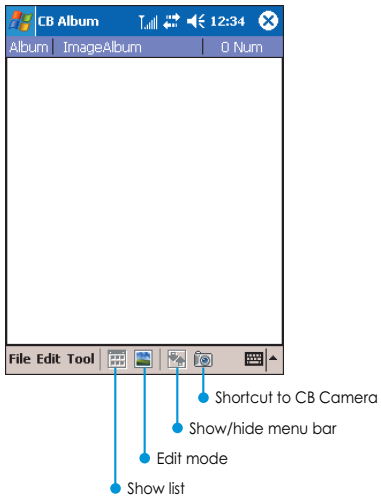

CB Album

Open the Photo folder

Tap "Open Folder" on the File menu to open pictures you have snapped on the CB Camera.

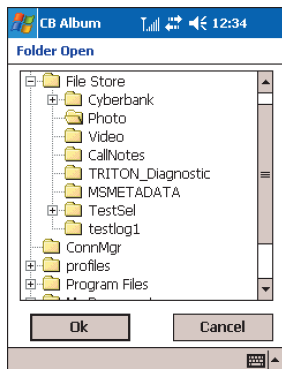


Select the folder(File Store\Photo) and tap OK.



• Edit mode
• Show list

Edit File

Tap "Edit mode()" icon on the command bar.

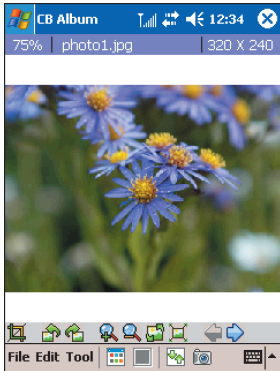


-  Cut
-  Rotate
-  Zoom
-  Original image
-  Fit Screen
-  Previous/Next pic

After editing each image file, tap "Show list()" icon to return to list.

Make a new album

If you want to make a new album, select "Add Album" on the File menu. (If you want to use the existing album, select "Add Album" on the File menu.)

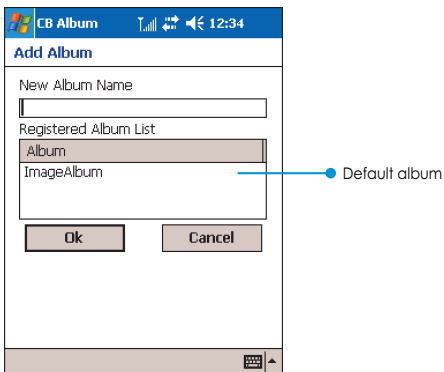


After entering a new name for an album and tap OK.


CB Album

Open the existing album


Tap "Open Album" to open the existing album.

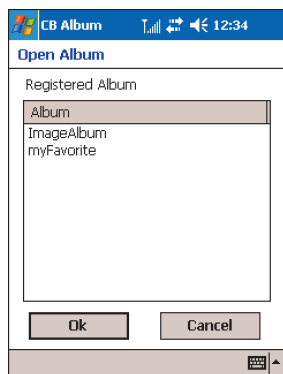

Select the album you want and tap OK.

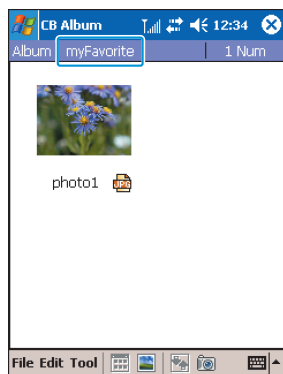

Tap the album name
to open the album
you want.

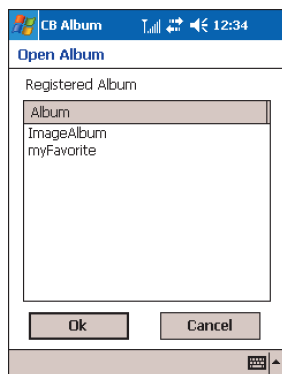


Slideshow

Tap “Slideshow” on the Tool menu to have the saved list display continuously. You can choose whether the slideshow automatically displays the next picture in sequence after short delay which is set on options.

Options

Tap “Options” on the Tools menu to set options.

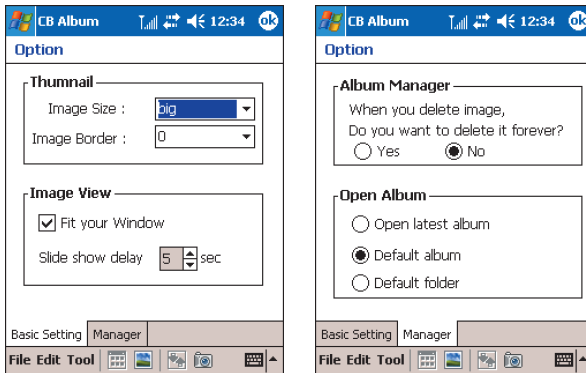


CB Scanner


CB Scanner helps you to scan and save bar code.

You can open CB Scanner program as follows :


- Start() button > Programs > "CB Scanner()" icon.

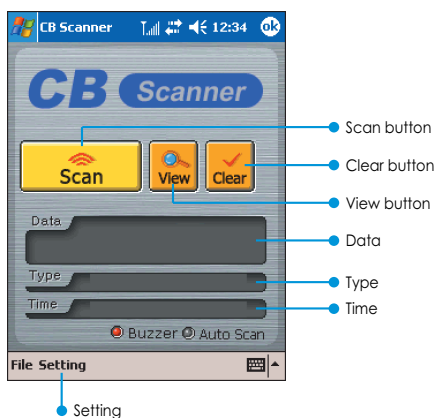

Aim the scanner lens at the bar code and press the scanner button on both side of your device or the scanner button on the CB Scanner program.

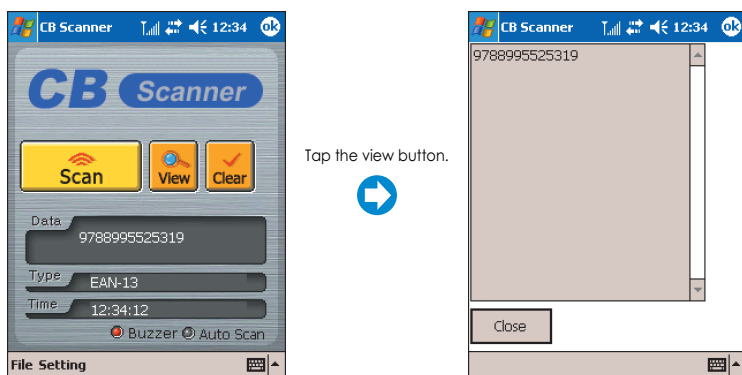


Tap Setting to see the scanning type which is registered on your device.

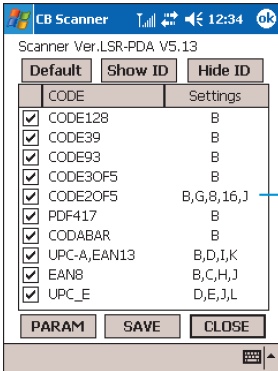

These are the registered scanning type on your device.

When you need to see the parameter for each scanning type, select the scanning type first and tap the PARAM button.

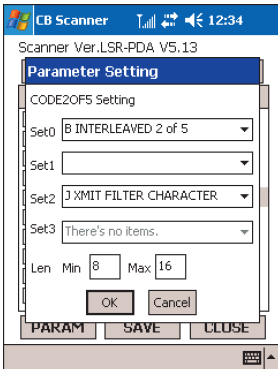

A light blue notepad with a white tab on the left containing the word 'MEMO' in orange, green, blue, and dark blue blocks. The notepad has horizontal dashed lines for writing. A white staircase graphic is on the left side of the notepad.

11

Support & Service

Support & Service

Service

For diagnostic instructions and other service information, contact one of the technical support numbers. Please do not ship your device for service without first contacting a CYBERBANK office. If your device qualifies for in-warranty service, be ready to supply a dated proof of purchase.

Before you contact us for help, be sure to

1. Review the manuals whenever possible.
2. Have the following information about the product:
 - model number
 - serial number
 - purchase date
3. Have your product ready to use. The support personnel may ask you to run tests and other operations.
4. Organize your question or problem. The more detailed information you can provide, the quicker the support personnel can help you.

Appendix A

Hardware Specifications

CB-0880NZ

Items		Descriptions
OS		Windows Mobile 2003 (Premium Edition)
Processor	PDA	PXA255 - 400MHz (Cotulla)
	CDMA	MSM5000, CDMA2000 1xRTT
Memory	ROM	32 Mbyte NOR Flash, 128 Mbyte NAND Flash
	RAM	64Mbyte
Screen	Resolutions	240 X 320
	Color	3.5" Transreflective TFT LCD 65K Color
Battery	Main	Li-Ion 1800mAh
	Backup	Li-Polymer 110mAh
Time	Stand-by	80~200 hours
	PDA	12 hours(Phone stand-by mode)
I/O Connector	USB	Host/Client
	CF	1 slot
	SD/MMC	1 slot
	IrDA	115Kbps
Sound		Stereo Ear-Microphone Jack(4pin) Internal Mono Speaker
Camera		0.3 M pixel CMOS
Cradle		Input : DC12V, 1.2A Main & 2'nd Battery Charging : max 4hours Time for charging the backup battery : max 3 hours
Operating Conditions		Temperature : -20 ~ 50°C Humidity : 0 ~ 90%
Size (mm)		159mm x 73mm x 21.8mm
Weight (g)		305g

CB-1880NZ

Items		Descriptions
OS		Windows Mobile 2003 (Premium Edition)
Processor	PDA	PXA255 - 400MHz (Cotulla)
	CDMA	MSM5000, CDMA2000 1xRTT
Memory	ROM	32 Mbyte NOR Flash, 128 Mbyte NAND Flash
	RAM	64Mbyte
Screen	Resolutions	240 X 320
	Color	3.5" Transreflective TFT LCD 65K Color
Battery	Main	Li-Ion 1800mAh
	Backup	Li-Polymer 110mAh
Time	Stand-by	80~200 hours
	PDA	12 hours(Phone stand-by mode)
I/O Connector	USB	Host/Client
	SD/MMC	1 slot
	IrDA	115Kbps
Sound		Stereo Ear-Microphone Jack(4pin) Internal Mono Speaker
Camera		0.3 M pixel CMOS
Barcode Scanner		2D Barcode Laser Diode type
WLAN		802.11b
Cradle		Input : DC12V, 1.2A Main & 2'nd Battery Charging : max 4hours Time for charging the backup battery : max 3 hours
Operating Conditions		Temperature : -20 ~ 50°C Humidity : 0 ~ 90%
Size (mm)		159mm x 73mm x 21.8(38D)mm
Weight (g)		320g

Appendix **B**

Warranty

Important: This is your hardware product warranty statement. Read it carefully. Warranty terms may be different in your country. If so, your authorized dealer or sales and service office can give you details.

One year limited hardware warranty

CYBERBANK warrants this hardware product against defects in material and workmanship for a period of one year from receipt by the original end-user purchaser. If CYBERBANK receives notice of the above-defined defects during the warranty period, CYBERBANK will either, at its option, repair or replace products that prove to be defective. Should CYBERBANK be unable to repair or replace the product within a reasonable amount of time, the customer's alternate exclusive remedy shall be a refund of the purchase price upon return of the product.

Limitation of warranty

The above warranty shall not apply to defects resulting from: misuse; unauthorized modification; opening for any reason; operation or storage outside the environmental specifications for the product; in-transit damage; improper maintenance; or defect resulting from use of non-CYBERBANK software, accessories, media, supplies, consumables, or such items not designed for use with the product.

CYBERBANK makes no other express warranty, whether written or oral, with respect to this product.

Any implied warranty of merchantability or fitness for a particular purpose is limited to the one-year duration of this written warranty.

Some states, provinces, or countries do not allow limitations on how long an implied warranty lasts, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from state to state, province to province, or country to country.

CYBERBANK Software Product License Agreement and CYBERBANK Software Product Limited Warranty

This CYBERBANK product contains preinstalled software programs. Please read the CYBERBANK Software Product License Agreement before proceeding.

Important: Carefully read this License Agreement and the Limited Warranty statement before operating the equipment. The rights to the software are licensed, not sold.

CYBERBANK or its licensors continue to own all intellectual property rights to the software, and you will be granted certain rights to use the software upon your acceptance of this license. Rights in the software are offered only on the condition that you agree to all terms and conditions of the License Agreement. Operating the equipment indicates your acceptance of these terms and conditions. If you do not agree to the terms and conditions of the License Agreement, return the complete package for a full refund now.

CYBERBANK Software Product License Agreement

The CYBERBANK Software Product License Agreement shall govern the use of all software that is provided to you, the customer, as part of this CYBERBANK product with the exception of Microsoft Software. Microsoft Products are licensed to you under the Microsoft End User License Agreement (EULA) contained in the Microsoft documentation. Any third-party software supplier's warranty terms that may be found online, or in any documentation or other materials contained in the product packaging, shall govern the use of that third-party software.

Use

You may only use the software on a single computer. You may not reverse, assemble, or decompile the software.

Copies and adaptations

You may make copies or adaptations of the software (a) for archival purposes, or (b) when copying or adaptation is an essential step in the use of the software with a computer so long as the copies and adaptations are used in no other manner.

You have no other rights to copy unless you acquire an appropriate license to reproduce which is available from CYBERBANK for some software.

You agree that CYBERBANK provides no warranty, free installation, or free training for any copies or adaptations made by you.

All copies and adaptations of the software must bear the copyright notice(s) contained in or on the original.

Ownership

You agree that you do not have any title to or ownership of the software, other than ownership of the physical media. You acknowledge and agree that the software is copyrighted and protected under the copyright laws.

You acknowledge and agree that the software or part thereof may have been developed by a third-party software supplier named in the copyright notice(s) included with the software, who shall be authorized to hold you responsible for any copyright infringement or violation of this or their own License Agreement.

Warranty

Transfer of rights in software

You may transfer rights to the software to a third party only as part of the transfer of all your rights and only if you obtain the prior agreement of the third party to be bound by the terms of this License Agreement. Upon such a transfer, you agree that your rights to the software are terminated and that you will either destroy all your copies and adaptations or deliver them to the third party. Transfer to a U.S. government department or agency or to a prime or lower tier contractor in connection with a U.S. government contract shall be made only upon prior written agreement to terms required by CYBERBANK.

Sublicensing and distribution

You may not lease, sublicense the software, or distribute copies or adaptations of the software to the public in physical media, by telecommunication or at all without the prior written consent of CYBERBANK.

Termination

CYBERBANK may terminate this software license for failure to comply with any of these terms, provided CYBERBANK has requested you to cure the failure and you have failed to do so within thirty (30) days of such notice.

Updates and upgrades

You agree that the software does not include updates and upgrades that may be available from CYBERBANK under a separate support agreement.

Handwriting practice area with horizontal lines and a staircase graphic on the left side.

A blank, lined page from a notebook. The page is yellowed and shows signs of wear. It features a vertical margin on the left side and horizontal ruling lines across the page. The page is divided into several sections by vertical lines, creating a stepped effect. The top section is the widest, followed by a narrower section, then a wider section, and finally a narrow section at the bottom. The page is otherwise empty of text or markings.